


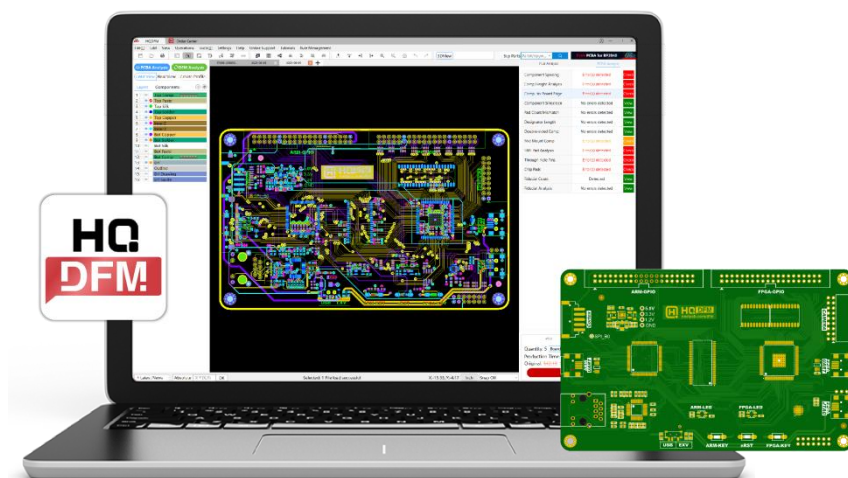

PCB Design Analysis Tool

User Manual

By  **NextPCB**



Download for free at www.nextpcb.com/dfm

Shenzhen Huaqiu Electronics Co., Ltd (深圳华秋电子有限公司)

5F, Building 1, New Generation Industrial Park,

Futian District, Shenzhen, China

Tel: +86 755 8364 3663

Email: support@nextpcb.com

Websites: www.nextpcb.com | www.hqonline.com

Contents

1. HQDFM	1
1.1. What is DFM?	1
1.2. Why DFM and DFA Matter?	2
1.3. PCB DFM and PCBA DFA	3
1.4. What is HQDFM?	3
1.5. Installing HQDFM International	7
1.6. Supported File Formats	10
1.7. Keyboard Shortcuts	11
1.8. Mouse Controls	13
2. HQDFM Interface	14
2.1. Main Interface	14
2.2. Menu Bar	14
2.3. Toolbar	37
2.4. Importing PCB Production Files	38
2.5. Layer Navigation	40
2.6. Ordering PCBs from NextPCB	43
3. DFM Analysis	45
3.2. Analysis Severity Levels	45
3.3. Types of DFM Errors	46
3.4. How to perform DFM Analysis in HQDFM	47
3.5. DFM Analysis Examples	49
4. Design for Assembly (DFA) Analysis	56
4.1. What is DFA?	56
4.2. DFA File Requirements	56
4.3. How to perform DFA Analysis in HQDFM	59
4.4. Centroid File	60
4.5. Bill of Materials (BOM) file	63
4.6. Parts Matching	66
4.7. Component Categorization	71
4.8. Set Direction of Travel	72
4.9. DFA Analysis Examples	73
5. Tools	79
5.1. Impedance Calculator	79
5.2. Compare Gerber Files Tool	79
5.3. Compare BOM Files	82
5.4. Compare IPC Nets	83
5.5. Calculate Copper Area	84
5.6. Count Solder Pads	85
5.7. Find Component	86
5.8. Panelization Tool	86
5.9. Routing Distance Calculator	88
5.10. Utilization Rate Calculator	89

1. HQDFM

1.1. What is DFM?

Design for Manufacture (DFM) is a methodology that **integrates manufacturing considerations at the product design stage**. The goal is to ensure the product can be **efficiently manufactured** and **optimized for cost and quality**.

Many manufacturing challenges can be resolved or minimized with adequate insight into the intended production methods and the impact of certain design choices. Designing a product involves a tight balance between the design specification — including aesthetics, functionality and usability — and manufacturability, which ties into cost and can have a significant impact on product quality and wastage.

For electronics assemblies and PCB design, **DFM equates to verifying the manufacturability and assembly of a PCB and its components**, which can be further divided into PCB DFM and PCBA DFA for practical purposes. Through experience and training, design engineers can vastly improve efficiency by reducing prototype cycles when developing a new product. As much as **80% of production defects are caused by non-standard or poor design** while **60% of a product's total cost is determined in the design stage**, highlighting DFM's role in product success.

1.1.1. DFM Rule of 10

The DFM Rule of 10 or 10x rule highlights how the cost of fixing a design error increases exponentially the later it is caught. This can be applied to the entire product development cycle but is also apparent during a single production run.

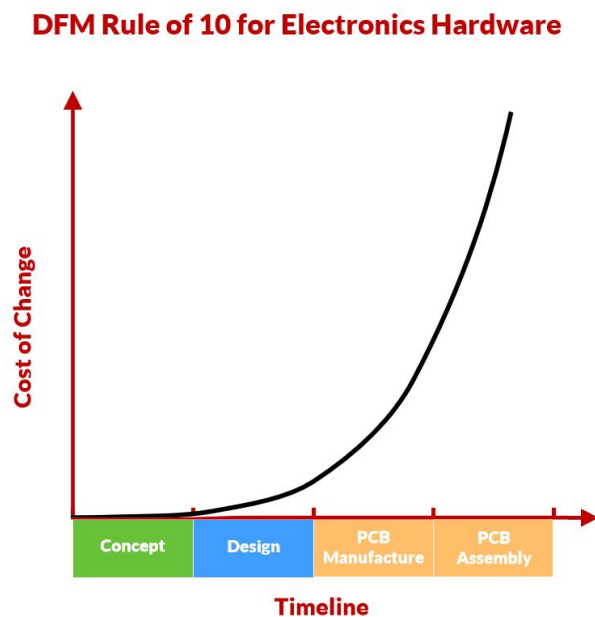


Figure 1-1: Chart illustrating the exponential increase in costs when issues are detected later in development

1.2. Why DFM and DFA Matter?

Despite the advanced precision of modern automated assembly systems, enterprises are still prone to encountering sub-optimal product quality and consistency. While material defects and assembly errors contribute, many issues originate from the PCB design.

DFM (Design for Manufacturability) delivers significant advantages beyond just ensuring manufacturability. By aligning design intent with manufacturing capabilities, developers gain substantial benefits—including **cost reduction, enhanced efficiency, and greater product reliability** through proactive issue prevention.

1.2.1. Optimizing for production and efficiency

A rigorous DFM inspection protocol, combined with state-of-the-art equipment, is indispensable for ensuring seamless production and end-product reliability.

If the product design does not align with the company's production capabilities and exhibits poor manufacturability, it will require greater investment of manpower, materials, and finances to achieve the desired outcomes. This can lead to delayed deliveries or even the risk of losing market share.

1.2.2. Streamlining New Product Development

When developing new products, neglecting to establish proper DFM specifications can lead to assembly issues that are only discovered in the later stages of development or even during mass production. Attempting to correct problems at this late stage will undoubtedly increase development costs and prolong production cycles.

Therefore, in addition to product functionality, integrating DFM principles is crucial throughout the new product development process. By doing so, enterprises can identify and address manufacturability challenges upfront, mitigating the risk of costly and time-consuming revisions down the line.

1.2.3. Optimizing High Density Designs

The electronics industry's demand for smaller, more powerful devices is driving PCB designs towards ever-increasing density. Circuits are being pushed to feature finer and more closely-spaced traces, smaller hole diameters, advanced via technologies, and more complex structures.

This trend towards higher-density PCB designs amplifies the need for precise, comprehensive Design for Manufacturability (DFM) analysis techniques and tools to achieve first-pass success, reduce costs, and accelerate time-to-market.

1.2.4. Standardizing Documentation

Improper design or unclear fabrication guidelines can create significant challenges on the factory floor. When produced boards fail to meet requirements or need to be scrapped, the costs of rectifying these issues and the resulting impact on the production cycle can be substantial. DFM helps by standardizing technical documentation and aligning intent, particularly when it comes to PCB fabrication data, since PCB fabrication data is represented graphically which can be prone to misinterpretation.

1.2.5. Ensuring Compatibility with Automated Assembly

Surface Mount Technology (SMT) is characterized by high automation and high-speed manufacturing, relying heavily on specialized equipment. Subsequently, they have specific requirements regarding the size, shape, reference points, and component layout of the PCBs and panel to ensure compatibility. DFM can verify the panel design including checking the presence of fiducial markers and tooling margins.

1.2.6. Minimizing Non-Production Related Design Errors

Design flaws that do not directly impact manufacturability are often addressed under DFM. This is because design mistakes, even those unrelated to production, can be fatal - impacting entire batches and potentially being mistaken for manufacturing issues. Expanding DFM's scope helps mitigate these broader design risks and improve reliability in the long-term.

1.3. PCB DFM and PCBA DFA

Since PCB fabrication and assembly are often undertaken by separate parties, even within the same company, it makes sense to align manufacturing considerations for a product with the priorities and responsibilities of the respective party i.e. bare board (PCB DFM) for fabricators, and assembly optimization (PCBA DFA) for CM partners. As such, the term DFM may mean different things to different parties.

When PCB fabricators mention DFM review, they often refer to the Design for manufacturability analysis of **bare printed circuit board designs**. However, for contract manufacturers and assembly houses, DFM likely refers to PCBA Design for Assembly, that is, analyzing how the circuit board and components match and how the design may impact assembly.

In **HQDFM**, DFM analysis is distinctively divided into **PCB DFM** and **PCB assembly DFA**, both of which are essential to the successful production of a product. In future discussions, the term DFM refers to both PCB DFM and PCBA DFA unless otherwise mentioned.

Although most PCB fabrication and assembly providers also perform DFM/DFA review, their depth and reliability vary considerably. Typically, suppliers conduct these reviews out of necessity—primarily to verify that designs meet their manufacturing capabilities and contain sufficient documentation. Advanced suppliers may provide more thorough analyses, but since DFM/DFA checks usually occur after order submission, an in-depth review may introduce significant delays for marginal benefit. As a result, suppliers typically flag only the most critical errors.

1.4. What is HQDFM?

HQDFM is a free PCB DFM analysis tool developed by NextPCB for viewing PCB manufacturing files and performing quick DFM and DFA analysis. Covering over 150 design for manufacture and assembly issues, HQDFM provides actionable insights to help users enhance reliability, reduce costs and streamline production.

HQDFM takes a comprehensive approach, considering PCB manufacturability, assembly, and testing throughout the product life-cycle. By closely integrating design and manufacturing, HQDFM maximizes the chances of first-time success as products move from design to production.

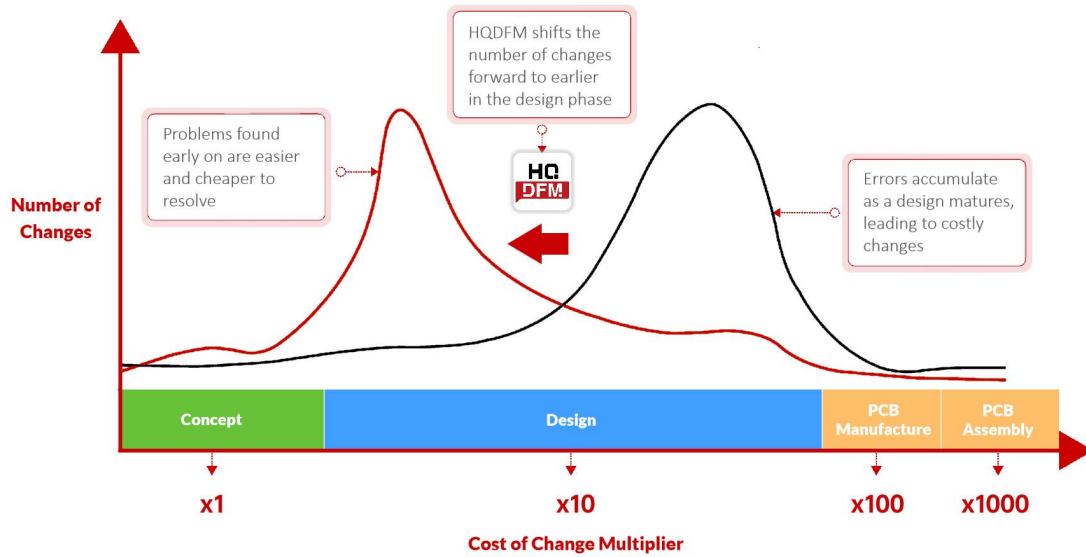


Figure 1-2: HQDFM impact on reducing development costs by detecting issues earlier in the design phase.

HQDFM also provides a suite of tools for PCB designers, contract manufacturers and PCB fabrication houses to extract useful information from manufacturing data.

1.4.1. HQDFM Key Features

Gerber Viewer: Dedicated workspace for displaying PCB graphical data including navigating individual layers with zoom, pan and snap options, dimensional analysis and various viewing modes such as realistic and CAM modes.

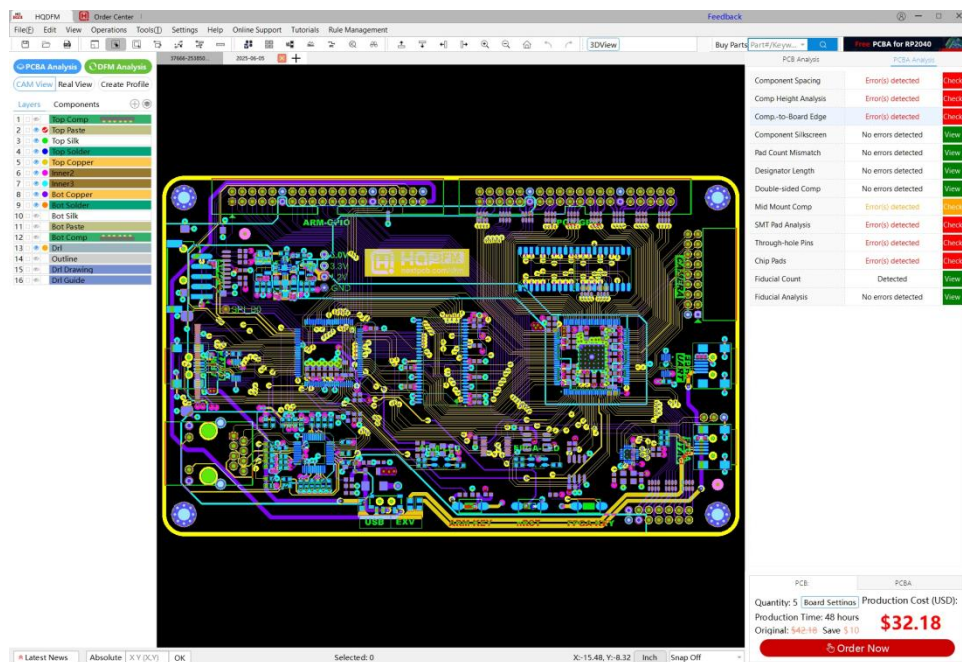


Figure 1-3: HQDFM standard Gerber viewer interface

DFM Analysis: One-click Design for Manufacture (DFM) analysis and parameter extraction for bare printed circuit board designs using HQDFM algorithms. Based on PCB production data only (Gerber, drill, ODB++).

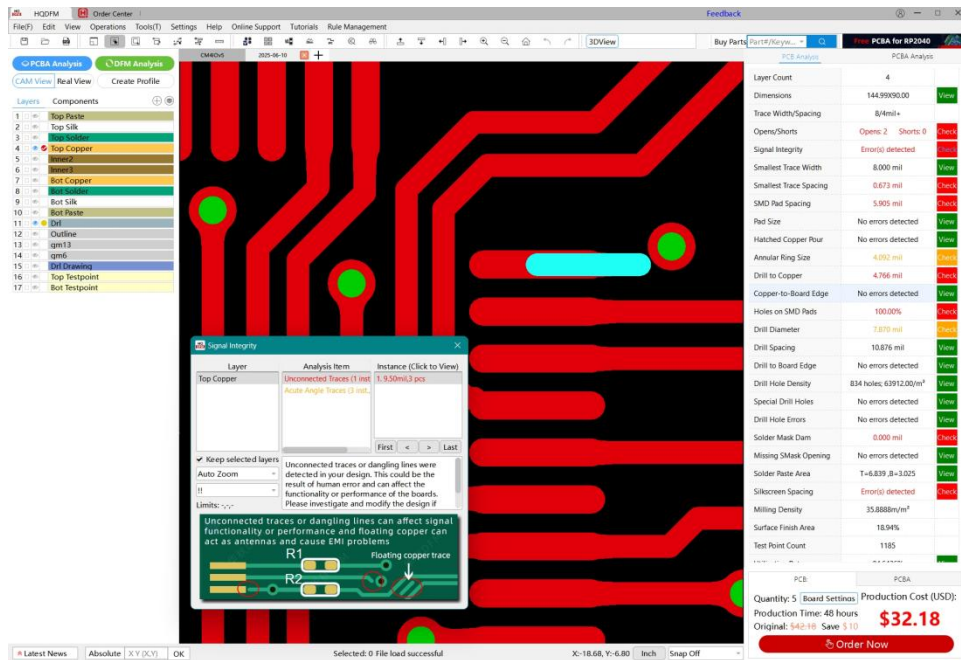


Figure 1-4: HQDFM PCB DFM analysis interface

DFA Analysis: PCBA Design for Assembly (DFA) analysis for populated electronic assemblies (including the PCB and electronic components) using HQDFM algorithms. Requires the Bill of Materials (BOM) and Centroid (pick-and-place) data in addition to PCB production data.

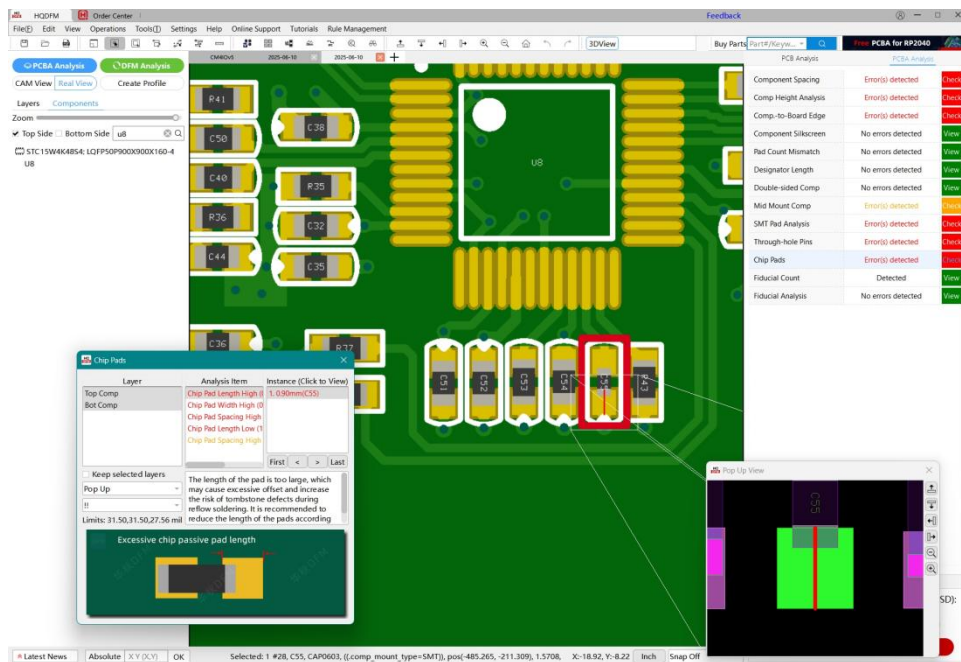


Figure 1-5: HQDFM PCBA DFA analysis interface

Footprint Checker: Quick and easy automated footprint checker covering over 6 million parts and growing.

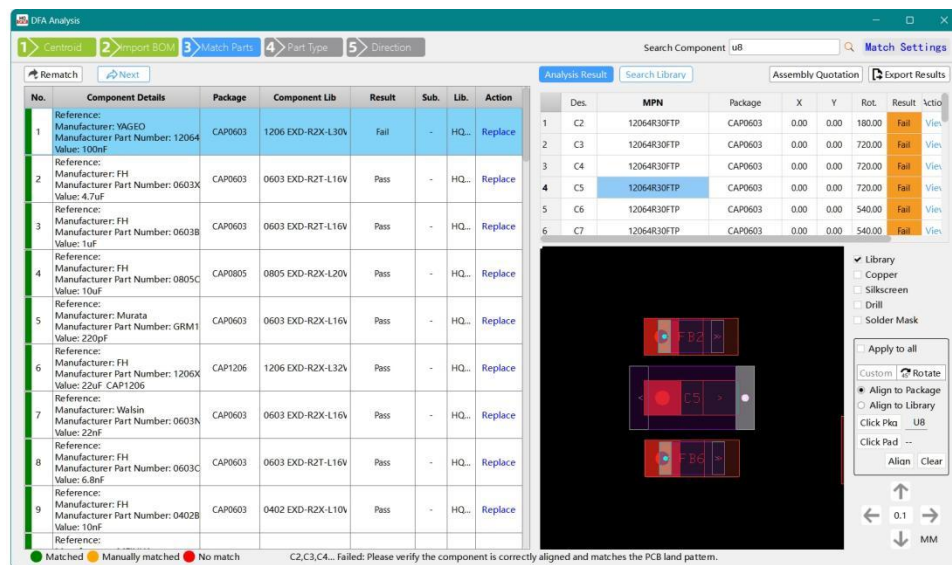


Figure 1-6: HQDFM footprint checking interface

1.4.2. HQDFM Tools

Panelization Tool: Create panelized data purely from the production files quickly and easily. Customize everything from layouts, margin widths, board spacings and add tabs, stamp holes and Fiducial marks in a single interface. Or use the Smart Panelization tool to give suggested layouts based on Raw Panel Size to maximum utilization rates.

Impedance Calculator: Quickly calculate controlled impedance for multiple traces simultaneously using parameters such as trace geometry, material properties and layer stackup. HQDFM's impedance calculator supports various trace types (**single-ended, differential, co-planar**) and transmission line structures including **Microstrip, Embedded Microstrip, Stripline and Dual Stripline**

BOM Checker and Centroid File editing: Perform simple time-saving and potentially project-saving BOM checks with a single-click and edit Centroid files in a simple spreadsheet like interface with real-time visual feedback.

Compare Gerber Files/BOM Files: Never send the wrong files again with HQDFM's Compare Gerber and BOM file tools. Track changes across versions and identify differences between after automated file operations in seconds.

And many more tools including **Utilization Rate Calculator, Solder Pad Count, Routing Distance, Component Search, Net Length Calculator, Copper Area Calculator.**

1.4.3. What can and can't HQDFM do?

Can:

Open and view PCB production data. HQDFM can be used to open and navigate PCB production data including Gerber files in RS-274x, X2 and X3 format (additional X3 information is not currently utilized), Excellon NC drill files in Excellon format and ODB++ files. As PCB manufacturing data is typically graphical in nature, HQDFM also offers a graphical interface for viewing the individual layers of a PCB.

Production data is typically exported in industry standard formats (e.g. Ucamco Gerber format). However, the accuracy of the produced data depends on the accuracy of the implementation in the ECAD tool.

Likewise, different manufacturers have different interpretations of the same set of data, resulting in discrepancies and misunderstandings. By understanding how manufacturers understand and use production data, designers can facilitate communication with manufacturers and avoid mistakes.

Can't:

Design PCBs - HQDFM is not a PCB design tool. HQDFM is designed to be used in conjunction with ECAD tools such as KiCad and Altium to verify the production data exported before hand-off. For most design-based errors, designers should make modifications to the original ECAD design file if possible and re-export the PCB production data and repeat analysis.

Reverse engineer PCBs i.e. Gerber to PCB file. - HQDFM can only utilize the data provided. It cannot generate schematic information, ECAD design files, missing layers or auto-create Centroid (pick-and-place) data etc. Tools in HQDFM can be used to manually build centroid files, modify and export modified Gerber files and find connections using the netlist. However, these features require specialized PCB engineering knowledge and should be used with care to avoid errors.

Ensure your design is manufacturable - HQDFM cannot guarantee that 1) your design can or cannot be manufactured or 2) the fab house will not report errors (EQs or engineer questions). The can be due to a multitude of reasons:

- Each manufacturer's requirements and standard processes vary.
- Accuracy of error reporting may depend on the quality of the provided data, which is determined by the ECAD software.
- Some aspects of a design cannot be reliably determined from the production files and 100% coverage is impossible. Like all validation tools, HQDFM helps reduce errors and streamlines their detection using the available data.
- HQDFM's DFM and DFA analysis features are designed for rigid PCB constructions and include limited support for HDI boards. Flex, rigid-flex, other specialized board types and features are currently not supported though these may be added in the future.

HQDFM should be used in conjunction with user experience and knowledge of the design requirements and should not be used as a substitute for human experience and validation.

1.5. Installing HQDFM International

1.5.1. System requirements:

- a) Windows 7, Windows 10 or Windows 11 operating system
- b) At least 1.12GB of disk space
- c) Graphics card with OpenGL version 1.0 and above support

1.5.2. Installation steps:

1. Download HQDFM from NextPCB at <https://www.nextpcb.com/dfm>
2. Extract the contents of the zip file and double-click the installation package to start the installation wizard. If you receive a warning preventing an unrecognized app from starting, click **[Run]** or click **[More info]** then **[Run anyway]** on Windows 11 systems and similarly on older systems.



Figure 1-7: Windows 11 SmartScreen pop-up

3. The default installation path is **C:\Program Files\HQDFM International** which can be changed. Click **[Next]**.

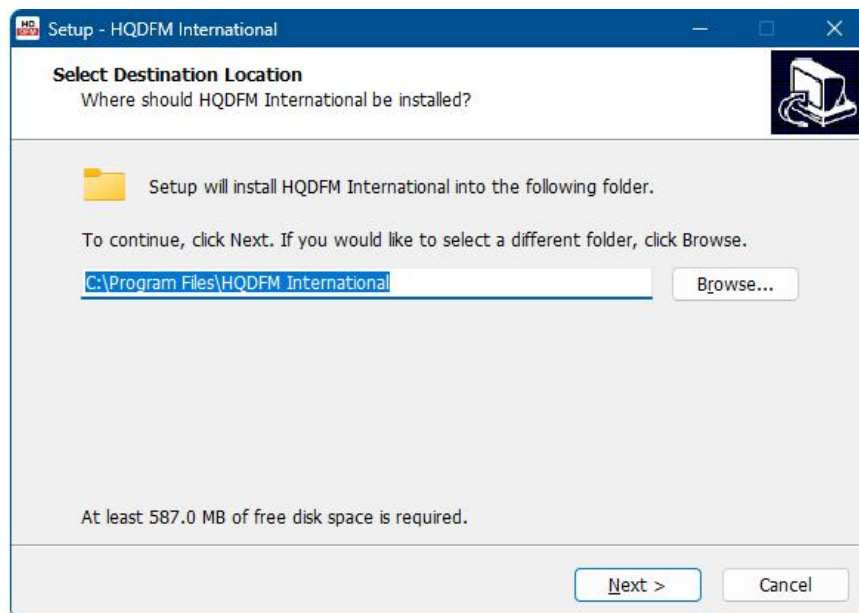


Figure 1-8: HQDFM program installation directory

4. Click **[Next]** to create a Start Menu shortcut in the folder indicated.

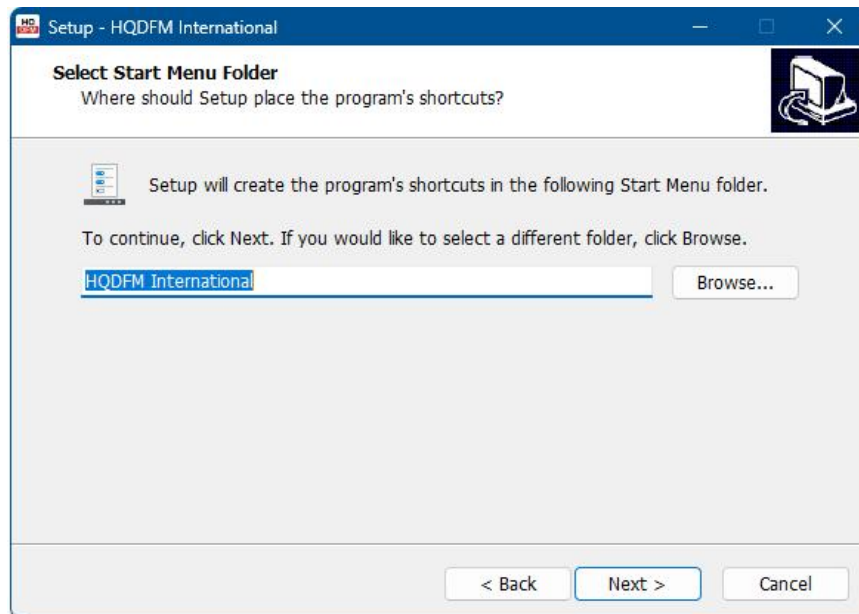


Figure 1-9: Start menu shortcut creation

5. Choose whether to create desktop and Quick Launch shortcuts then click **[Next]**.

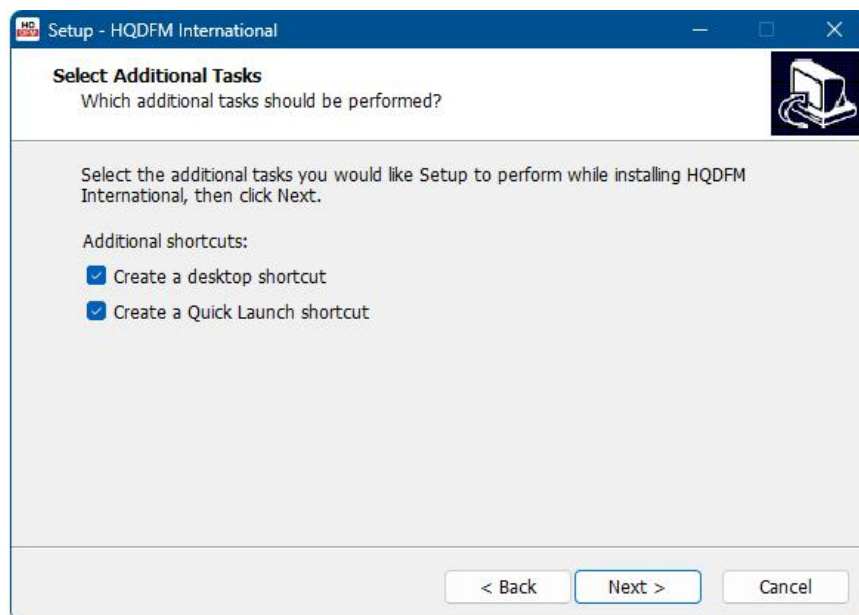


Figure 1-10: Desktop and quick launch shortcut creation

6. Confirm the install settings and click **[Install]** to proceed with installation.

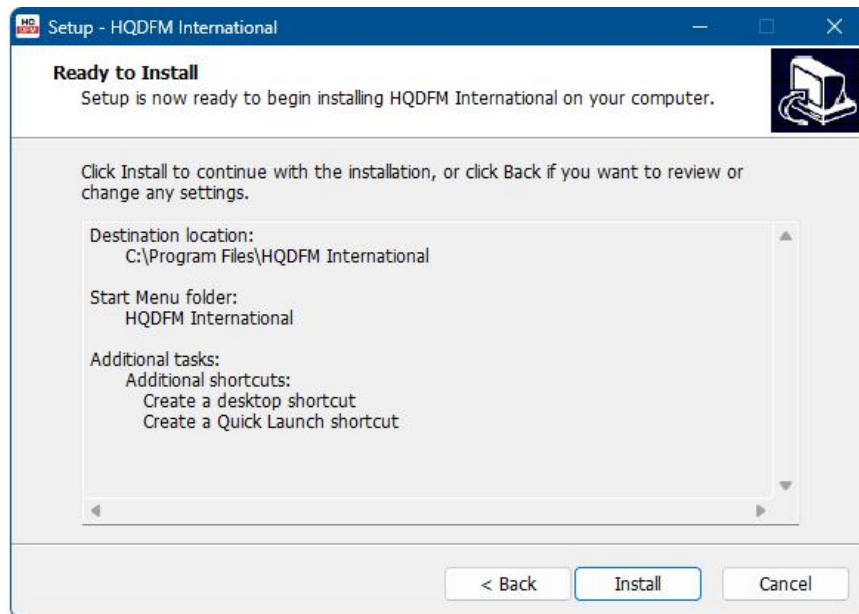


Figure 1-11: Confirming installation settings

7. Once installation is complete, click **[Finish]** to close the wizard and launch HQDFM.



Figure 1-12: Completing installation

1.6. Supported File Formats

1.6.1. HQDFM accepts the following files for analysis:

- a) **CAD files:** RS-274X, X2 and X3 Gerber files, Excellon Drill files, ODB++ files and KiCad .kicad_pcb files (HQDFM version 4.6 and above only).
- b) **BOM files:** .xls, .xlsx Excel files and .csv text files

c) **Centroid (XY) files:** .xls, .xlsx Excel files and .csv text files

1.6.2. How to open files in HQDFM

There are numerous ways of importing PCB production files into HQDFM:

- a) Click **New File** and browse for the files to import in the new window.
- b) **Drag and drop** the files from file explorer or the desktop directly.

The main workspace accepts individual file import, multi-select import and .rar and .zip archive file import.

1.7. Keyboard Shortcuts

Menu	Name	Menu Shortcut	Shortcut	Notes
Menu Bar	File	Alt + F		
	Open	Alt + F → O		
	New	Alt + F → N		
	Close	Alt + F → C		
	Save as DFM File	Alt + F → H		
	Export Gerber Files	Alt + F → G		
	Export ODB++	Alt + F → T		
	Export DFM Report	Alt + F → R		
	Export PDF	Alt + F → P		
	Recent			
	Exit	Alt + F → X	Ctrl + X	
	Edit	Alt + E		
	Add	Alt + E → A	Ctrl + A	
	Delete	Alt + E → D	Delete	
	Move Layer/Object	Alt + E → M	Ctrl + D	
	Copy Layer/Object			
	Rotate Layer/Object	Alt + E → R		
	Mirror Layer/Object	Alt + E → I		
	Set Origin			
	View	Alt + V		
	Toggle Fill Mode	Alt + V → F	F	
	Show Negative Objects	Alt + V → N	N	
	Component Display Settings	Alt + V → Y	Y	
	Component List	Alt + V → I	I	
	CAM/Real View Mode	Alt + V → D	D + S	
	Operations	Alt + O		
	Zoom to Window	Alt + O → R		
	Object Select	Alt + O → F		
	Box Select	Alt + O → E		
	Same-Layer Net Select	Alt + O → S		
	Cross-Layer Net Select	Alt + O → N		
	Trace Select	Alt + O → T		
	Measure	Alt + O → M	Ctrl + M	

	Tools	Alt + T		
	Impedance Calculator			
	Compare Gerber Files	Alt + T → C		
	Panelization Tool	Alt + T → P		
	Calculate Routing Distance	Alt + T → R		
	Utilization Rate	Alt + T → U		
	Count Solder Pads	Alt + T → S		
	Compare BOM Files	Alt + T → B		
	Find Component	Alt + T → D		
	Compare IPC Nets	Alt + T → N		
	Calculate Copper Area	Alt + T → O		
	Interactive BOM			
	Board Settings			
	Library Management	Alt + T → W		
	Create Component			
	Settings	Alt + S		
	Units			
	General Settings	Alt + S + J		
	Object Snap	Alt + S → O		
	Keyboard Shortcuts	Alt + S →		
	Rule Management	Alt + S → C		
	Proxy			
	Help	Alt + H		
	About HQDFM			
	Follow HQDFM			
	Online Support	Alt + C		
	HQDFM Technical Support			
	Tutorials			
	Tutorial Videos			
	HQDFM User Manual			
Actions	DFM Analysis			
	Calculate PCB Size			
	Append File			
	Layer Management			
	Pan Left		←	
	Pan Right		→	
	Pan Up		↑	
	Pan Down		↓	
	Reset View		Home	
	Zoom In		PageUp/+	
	Zoom Out		PageDown/-	
	Undo		Ctrl + Z	
	Redo		Ctrl + U	
	Open All Layers		Alt + A	
	Close All Layers		Shift + A	
	Aperture List		Right Mouse Button	
	Drill File Format		Right Mouse Button	
	Export Layer		Right Mouse Button	
	Measure Point-to-		M + P	

	Point			
	Measure Object-to-Object		M + O	
	Measure Network-to-Network		M + N	
	Toggle Crosshair		X	
	Switch Working Layer		D + A	

1.8. Mouse Controls

1.8.1. HQDFM works best with a keyboard and mouse setup. The mouse controls are designed to help users navigate Gerber files in a quick and seamless manner independently, leaving the other hand free to activate actions via keyboard shortcuts.

Mouse Actions:

- a) **Left mouse button:** Select objects, double-click to select similar objects, cancel selection by clicking in blank areas in the workspace.
- b) **Middle mouse button:** Scroll to pan up and down, hold the middle mouse button and move the mouse forward and back to zoom in and out.
- c) **Right mouse button:** Right click in the workspace to bring up the command menu for easy access to common commands. Right-click and hold to pan the workspace by dragging the mouse.

2. HQDFM Interface

2.1. Main Interface

2.1.1. Double click the desktop icon to open HQDFM and enter the main interface. The main interface consists of the menu bar and toolbar on top, the workspace in the middle, layer navigation panel on the right and the PCB and PCBA DFM checklist panel on the right. On the bottom right, you can change the units from mil to mm, change the snapping property and view the XY coordinates of the last mouse click in the workspace.

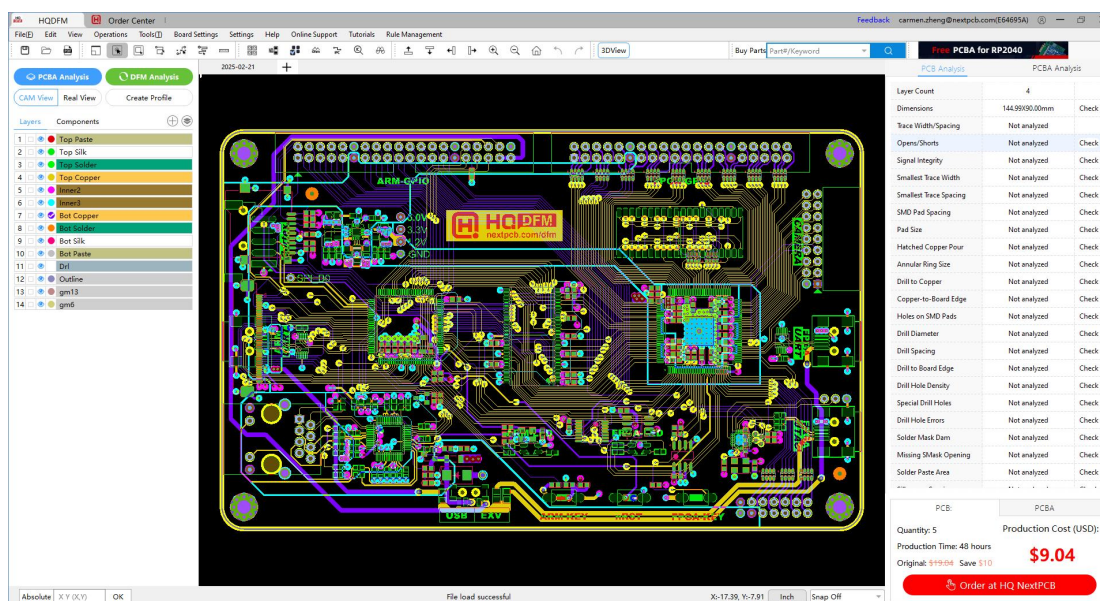


Figure 2-1: HQDFM main interface

2.2. Menu Bar

Menu	File	Edit	View	Operations	Tools	
Function	Open	Add	Toggle Fill Mode	Zoom to Window	Impedance Calculator	
	New	Delete	Show Negative Objects	Object Select	Compare Gerber Files	
	Close	Move Layer/Object	Component Display Settings	Box Select	Compare BOM Files	
	Export Gerber/Drill	Copy Layer/Object	Component List	Same-Layer Net Select	Filter	
	Export ODB++	Rotate Layer/Object	3D Viewer	Cross-Layer Net Select	Analyze >	Compare IPC Nets
	Export DFM Report	Mirror Layer/Object	CAM/Real View Mode	Trace Select		Calculate Copper Area
	Export PDF	Set Origin		Measure		Net Length Calculator
	Recent >				Assembly >	Count Solder Pads
	Exit					Component Search
						Export Centroid Data

					Panelization >	Smart Panelization
						Panelization Tool
						Calculate Routing Distance
						Utilization Rate

Figure 2-2: Menu bar options

Menu	Board Settings	Settings	Help	Online Support	Tutorials	Rule Management
Function	Board Settings	Units >	Video Tutorials	service@nextpcb.com	HQDFM User Manual	Rule Management
		General Settings	HQDFM	nextpcb@outlook.com		
		Object Snap	About us	WhatsApp +86 15013838486		
		Keyboard Shortcuts				

Figure 2-3: Menu bar options continued

2.2.1. File menu options

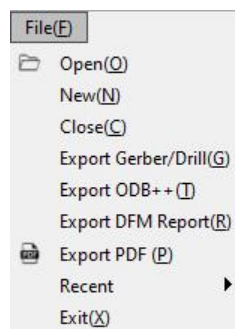


Figure 2-4: File menu

Open: Open Gerber, ODB++ or HQDFM .DFM job file

New: Create a new project. The HQDFM workspace supports opening multiple projects for enhanced convenience and productivity.

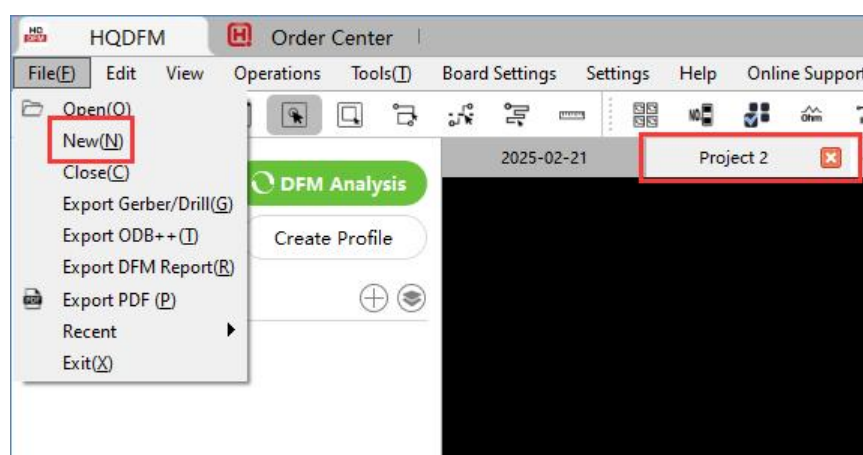


Figure 2-5: New project function

Close: Close the current job.

Export Gerber Files: Export Gerber files in the current workspace including edits made in HQDFM. This feature is currently in beta testing and may not support non-standard Gerber implementations. Please import and

review the exported files again in HQDFM to ensure the files have been correctly generated.

Export ODB++ Files: Export ODB++ files for PCB manufacture. Can generate ODB++ files from Gerber format files.

Export DFM Report: Export a report containing all the results of the Design for Manufacture and Assembly analysis.

Export PDF: Customize and choose layers to be exported in PDF format. Layers can be exported overlapping or individually, mirrored, enlarged or to scale, in color or black and white.

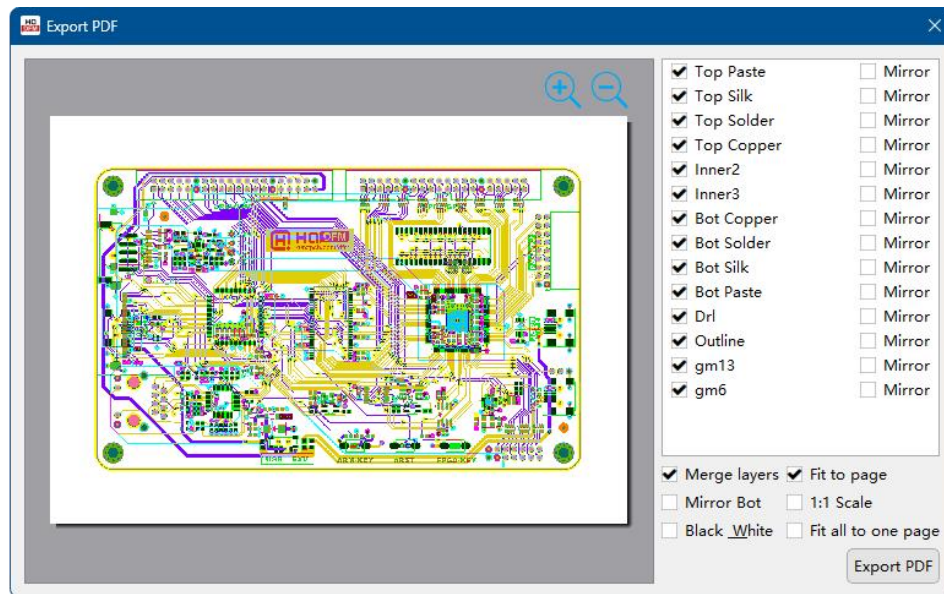


Figure 2-6: Export PDF interface

Recent: Open recently opened files. HQDFM will save the last 10 files.

Exit: Close HQDFM

2.2.2. Edit menu functions

The edit menu contains functions for editing elements in Gerber files including adding graphical elements, rotating and mirroring objects and entire layers.

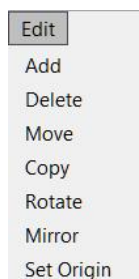


Figure 2-7: Edit menu

Add: Add lines, flashes, arcs, polygon fills and text to Gerber files.

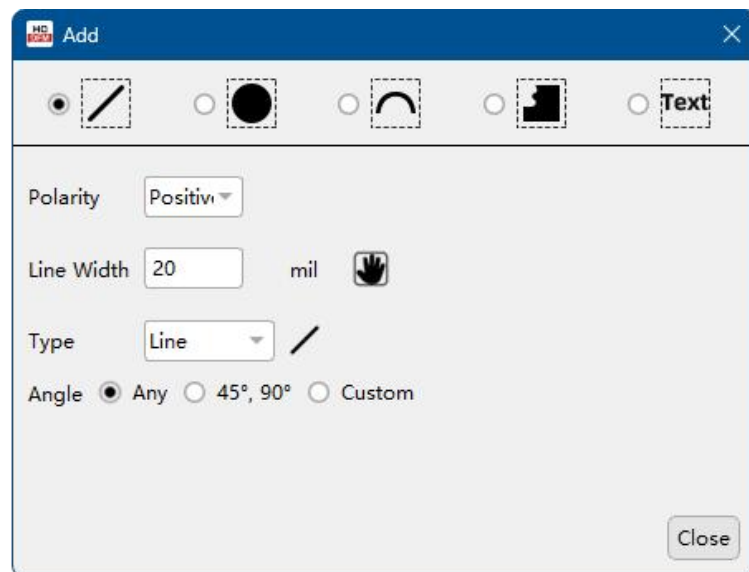


Figure 2-8: Add objects interface

- a) **Line:** Lines for drawing traces or outlines etc. Lines can carry positive or negative attributes and can be drawn at any angle. Use the hand tool and click an existing line to copy the aperture. Rectangles can also be drawn using this tool.

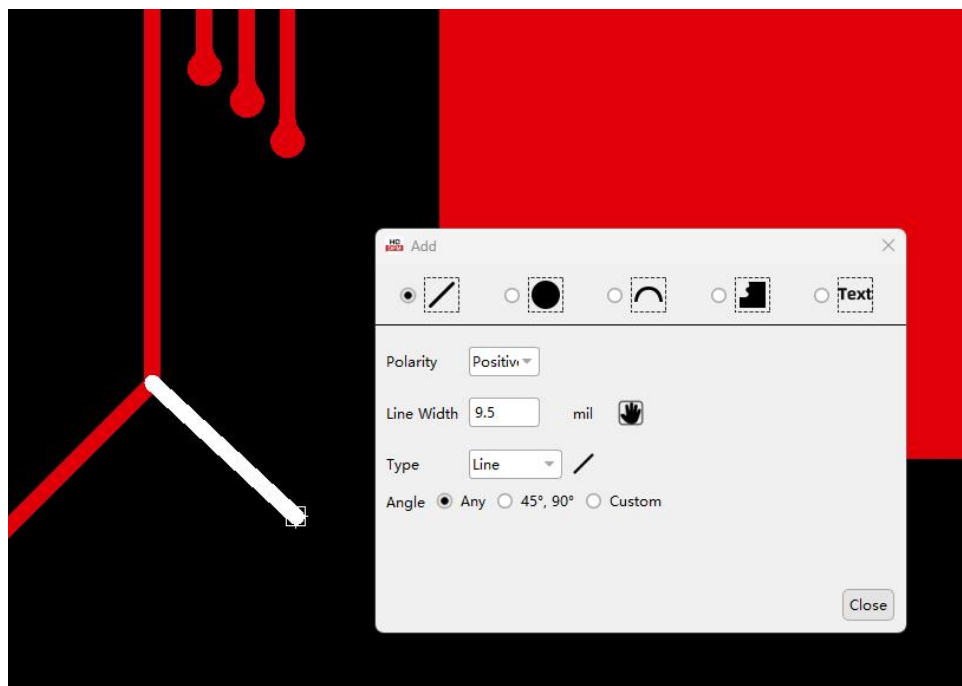


Figure 2-9: Add line interface

- b) **Flash:** Fixed shapes for creating pad flashes. Use the hand tool to grab an existing aperture from the Gerber files. Flashes can be positive or negative. There are 24 styles to choose from including oblongs, diamonds, thermals, crosshairs and rings. Flashes can be added in arrays by entering the array-matrix and spacing.

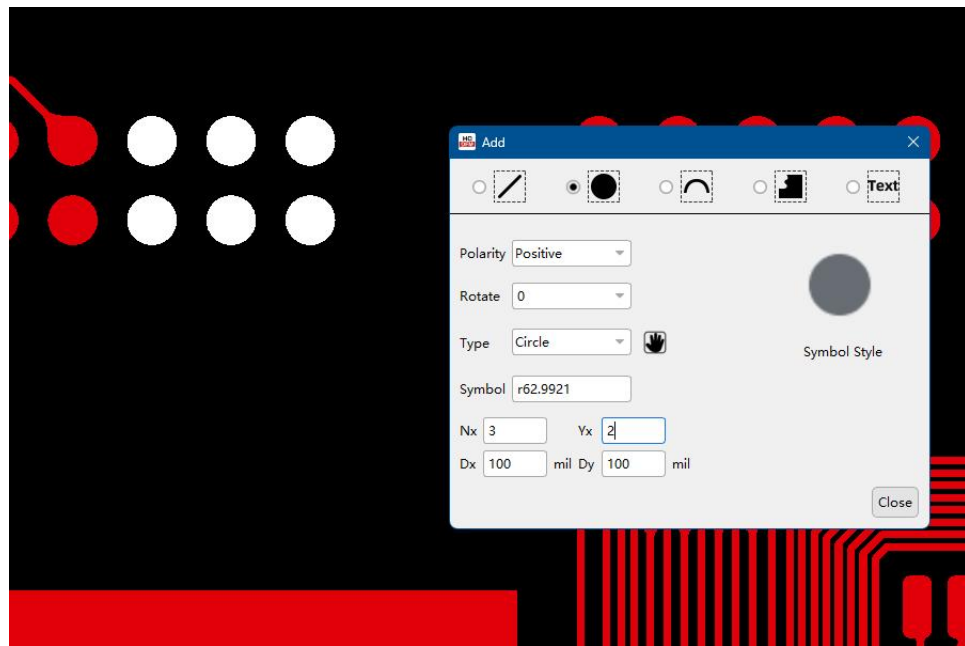


Figure 2-10: Add flash interface

The precise dimensions of each shape style can be modified, or use the hand tool to copy the aperture size of an existing flash.

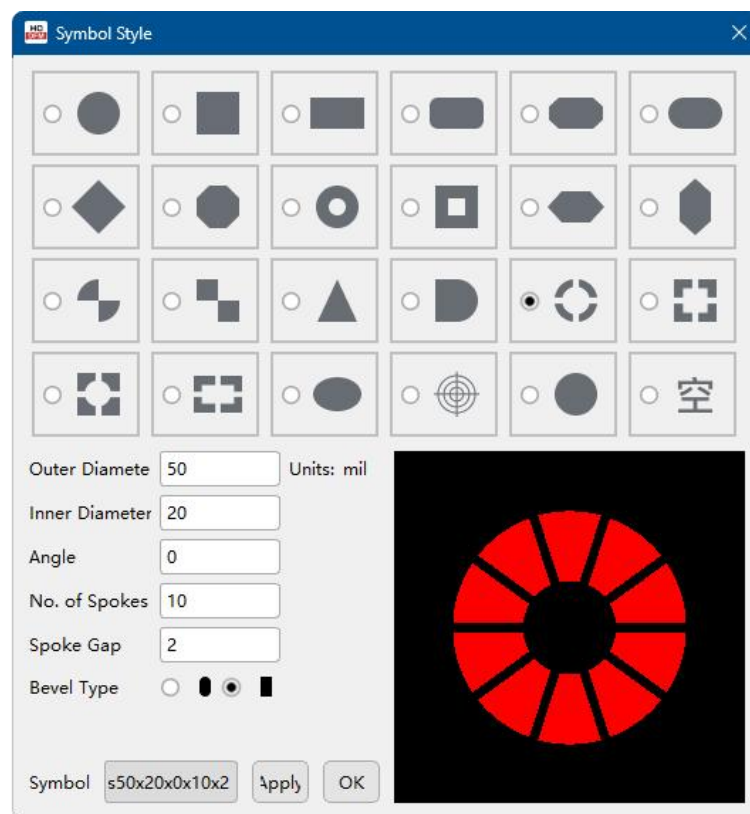


Figure 2-11: Flash styles

c) **Arc:** Arc types can be positive or negative. There are three methods for drawing arcs:

- **Endpoints:** Click the two endpoints of the arc then move the mouse away from the center of the two points to visualize the arc. Click again to fix the arc and press enter to commit the arc to the

working layer.

- **Center:** Click one endpoint, then click the center of the arc circle. Follow the perimeter of the circle with the mouse and click again to create the arc of the desired length. Press enter to commit the arc to the working layer.
- **Radius:** Use the radius method to create arcs with a specified radius. Click on the workspace to set the arc circle origin and follow the perimeter of the circle to visualize the arc. Click again to set the arc length and press enter to commit the arc to the working layer.

Complete circles can also be created using the above three methods. Instead of clicking once and pressing enter to commit the arc, you can also double click.

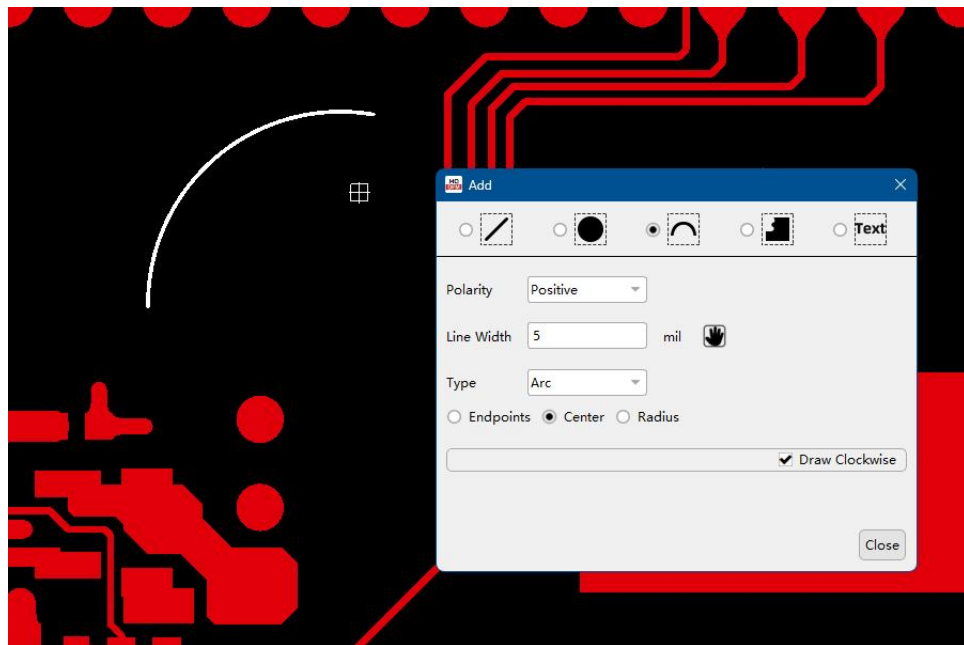


Figure 2-12: Add arc interface

- d) **Polygon fill:** HQDFM supports the creation of rectangular or free-form filled polygons in positive and negative polarities. Draw the shape then double click or press enter to commit the shape to the working layer.

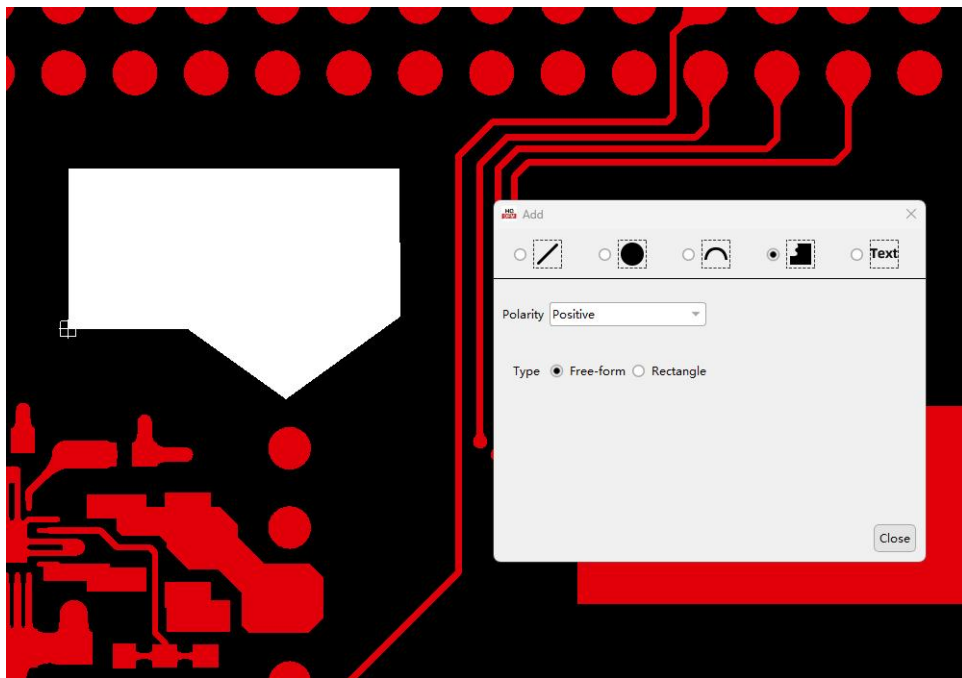


Figure 2-13: Add polygon fill interface

- e) **Text:** Text can be entered with positive or negative polarity, at an angle or mirrored. Modify the text font, size and line width in the dialog then click on the workspace to print the text on the working layer. The hand tool can be used to grab an existing aperture size. The ideal text height to width ratio is 1.5 : 1

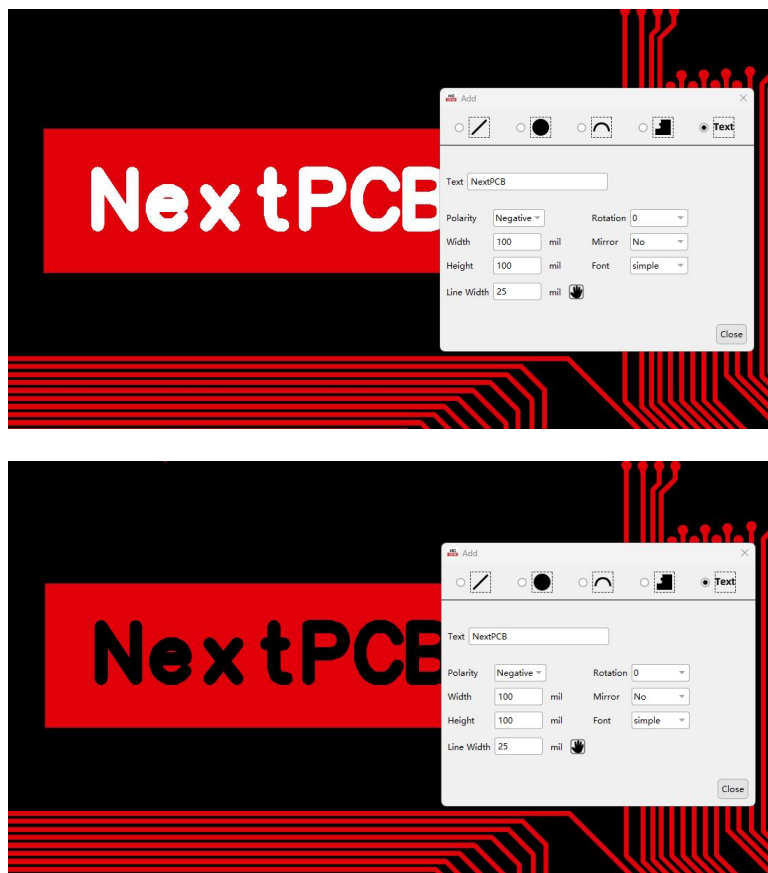


Figure 2-14: Add text interface

Delete: Remove objects by selecting the element or elements and clicking delete, or press the delete key on the keyboard. If no specific element is selected, the entire layer will be deleted.

Move: The move function can be used to move or align objects, layers and groups of objects. Select multiple working layers by checking the boxes in the layer manager to move the contents of different layers together.

- a) **Single object:** Move/align a single object. Select the object then click the Move function from the menu bar or by right clicking. Click to set the anchor point, move the mouse to the new location and click again to move the object.
- b) **Layer:** Align an entire layer that is misaligned with other layers. Click the Move function and find a common point shared by the two layers e.g. a pad. Click the point on the working layer, then click the corresponding point on the layer you want to align to. The working layer will move to the new location. Use snap options to make sure the layers align perfectly.
- c) **Selection:** Select the objects to move with the window selection tool, click the anchor point, move the cursor to the new location and click again to move the objects. Check multiple layers to select the contents of more than one layer.

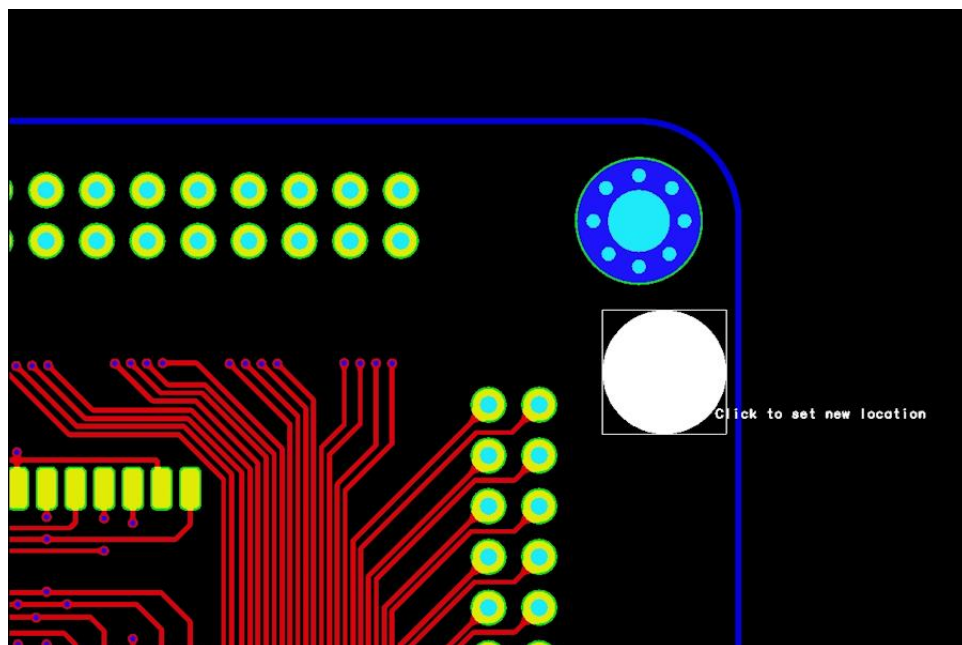


Figure 2-15: Move function

Rotate: Select the objects to rotate and click the rotate function. If no objects are selected, the entire working layer will be rotated. Select the origin and the angle of rotation. Click apply to rotate the object/layer and click OK to confirm. A custom origin can be entered.

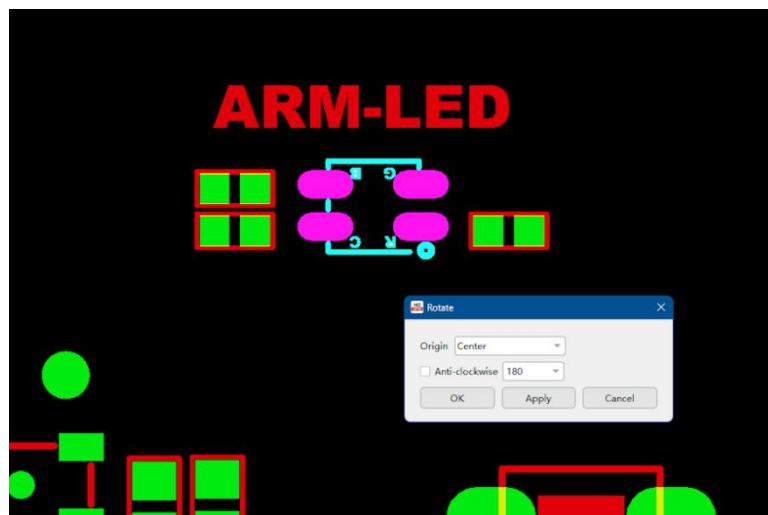


Figure 2-16: Rotate dialog

Mirror: Select the objects to mirror and click the Mirror function. If no objects are selected, the entire working layer will be mirrored.

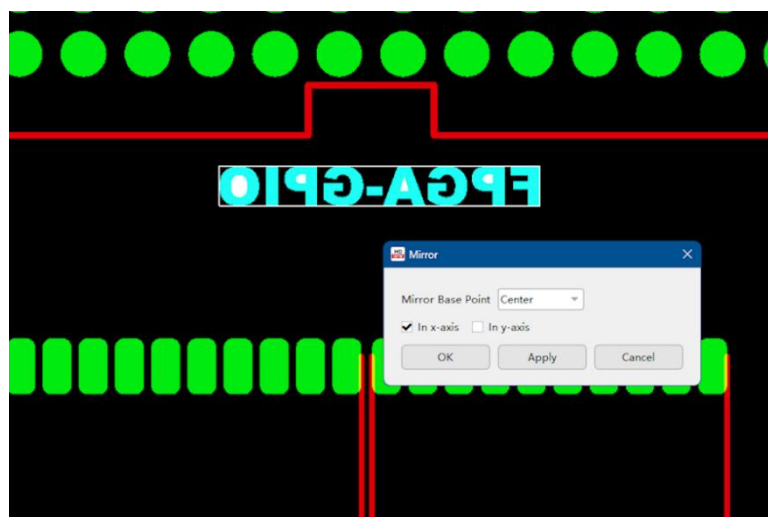


Figure 2-17: Mirror dialog

2.2.3. View menu functions

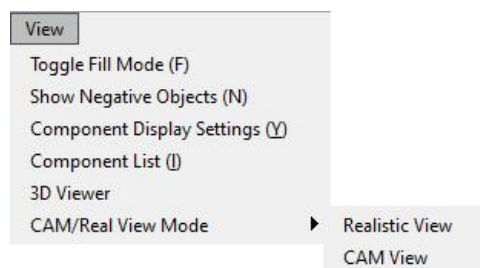


Figure 2-18: View menu

Toggle Fill Mode: Toggle between normal, outline and skeleton Gerber fill modes.

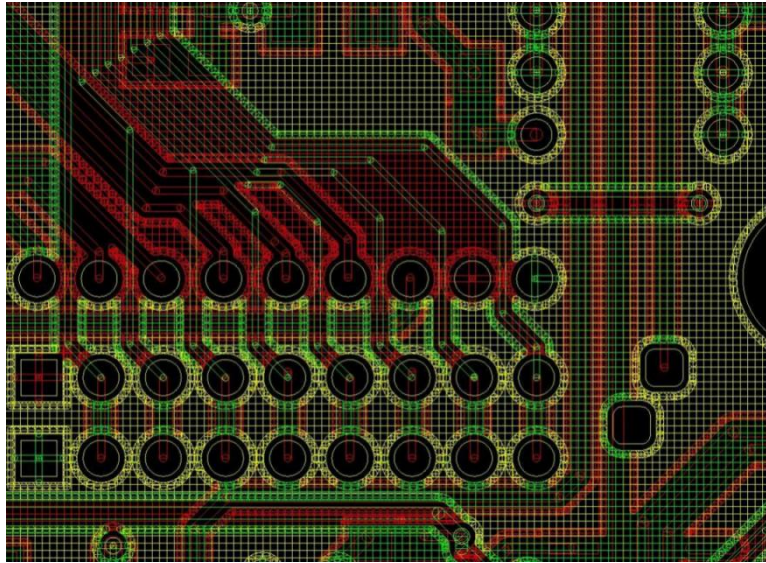


Figure 2-19: Gerber fill modes

Show Negative Objects: Select to toggle negative elements on and off.

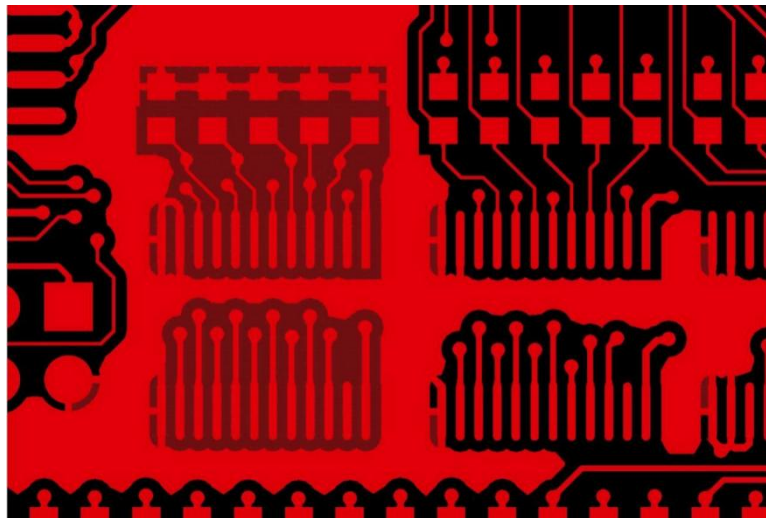


Figure 2-20: Show negative objects

Component Display Settings: Change component graphics and label display settings in the Comp layer. Centroid and BOM data must be loaded first to display Comp layers.

- a) **Labels:** Can choose between using Designators or Package name as labels if available
- b) **Component Outlines:** Display the component body and pin outlines from the chosen library or EDA package if available.
- c) **Properties:** Choose to display labels from nets, name, size, assembly type etc. and whether to show Polarity Markers.
- d) **Text:** Configure text properties including overflow behaviour and font size.

The settings can be saved for other projects by setting them as default.

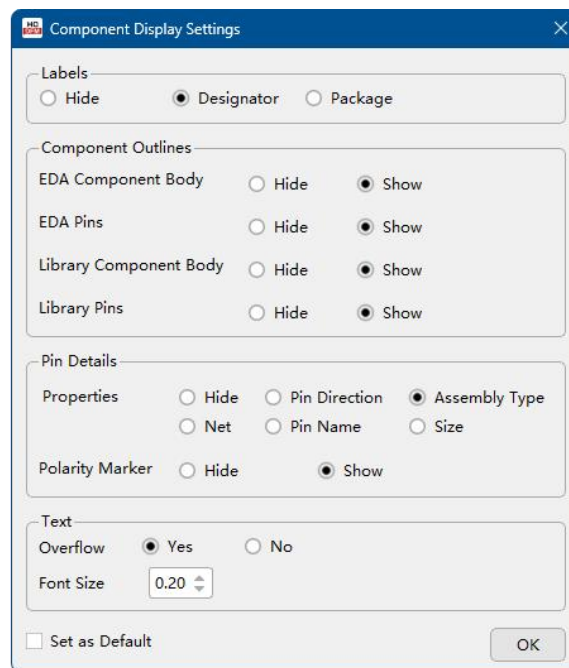


Figure 2-21: Component Display Settings dialog

Component List: Show the list of all components in the design with designators, part numbers, package, specifications etc. Click a part to highlight all instances of the component on the board, or click a designator to highlight the individual part. The search box can be used to search for a specific component using designators, part numbers, specifications etc..

3D Viewer: Open the 3D Viewer showing a realistic view of the PCB board which can be rotated in 3D space.

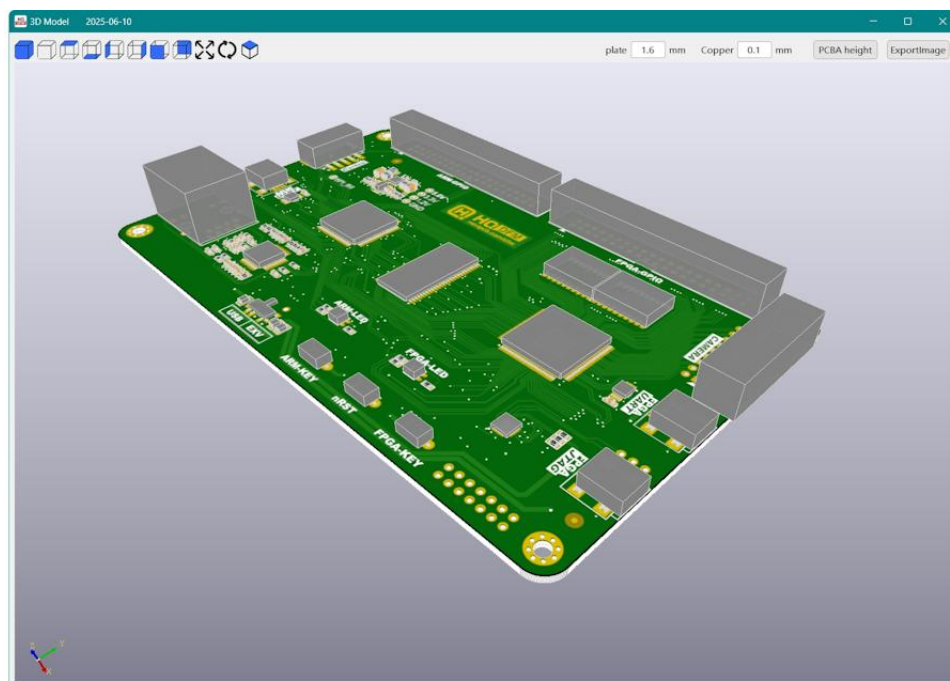


Figure 2-22: 3D Viewer of PCB and components

CAM/Real View Mode: Change between CAM (PCB) and Realistic view rendering modes.

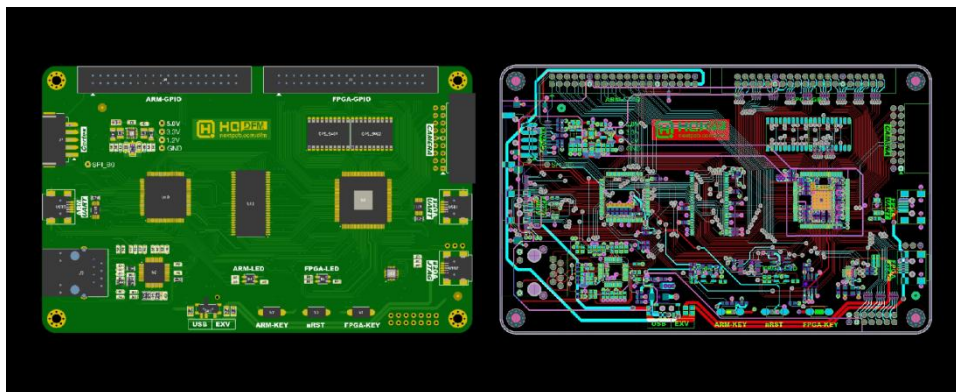


Figure 2-23: Realistic and CAM rendering modes

2.2.4. Operations menu functions

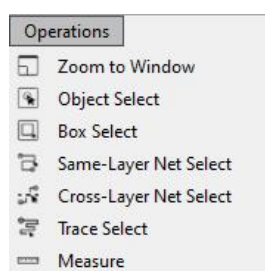


Figure 2-24: Operations Menu

Component List: Show the list of all components in the design with designators, part numbers, package, specifications etc. Click a part to highlight all instances of the component on the board, or click a designator to highlight the individual part. The search box can be used to search for a specific component using designators, part numbers, specifications etc..

Zoom to Window: Use the mouse to draw a window around the area to zoom into.

Object Select: Select an individual element by clicking them.

Box Select: Select a group of elements by drawing a box around them.

Same-Layer Net Select: Click a circuit element in the working layer to highlight the element and connected elements in the current layer.

Cross-Layer Net Select: Click a circuit element in the working layer to highlight the element and connected elements. Open multiple circuit layers in the Layer Manager to highlight connected circuits in other layers.

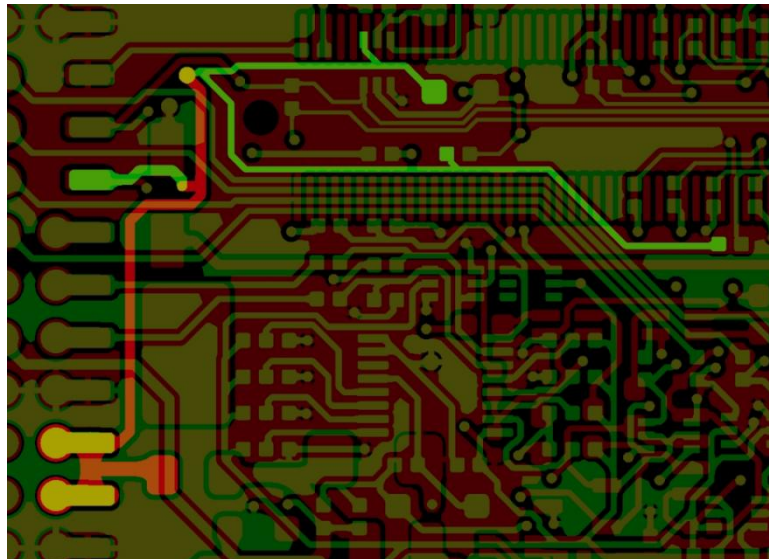


Figure 2-25: Cross layer net trace selection

Trace Select: Click a trace to highlight connected traces excluding pads.

Measure: Ruler tool for measuring various distances such as point-to-point distances, net, outline, centre point spacing and annular rings width. The measure dialog can be kept open while measuring lengths.

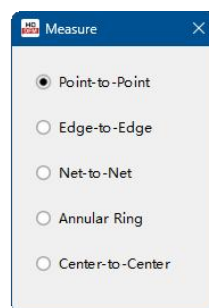


Figure 2-26: Measure options

- **Point-to-Point:**

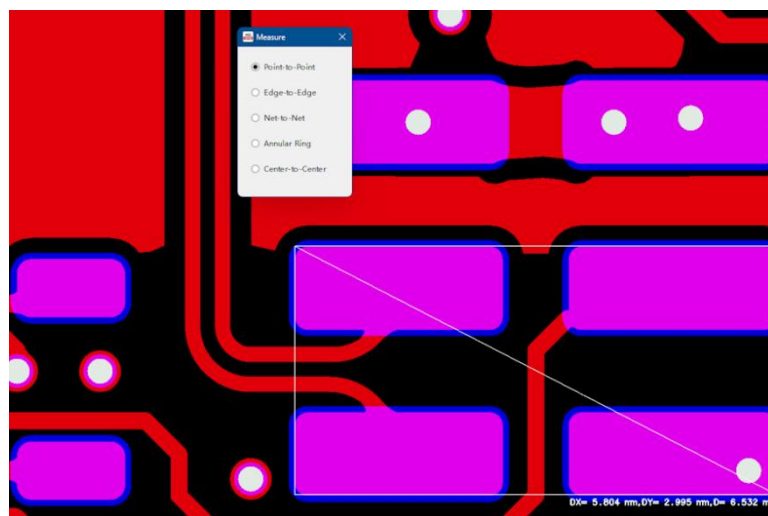


Figure 2-27: Point-to-point length measurement

- **Edge-to-Edge:**

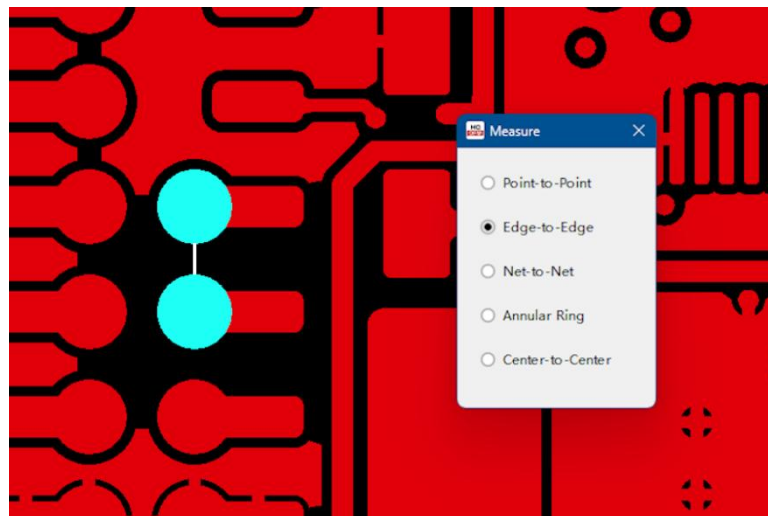


Figure 2-28: Edge-to-edge length measurement

- **Net-to-Net:**

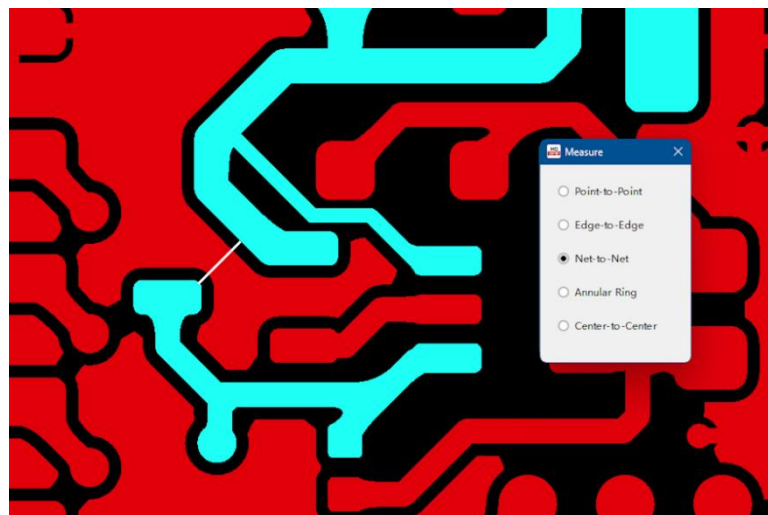


Figure 2-29: Net-to-Net length measurement

- **Annular Ring:**

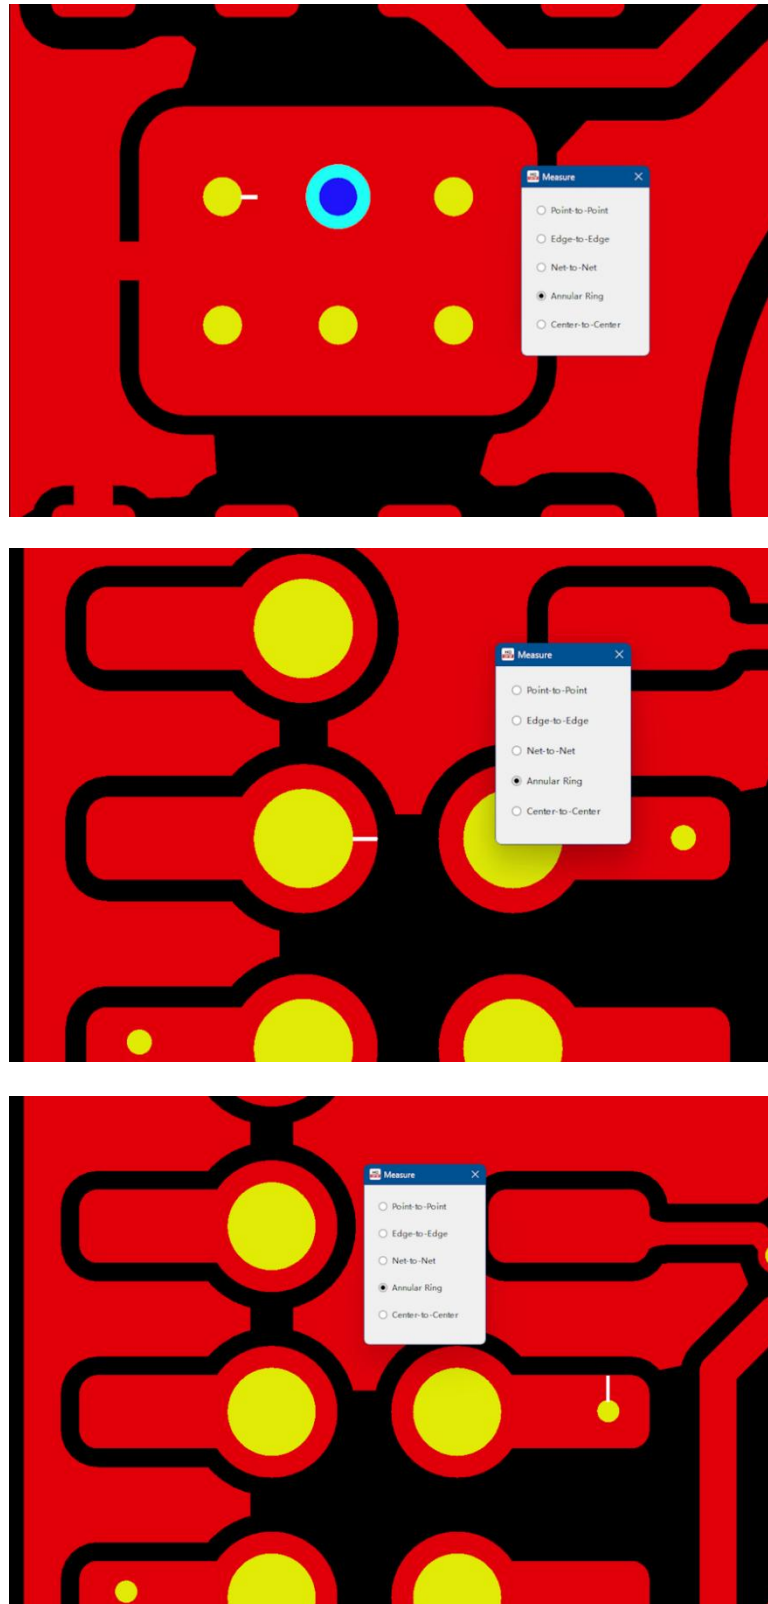


Figure 2-30: Annular ring length measurement

- **Center-to-Center:**

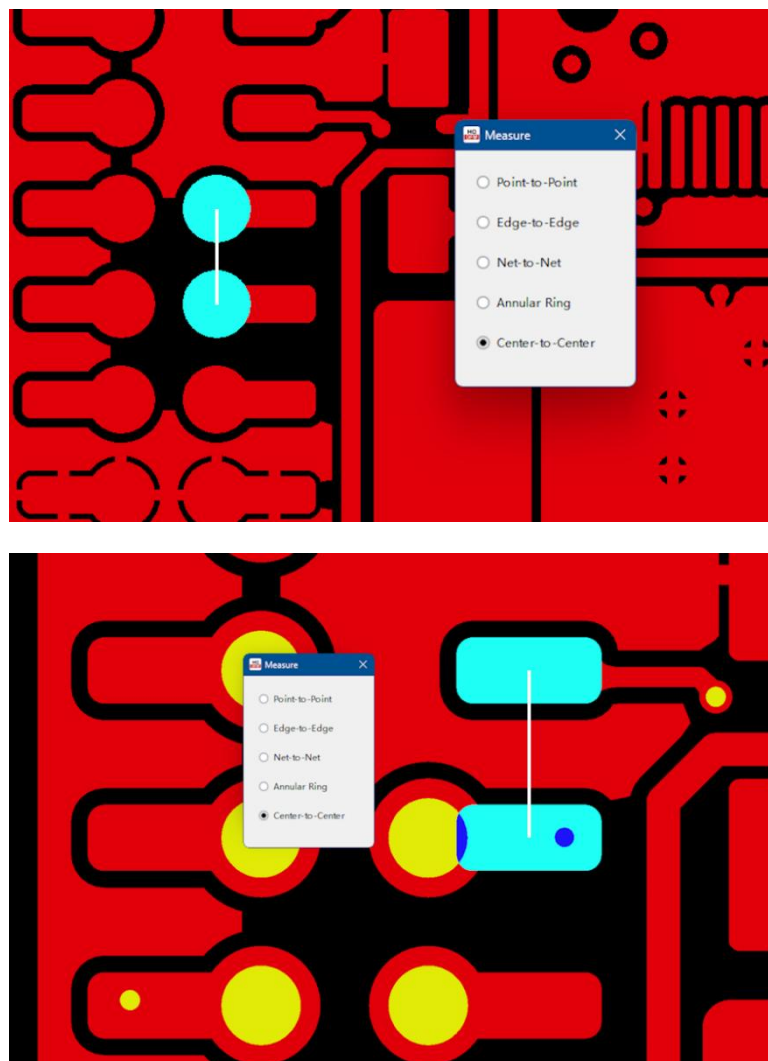


Figure 2-31: Center-to-Center length measurements

2.2.5. Tools menu functions

Further details on how to use the tools can be found in Chapter 2.

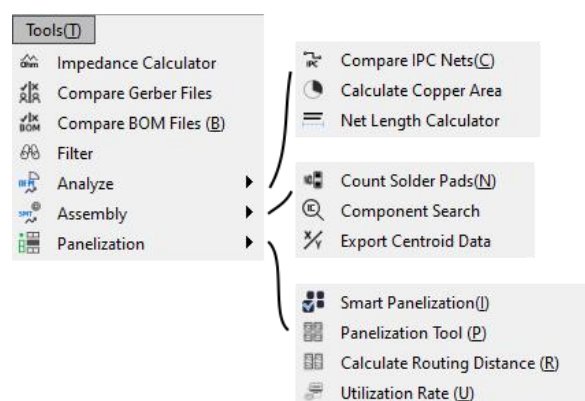


Figure 2-32: Tools Menu

Component List: Show the list of all components in the design with designators, part numbers, package, specifications etc. Click a part to highlight all instances of the component on the board, or click a designator to highlight the individual part. The search box can be used to search for a specific component using designators,

part numbers, specifications etc.

Impedance Calculator: Opens the Impedance Calculator tool for calculating the characteristic impedance of traces using real stack-up information.

Compare Gerber Files: Compare two sets of Gerber files and find differences between versions quickly.

Compare BOM Files: Find inconsistencies and changes in multiple BOM files quickly.

Filter: Search and filter elements such as parts by designator, package, value or nets.

Analyze:

- a) **Compare IPC Nets:** Check for circuit shorts/breaks in the current design using IPC netlist files.
- b) **Calculate Copper Area:** Calculate the percentage area of the board covered in copper elements.
- c) **Net Length Calculator:** Calculate the length of multiple nets. Click **[Select Net]** then click a net in a circuit layer to add it to the list. Multiple nets can be added this way. Then click **[Calculate]** to retrieve the length and aperture size.

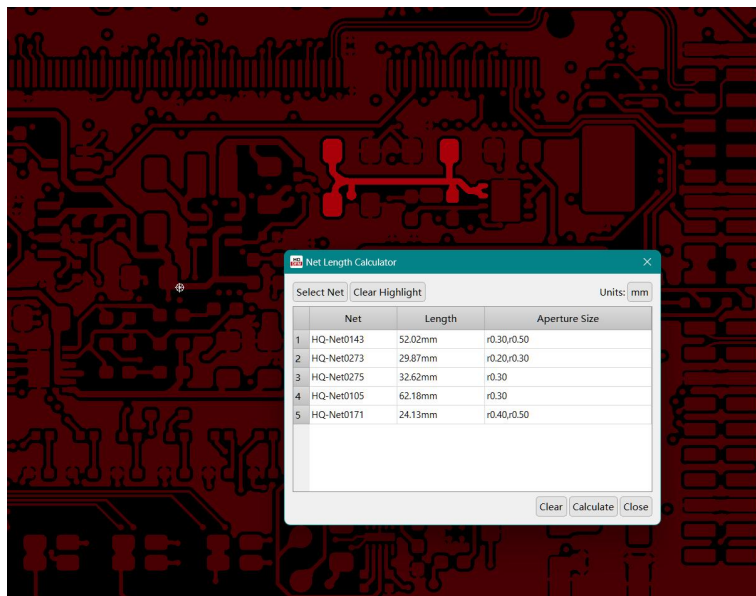


Figure 2-33: Net Length Calculator interface

Assembly:

- a) **Count Solder Pads:** Count the number of surface mount (SMD) and through-hole (THD) solder pads on the design to anticipate assembly costs.
- b) **Component Search:** Quickly locate a component on the board using centroid data. Centroid data must be uploaded to use this function.
- c) **Export Centroid Data:** Export the centroid/pick and place file for the current project including edits made in HQDFM. Valid centroid data must be uploaded to use this function.

Panelization:

- a) **Smart Panelization:** Provides various panel layouts based on different panel sizes

- b) **Panelization Tool:** Customize panel design with more options including options for tooling rails, gaps, tabs and stamp holes for more complex panelization requirements.
- c) **Calculate Routing Distance:** Calculate routing lengths and visualize routing paths with different tool sizes to anticipate additional manufacturing costs.
- d) **Utilization Rate:** Calculate the utilization rate on standard production panels for optimal efficiency.

2.2.6. Board Settings menu functions

Board Settings: Configure board parameters for quoting and ordering purposes such as quantity, board thickness, color, via type etc.

2.2.7. Settings menu functions

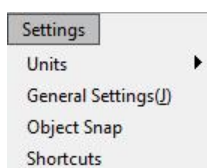


Figure 2-34: Settings menu

Units: Change the units for lengths from mils to mm or vice versa.

General Settings: Change basic settings, preferences and startup options including Analysis mode, export paths, language etc.

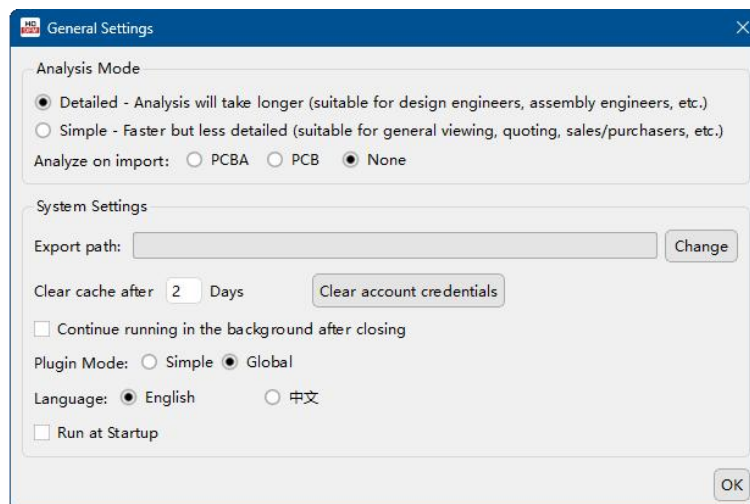


Figure 2-35: General Settings window

Object Snap: Change detailed object snap settings for more precise measurements. Snap settings only apply to the working layer or selected layers.

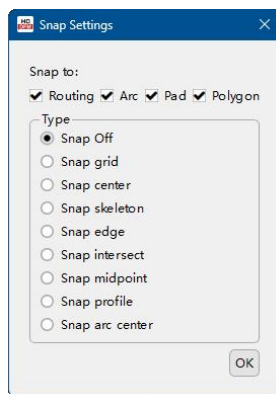


Figure 2-36: Snap settings window

- a) **Snap center:** Snap to the center of pads, drill hits, polygons or the center of end and start points used to create traces/line objects. Use the snap to skeleton setting to snap to the middle of traces/line objects.

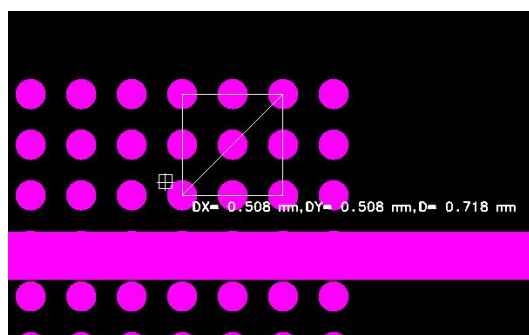


Figure 2-37: Snap to center settings used to measure the pitch of a BGA footprint

- b) **Snap skeleton:** Snap to the skeleton i.e. the center line used to draw traces.

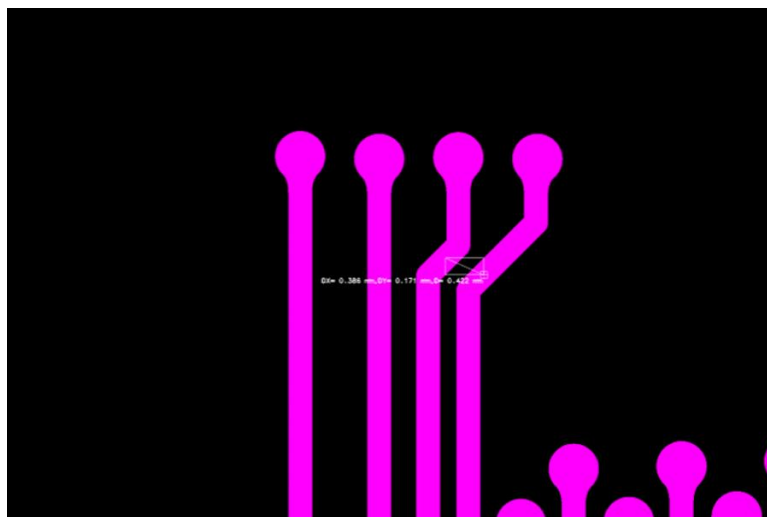


Figure 2-38: Snap skeleton settings used to measure the center-to-center distance between traces

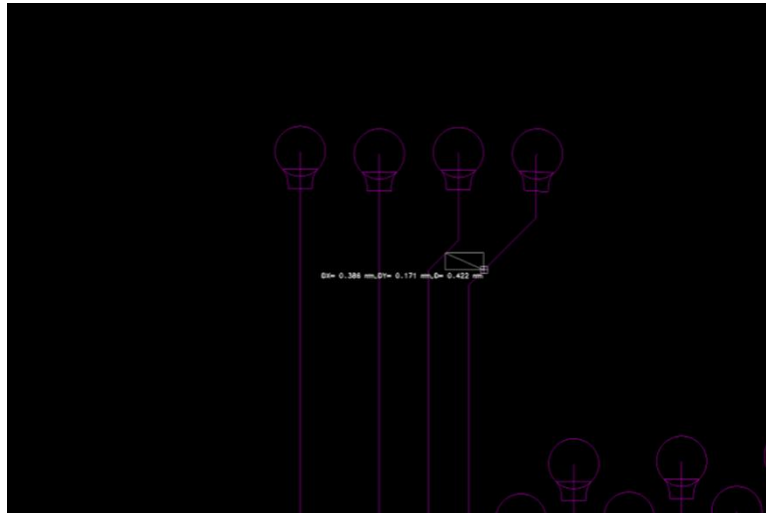


Figure 2-39: Skeleton fill mode used to see the center lines of traces

- c) **Snap edge:** Snap to edges
- d) **Snap intersect:** Snap to intersections
- e) **Snap midpoint:** Snap to the midpoint of pads, drill hits, traces, etc.
- f) **Snap profile:** Snap to the profile
- g) **Snap arc center:** Clicking/hovering over an arc will snap to the origin of the circle used to create the arc.



Figure 2-40: Snap arc center settings to snap to the center of the circle used to create the arc

Shortcuts: Set and customize keyboard shortcuts for various functions.

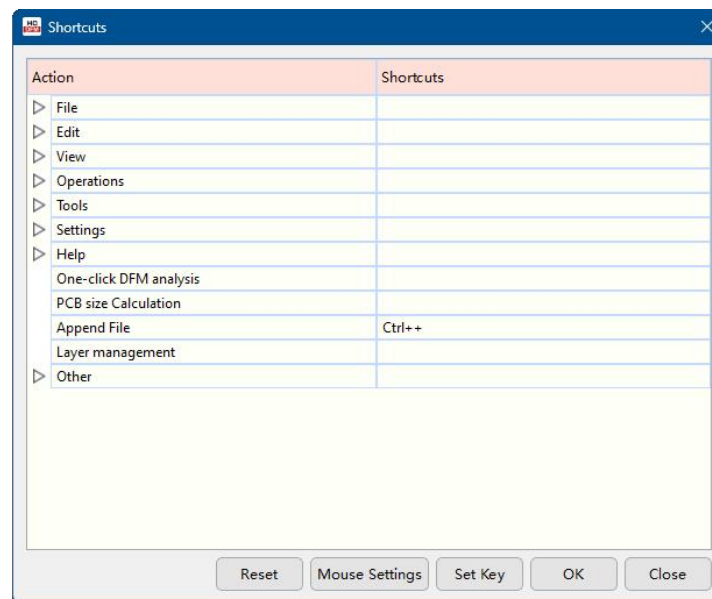


Figure 2-41: Shortcut settings window

2.2.8. Help menu functions

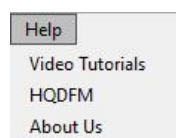


Figure 2-42: Help options

- a) **Video Tutorials:** Links to the HQDFM video tutorials web page
- b) **HQDFM:** Links to the HQDFM web page
- c) **About Us:** View software version and company information:



Figure 2-43: About us window

2.2.9. Online Support and Tutorials menu functions

Online Support: Shows the various contact methods to get in touch with NextPCB if you need any assistance with HQDFM or ordering.

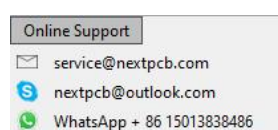


Figure 2-44: Online support contact methods

Tutorials menu functions: HQDFM User Manual opens the HQDFM User Manual web page.



Figure 2-45: Tutorials options

2.2.10. Rule Management: Customize DFM analysis thresholds for custom requirements (advanced). Custom rules can be exported and shared.

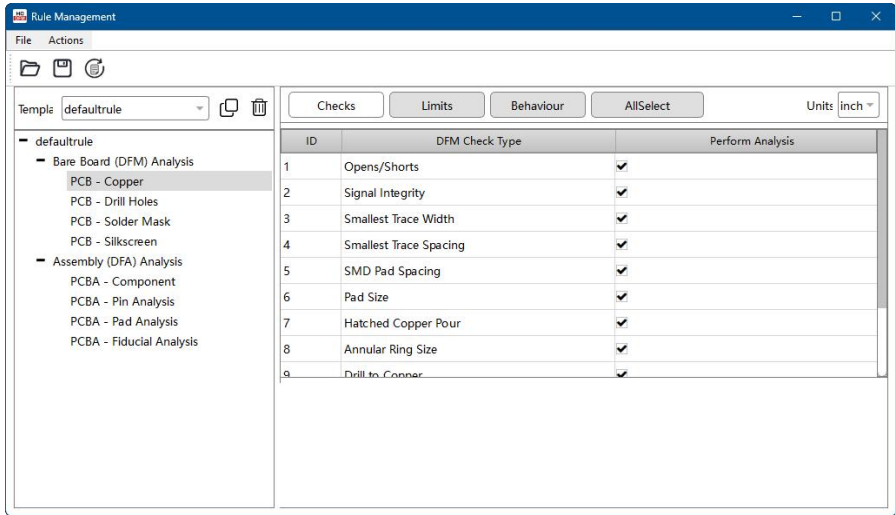


Figure 2-46: Rule Management window

Under the File menu, the custom rule settings can be imported or exported, under the actions menu, the rules can be reset to default settings.

	Open rule settings file
	Save settings
	Reset rules to default settings
	Copy Template
	Delete Rules

The rules are organized in a menu tree on the left. Click a sub-category to view and modify the analysis items on the right.

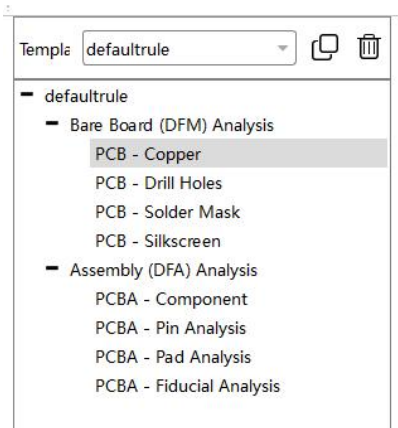


Figure 2-47: Rule Management categories

DFM Checks can be turned on and off by opening the Checks tab and checking the boxes on the right.

Open the Limits tab to change the analysis range.

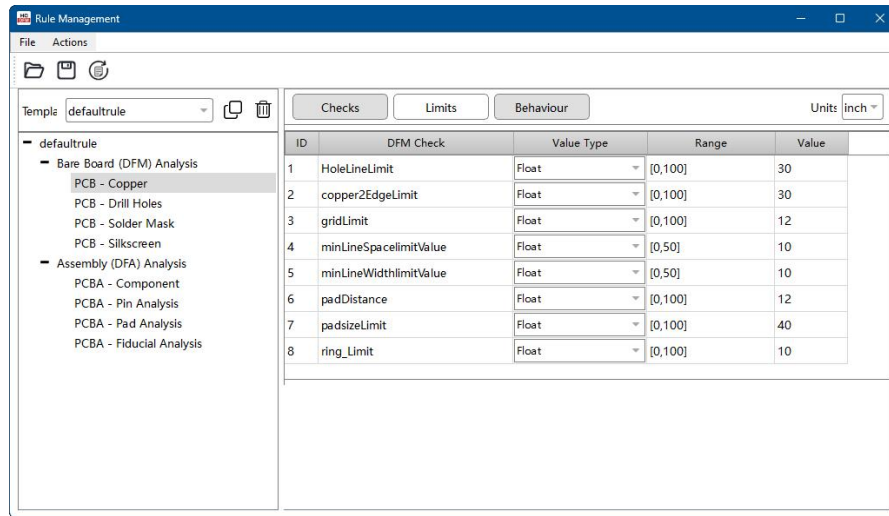


Figure 2-48: Analysis Limits settings

Click the Behaviour tab to modify the report warning thresholds and choose whether specific warnings are reported. For example, if the thresholds for minimum trace width are set as 3, 5, 6 mil:

Trace width < 3mil	High Risk (red)
3mil < Trace width < 5mil	Warning (yellow)
Trace width ≥ 5mil	Pass (green)

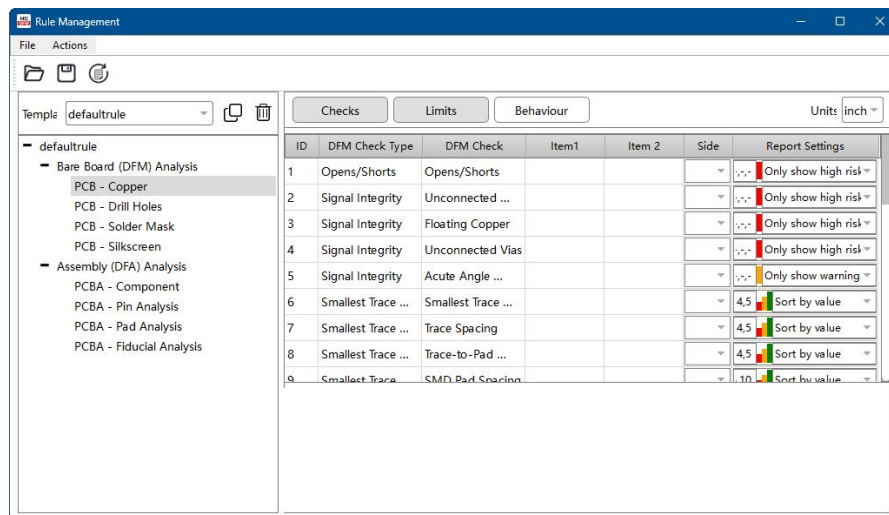


Figure 2-49: Report behaviour

2.3. Toolbar



Figure 2-50: The HQDFM toolbar

2.3.1. Toolbar functions

	Save as DFM File
	Open
	Export as PDF
	Zoom to Window
	Object Select
	Box Select
	Same-Layer Net Select
	Cross-Layer Net Select
	Trace Select
	Measure
	Smart Panelization
	Panelization Tool
	Count Solder Pads
	Impedance Calculator
	Compare IPC Nets
	Component Search
	Filter
	Pan Up
	Pan Down
	Pan Left
	Pan Right
	Zoom In
	Zoom Out
	Reset View
	Undo
	Redo
	3D Viewer

2.3.2. Left Side Panel

1. **DFM Analysis:** Perform one-click Design for Manufacture (DFM) analysis for the plain circuit board design based on Gerber files or ODB++ files.
2. **PCBA Analysis:** Upload and configure centroid and BOM files for PCB assembly (PCBA) Design for Assembly (DFA) analysis including footprint and BOM checking.



Figure 2-51: DFM and DFA one-click analysis

3. **CAM View/Real View:** Switch between the CAM view to view individual Gerber layers and a realistic view of the manufactured PCB.
4. **Create Profile:** Manually calculate the board dimensions when HQDFM fails to recognize the board outline correctly. Select the outline elements using the box tool and click Create Profile. If no objects are selected, the entire working layer will be used for outline creation. In the new window, select an algorithm and the generated outline will be shown in white along with the calculated board dimensions.

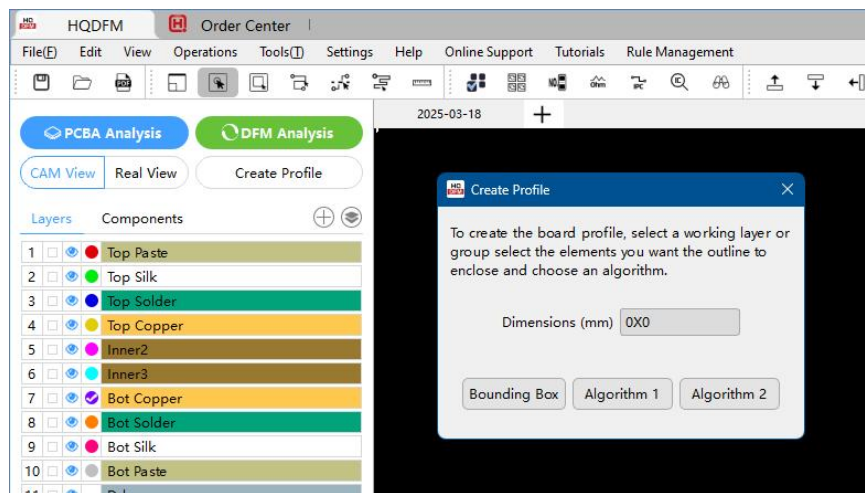


Figure 2-52: Create Profile dialog

2.4. Importing PCB Production Files

2.4.1. Board Definition

A double-sided board typically has copper, solder mask and silkscreen layers for both top and bottom sides. HQDFM defines a single-layer board as having a single copper layer without plated through-holes and may have solder mask and silkscreen on one or both sides.

2.4.2. Required layers and Layer Assignment

HQDFM will try to match uploaded files with defined layers in the table below based on the file name and file extension. If it fails to assign the layer, the layer will appear on the bottom of the list labeled with the full file name.

If multiple layers are matched for the same layer e.g. two top solder mask layers or multiple drill files, the names of subsequent layers have label appended at the end. Detected blind/buried vias files will be labeled with the numbers of the connected layers accordingly (e.g. 1-5 top layer to the 5th copper layer).

Full Name	HQDFM Name	Protel File Extension	Double-sided boards minimum	Notes
Top component layer	Top Comp	--		Generated by HQDFM when Centroid and BOM data are uploaded
Top paste layer	Top Paste	GTP	Optional	Paste layers are used to make stencils, these are not necessary for DFM analysis.
Top silkscreen (overlay) layer	Top Silk	GTO	Optional*	Some designs do not require silkscreen on one or both sides. Without silkscreen data, silkscreen related problems will not be analyzed.
Top solder mask layer	Top Solder	GTS	Required	
Top copper layer	Top Copper	GTL	Required	
Inner copper layer (copper layer 2)	Inner2	GL2	Required for multilayer boards	HQDFM adopts the naming convention where the top copper layer is referred to as copper layer 1, therefore the adjacent copper layer is copper layer 2 and so on.
Inner copper layer (copper layer #)	Inner#	GL#	Required for multilayer boards	
Bottom copper layer	Bot Copper	GBL	Required	
Bottom solder mask layer	Bot Solder	GBS	Required	
Bottom silkscreen (overlay) layer	Bot Silk	GBO	Optional*	See top silkscreen layer
Bottom paste layer	Bot Paste	GBP	Optional	See top paste layer
Bottom component layer	Bot Comp	--		See top component layer
Drill layer	Drl	DRL	Required	HQDFM uses the NC drill file in Excellon format for DFM analysis, not the drill drawing or drill guide/map. Multiple drill files can be uploaded for plated and non-plated holes etc.
Outline/mechanical layer	Outline	GKO/GML	Required*	Some designs include the board profile in other layers e.g. copper/silkscreen. This is not recommended as it can be misinterpreted. HQDFM will try to identify the primary mechanical layer if multiple mechanical layers are uploaded though it is recommended to include all profile elements in one mechanical layer.
Drill drawing	Drl Draw		Optional	Not used in DFM/DFA analysis
Drill guide/map	Drl Guide		Optional	Not used in DFM/DFA analysis
Milling layer	Slot		Optional	Not used in DFM/DFA analysis

2.5. Layer Navigation

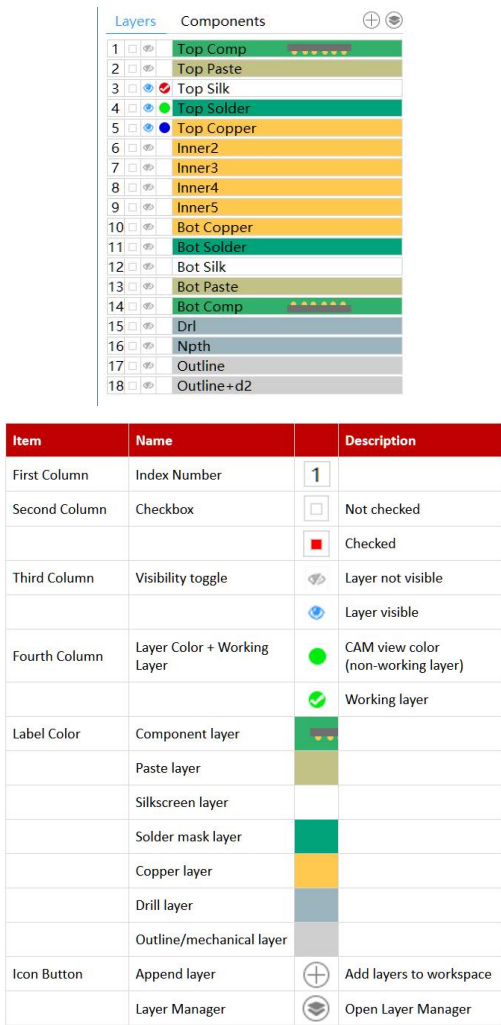



Figure 2-53: Meaning of icons and colors in the layer navigation panel

- Show layer:** Single-click a layer to toggle the layer visibility on and off in the workspace. The eye icon with a slash indicates the layer is hidden. The color of the circle represents the color of the layer in the workspace.
- Show only one layer:** Double-click a layer to open the layer and close all other layers. This layer is set as the working layer by default.
- Set working layer:** Click the colored circle of a layer to set it as the working layer.
- Sync layers:** Click the ☐ checkbox to toggle selection. Checked layers will also be affected by actions in the workspace as if they were the working layer.
- Show filename:** Hover over the layer name to show the original filename.
- Append layer:** After importing Gerber files, click the plus sign icon to import more files to the current list of layers. This can useful for comparing files before and after modifications. Layers with the same name will have “+n” appended to the file name.

7. **Open Layer Manager:** Click the layer icon  to open the Layer Manager window and change the layer properties including layer name, type, form and polarity. Drag the layers in the left list to rearrange the order.

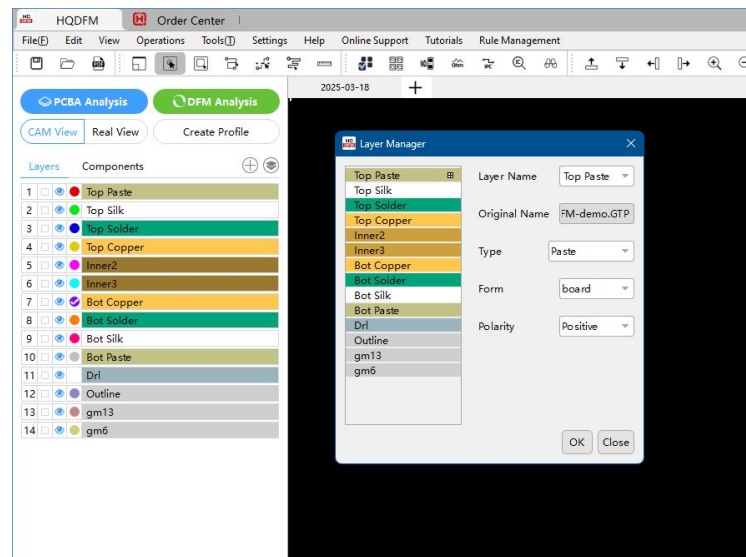


Figure 2-54: Layer Manager

2.5.2. Layer Navigation Panel Context Menu

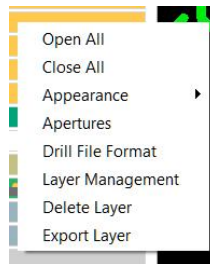


Figure 2-55: Layer navigation panel context menu

1. **Open All:** Open all layers in the workspace
2. **Close All:** Hide all layer in the workspace
3. **Appearance:**
 - **Set Color:** Change the color of the layer as it appears in the workspace CAM view.
 - **Show Traces:** Toggle show line objects such as traces.
 - **Show Pads:** Toggle show flash objects such as pads and solder mask openings.

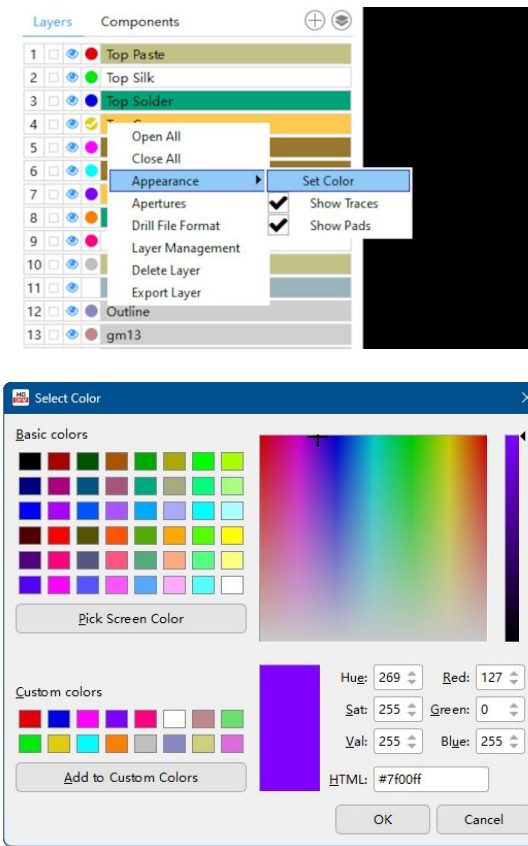


Figure 2-56: Layer color settings

4. **Apertures:** View the Aperture Table (Dcode) for the selected layer including size, polarity, quantity and highlight apertures in the selected layer.

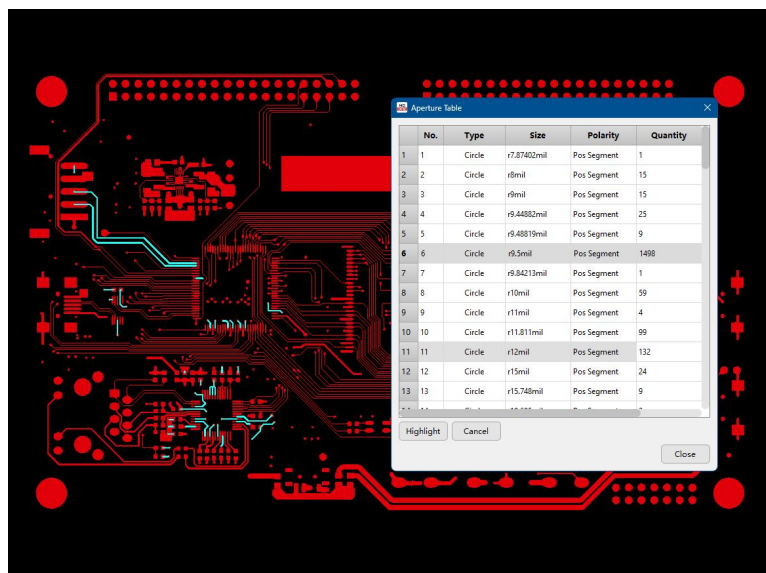


Figure 2-57: Aperture Table window

5. **Drill File Format:** View or change the import units for Excellon format drill files. Useful if HQDFM fails to detect the correct units or for extracting the units for other software and equipment.

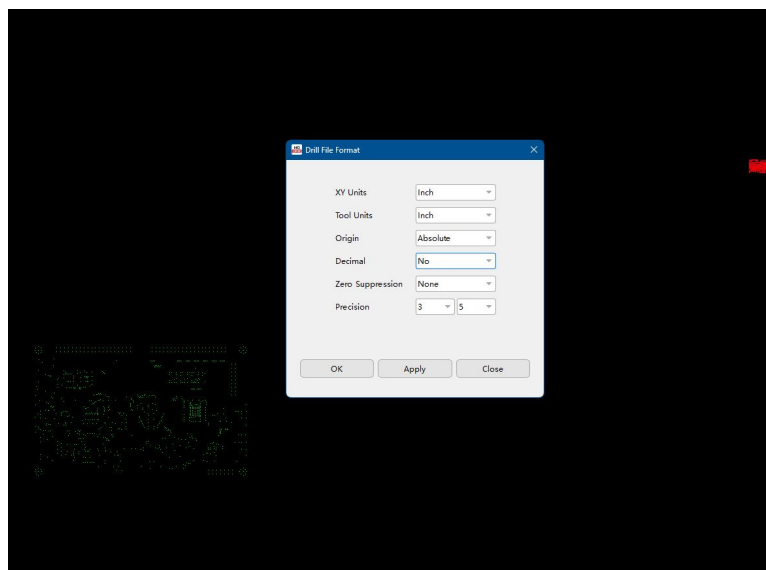


Figure 2-58: Drill file import units

6. **Export Layer:** Export the current layer including any modifications as a Gerber RS-274X file.

2.6. Ordering PCBs from NextPCB

2.6.1. Who are NextPCB?

NextPCB provides PCB manufacture and assembly services with a focus on reliability without breaking the bank. With 5 factories in China and over a decade of quick turnaround electronics manufacture from prototype to mass production, NextPCB serves over 160 countries around the world with dependable electronics hardware paired with exceptional service.

Developed by NextPCB, HQDFM was developed utilizing in-house factory-floor expertise and industry insights to help designers, purchasers, contract manufacturers visualize and verify PCB designs. With HQDFM, NextPCB hopes to help both sides simplify and streamline the design to manufacture workflow.

Bare printed circuit boards of your design from NextPCB can be ordered directly from within HQDFM. The cost estimate and production time for 5 boards is displayed on the bottom right hand corner of the main window. The quantity and other board features can be edited using the **[Board Settings]** menu.

Please note that the board settings only include the most common customization options however, there are many more options on the NextPCB website.

As of the latest version (HQDFM International 4.6), **only bare PCBs** without components or assembly can be ordered within HQDFM. For turnkey assembly, please visit www.nextpcb.com for online quotations and more.

2.6.2. Board Settings

The number of boards, surface finish, board thickness, copper thickness, solder mask color can be changed from the board settings window to see how different options affect production cost and time.

Layer count and dimensions are extracted from HQDFM and cannot be changed from here. If these are incorrect, please close the window and re-calculate the board profile or check that the all copper layers have been correctly identified.

Click [Apply] to see the updated price and production time. Please note these are estimates based on the extracted parameters and board settings. There are circumstances or features that HQDFM is unable to extract which may affect cost.

Settings stored in JSON format can be exported for backup, transfer, or sharing purposes.

2.6.3. Steps: How to order PCBs

1. Upload your design's production files (Gerber and drill or ODB++) in HQDFM.
2. Change boards settings if necessary
3. Any applicable discounts will be applied. Make sure you are logged in to apply discounts applicable to your account.

2.6.4. PCB cost and production time estimate calculation

HQDFM will calculate the production cost and time of bare PCB fabrication from **NextPCB** once production files have been loaded. This cost estimate is based on the layer count, PCB dimensions and the configuration set in the **Board Settings** menu.

A more detailed cost estimate can be obtained by performing **DFA Analysis**. This will extract other details such as **trace width and spacing, smallest drill hole size, smallest pad size, blind/buried vias, test point count and milling density**, all of which can affect production cost and time.

After performing DFA analysis, check for reported DFM errors, particularly for any of the items mentioned above.

If the cost is unusually high, compare the cost before and after performing DFM analysis. If the cost increases, there may be features in the design influencing the cost. Check DFM errors such as trace width and spacing, which may impact cost.

3. DFM Analysis

3.1.1. HQDFM can perform two types of analysis, PCB Design for Manufacture (DFM) and PCBA Design for Assembly (DFA):

1. **PCB Design for Manufacture:** Analyzes PCB production files to highlight errors and evaluate the manufacturability of the design using modern PCB fabrication methods.
2. **PCBA Design of Assembly:** Analyzes Centroid, BOM and footprint data against the PCB production files to highlight errors and evaluate ease of assembly with modern PCB assembly methods.

PCB Analysis	PCBA Analysis
Layer Count	4
Dimensions	144.99X90.00 View
Trace Width/Spacing	8/2mil+ View
Opens/Shorts	No errors detected View
Signal Integrity	Error(s) detected Check
Smallest Trace Width	8.000 mil View
Smallest Trace Spacing	2.150 mil Check
SMD Pad Spacing	No errors detected View
Pad Size	No errors detected View
Hatched Copper Pour	No errors detected View
Annular Ring Size	No errors detected 10.000 mil View
Drill to Copper	No errors detected View
Copper-to-Board Edge	No errors detected View
Holes on SMD Pads	No errors detected View
Drill Diameter	7.570 mil Check

Figure 3-1: DFM Results Panel for PCB and PCBA

3.2. Analysis Severity Levels

HQDFM's algorithms analyze manufacturing data (Gerber files, ODB++ files, Centroid data, and BOM) for errors affecting production, assembly, reliability, and cost, based on industry-wide PCB manufacturing and assembly capabilities.

As different manufacturers have different capabilities, HQDFM provides a three-tier error reporting system, where the highest tier includes critical errors that only the most advanced manufacturers can handle.

The three error severity levels are as follows:

1. **High Risk (Red)** - A red alert indicates a critical issue that needs immediate attention and likely design changes. These problems stem from design features that may surpass manufacturing capabilities, result in high defect rates, introduce significant complexity, or adversely affect the product's long-term reliability and performance.

Such designs are likely to be rejected by manufacturers or result in non-functioning or defective boards. Action is strongly recommended.

2. **Warning (Yellow)** - Yellow alerts indicate issues that require review. They may result in additional costs, a higher defect rate, lower reliability or assembly complications.

These designs may be rejected by less advanced manufacturers, incur additional expenses, extend lead times, or have hidden impacts on long-term reliability.

The severity of these issues varies and should be assessed based on the specific design requirements. Review and evaluation are recommended.

3. **Pass (Green)** - No errors were detected and the design is within the manufacturability limits of most PCB fabricators and assembly houses.

3.3. Types of DFM Errors

3.3.1. There are generally 6 types of errors that HQDFM will detect and report:

- a) **Design errors impacting functionality:** Issues such as shorts or open circuits that can compromise the board's performance. Errors affecting reliability or performance: Designs that can be manufactured but push the limits of acceptable tolerances.
 - Example 1: Insufficient copper spacing increases the risk of shorts over time due to Conductive Anodic Filamentation (CAF), where salts grow between copper elements along the PCB substrate, potentially bridging gaps.
 - Example 2: Inadequate copper-to-edge spacing can expose copper during board routing, making it prone to shorts, corrosion, and delamination over time.
- b) **Designs exceeding manufacturing capabilities:** Features that go beyond the technical limits of most production facilities.
- c) **Complex designs with high risks:** Features that introduce significant manufacturing challenges, potentially leading to high failure rates, additional costs, or extended lead times.
- d) **Manufacturing Compatibility:** Elements that may not be viable for mass production, specific assembly types, or general repair. For instance, wave soldering requires more design considerations than reflow soldering, and the absence of solder mask dams can complicate manual repairs even if they don't affect reflow assembly.
- e) **Gerber generation errors:** Issues arising during the translation of design data into Gerber files. Poor implementation or incorrect export settings can introduce errors not detected by the EDA tool's DRC (Design Rule Check), potentially leading to critical failures.

3.3.2. DFM/DFA Analysis Forewarning:

Due to the complexity and differences of manufacturing practices and the limited information available, the accuracy of the reported errors will vary on a case-by-case basis. As always, HQDFM is best used alongside expert review and manufacturer feedback. The following notes should be observed when using HQDFM analysis capabilities:

- **Data Availability:** HQDFM performs analysis on standardized production data commonly requested by manufacturers (Gerber/ODB++ 2D graphical data, component placement data and footprint information if available).
- **Other Information:** HQDFM does not know or make use of other information such as the intended assembly method (reflow/wave soldering), production volume (prototype/mass production), industry or certifications, functionality, design tools or any information included in other production

documentation including PCB parameters such as solder mask color or PCB material. As a result, HQDFM makes conservative assumptions and may appear overly cautious when reporting errors, although we try to limit this as much as possible. It is the user's responsibility to check and verify the accuracy of the reported errors based on their knowledge product's requirements and intended production methods. While HQDFM attempts to provide guidance in the form of tiered warning levels, the final decision rests with the user.

- **Non-standard Data:** Due to the limitations of 2D binary data formats and inconsistent EDA software implementations, non-standard Gerber, Excellon and ODB++ data may cause HQDFM to misinterpret certain features and provide false negatives or positives. In most cases, designer have limited control over these reported errors but many can be safely ignored. There is also a feature to ignore certain checks in HQDFM if needed.
- **HQDFM does not tell you if your boards are or are not manufacturable:** HQDFM is intended to complement DRC (Design Rule) checks and manual verification to reduce errors and optimize reliability and efficiency. Not all errors are related to manufacturability and so if errors are reported, this does not necessarily mean the boards cannot be manufactured or will encounter problems. Likewise, the absence of errors does not necessarily mean your boards **can be manufactured**.

Manufacturer capabilities and preferences vary and while new algorithms are being developed or improved all the time, HQDFM is not able to detect all possible manufacturing problems.

3.4. How to perform DFM Analysis in HQDFM

3.4.1. Perform DFA Analysis:

1. **Upload production data.** A set of Gerber and drill files or ODB++ files must be uploaded in order for the algorithms to perform correctly. See table # for the required Gerber and drill files.
2. Click the green **[DFA Analysis]** button on the left panel and wait for analysis to finish. Larger, more complex files will take longer to process.



Figure 3-2: PCBA Analysis and DFA Analysis buttons

3. The results of DFM and DFA review will be shown on right side of the workspace. Clicking the **[View]** or **[Check]** button will open the corresponding pop-up window and/or change the workspace view.

PCB Analysis	PCBA Analysis
Layer Count	4
Dimensions	144.99X90.00 View
Trace Width/Spacing	8/2mil+ View
Opens/Shorts	No errors detected View
Signal Integrity	Error(s) detected Check
Smallest Trace Width	8.000 mil View
Smallest Trace Spacing	2.150 mil Check
SMD Pad Spacing	No errors detected View
Pad Size	No errors detected View
Hatched Copper Pour	No errors detected View
Annular Ring Size	No errors detected 10.000 mil View
Drill to Copper	No errors detected View
Copper-to-Board Edge	No errors detected View
Holes on SMD Pads	No errors detected View
Drill Diameter	7.870 mil Check
Drill Spacing	No errors detected View
Drill to Board Edge	No errors detected View
Drill Hole Density	834 holes; 63912.00/m ² View
Special Drill Holes	No errors detected View
Drill Hole Errors	Error(s) detected Check
Solder Mask Dam	0.000 mil Check
Missing SMask Opening	No errors detected View
Solder Paste Area	T=11.300, B=7.384 View

Figure 3-3: PCB DFM Analysis items

4. It is recommended that all **high risk** and **warning** errors reported by HQDFM are checked by clicking **[Check]** and viewing the issues in the DFM/DFA navigation window.

3.4.2. DFM/DFA Navigation Window

The DFM/DFA navigation window shows the details of any identified problems and can be used to pan to the location of the occurrence in the workspace.

- Layer:** Layers/sides where issues were found will be shown here. Click an individual layer to show the issues in that layer/side only, e.g. top or bottom side.
- Analysis Item:** Sub-items of the main analysis item will be shown here. Click a sub-item to show the occurrences on the right.
- Occurrence:** All occurrences of the sub-item will be listed here. Click a field or use the navigation buttons to zoom in and/or pan to the occurrence according to the navigation settings. The offending elements will be highlighted and lengths will be indicated by a white line.
- Navigation settings:** Select how the workspace view changes when an occurrence is selected.
 - **Auto Zoom** (default): Pan and zoom into the location of the occurrence.
 - **Pan Only:** Only pan to the location of the occurrence. The previous zoom level is preserved.
 - **Pop Up:** Displays a pop-up viewer over the workspace zoomed in on the location of the occurrence.
- Error Display settings:** Choose whether to show **High Risk** errors (!!), **Warnings** or show all possible analysis items in the current category (Show All).
- Limits:** The current analysis item's threshold limits (Red - Yellow - Green)

g) **Description:** Text description detailing the error and any extracted values.

h) **Graphic:** A supporting graphic for the analysis item.

3.5. DFM Analysis Examples

3.5.1. Layer Count

Display of the number of copper layers in the design. HQDFM will infer the layer count by counting the number of copper layers imported into the workspace. If this is incorrect, HQDFM may have failed to assign a copper layer. Manually assign unmatched layers and re-run DFM analysis.

3.5.2. Dimensions

Display of the board dimensions calculated from the imported design. This is calculated from the board profile. If this is incorrect or empty, the board outline may be missing or not located in a dedicated outline layer. Export the outline from the design tool or use the **Create Profile** tool to reconfigure the profile.

3.5.3. Trace Width/Spacing

Display of the smallest trace width/spacing in the design. This is calculated from all the copper layers uploaded in the design. Order forms often request the minimum trace width/spacing to provide a quotation and gauge the technical complexity of a design. The largest value displayed is 8mil (0.2mm) even if the smallest width/spacing is greater than this.




For details, refer to the individual Smallest Trace Width, Smallest Trace Width analysis items below.

3.5.4. Opens/Shorts

Clicking **[View]/[Check]** opens the **Compare IPC Netlist** tool. If the netlist file was already uploaded with the Gerber files, this check will run automatically.

3.5.5. Signal Integrity


Signal integrity problems are related to the circuitry. They are not necessarily related to manufacturing but may have a significant impact on functionality or performance.

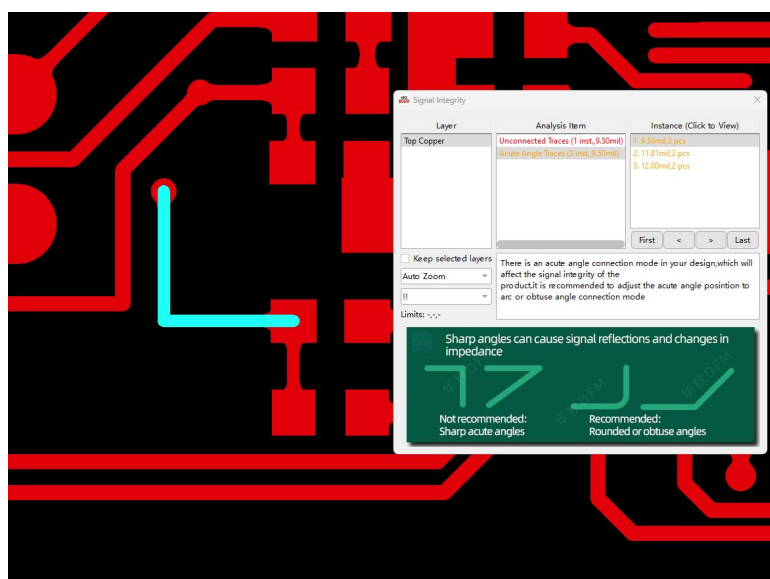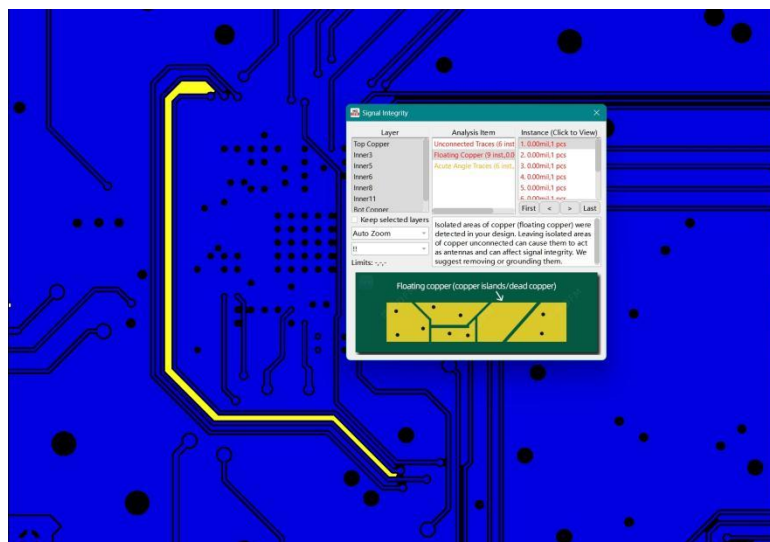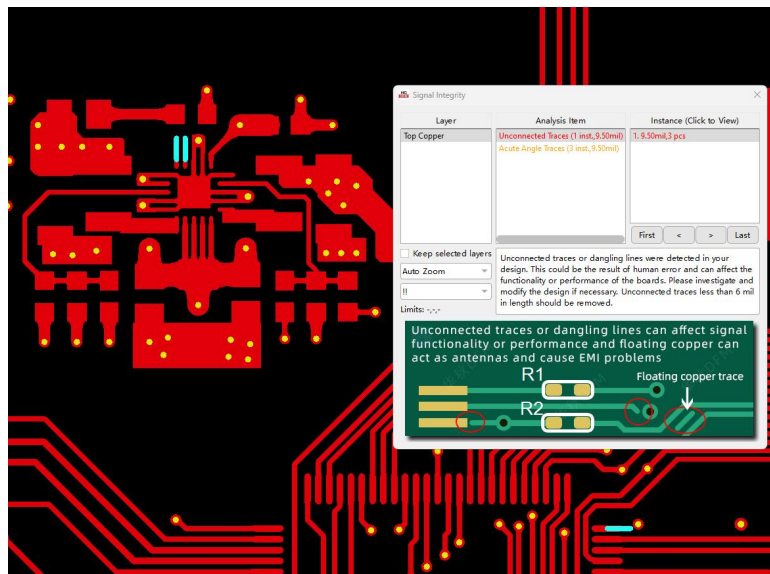

3.5.6. Smallest Trace Width

The width of the narrowest copper trace in the design. Each PCB fabricator has a minimum capability typically stated on their website or design specifications. Designing traces narrower than this specified minimum can lead to an exceptionally high defect rate (e.g. broken or incomplete traces) or outright rejection of the design by the manufacturer.


Designing near a manufacturer's limits should also be avoided whenever possible, as it can lead to increased costs, added manufacturing complexity, and a higher-than-normal defect rate.

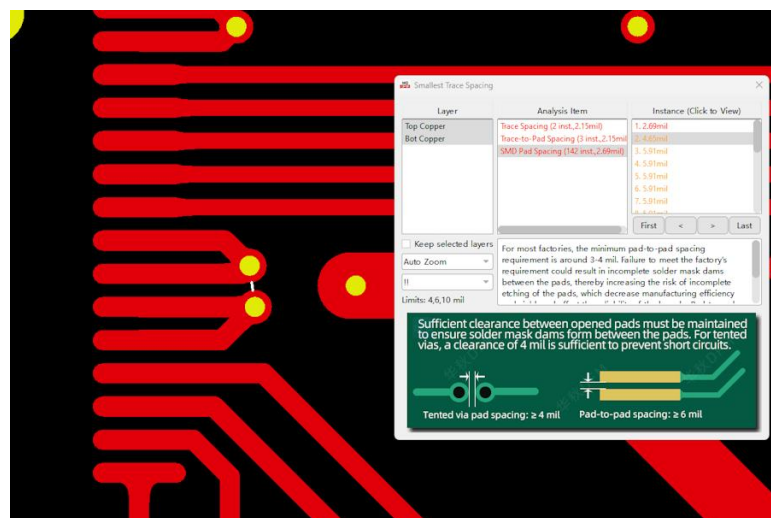

3.5.7. Smallest Trace Spacing

The smallest distance between two copper traces or other copper elements of different nets in the design. Like trace width, each PCB fabricator has a minimum capability typically stated on their website or design specifications. Traces closer than this specified minimum can lead to an exceptionally high defect rate (e.g. incomplete etching and short circuits) or outright rejection of the design by the manufacturer.

Designing near a manufacturer's limits should also be avoided whenever possible, as it can lead to increased costs, added manufacturing complexity, and a higher-than-normal defect rate.

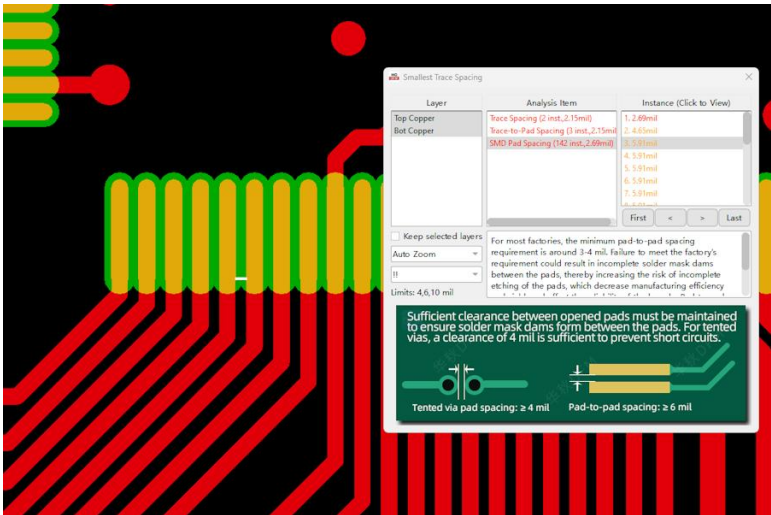


3.5.8. SMD Pad Spacing

The distance between open pads of surface mount parts.

3.5.9. Pad Size

The size of open pads on the design. If pads are too small, they become harder to etch accurately and may detach more easily. Additionally, pads that are undersized can pose challenges during testing, as they may be too small for testing probes to establish consistent and reliable electrical contact.



3.5.10. Annular Ring Size


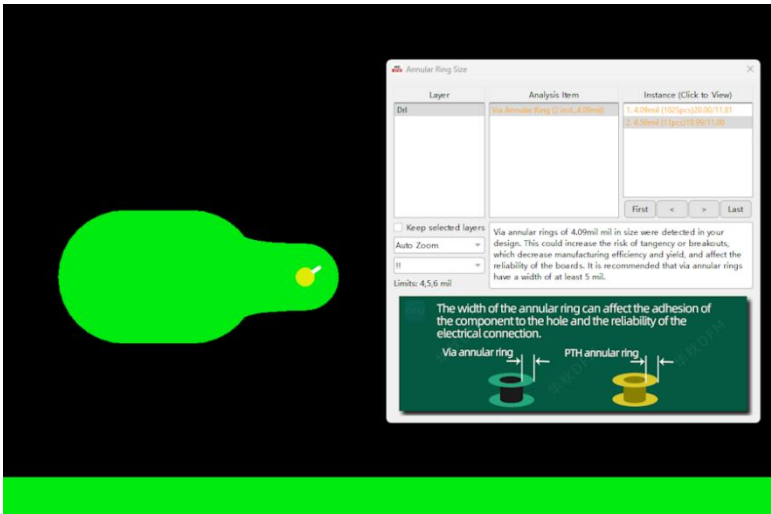


3.5.11. Drill to Copper





3.5.12. Holes on SMD Pads

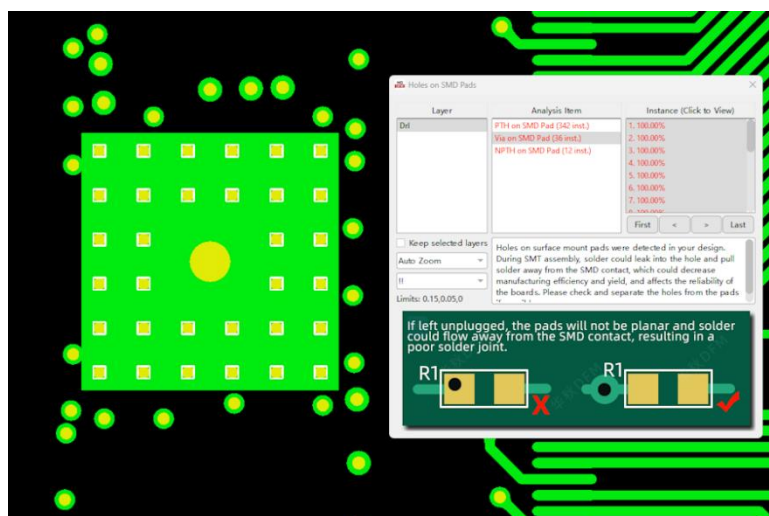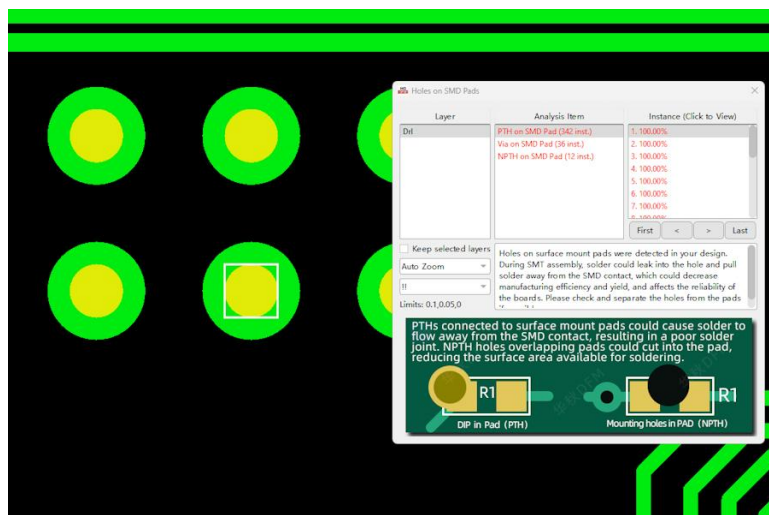

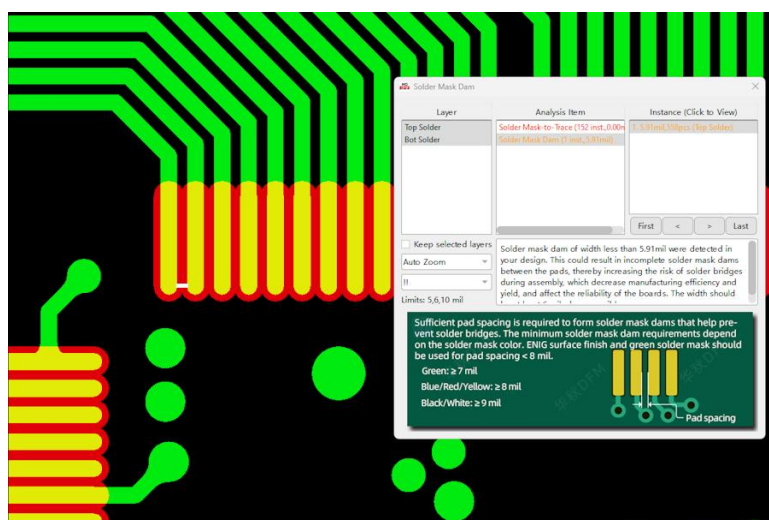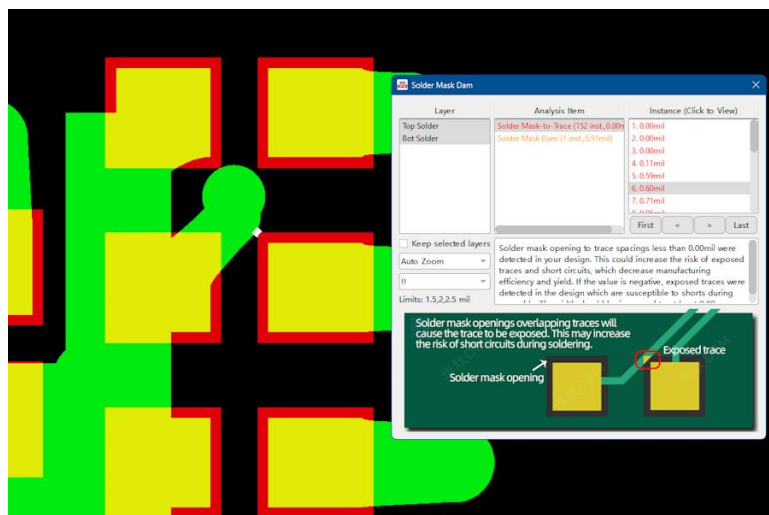

3.5.13. Missing SMask Opening

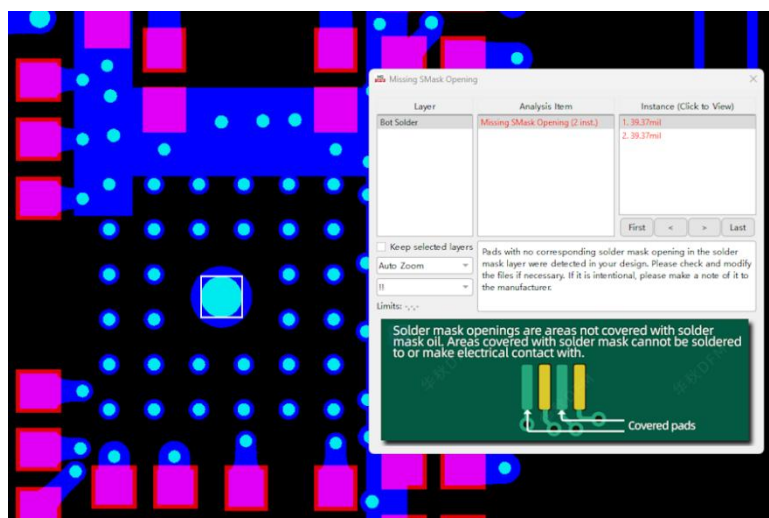

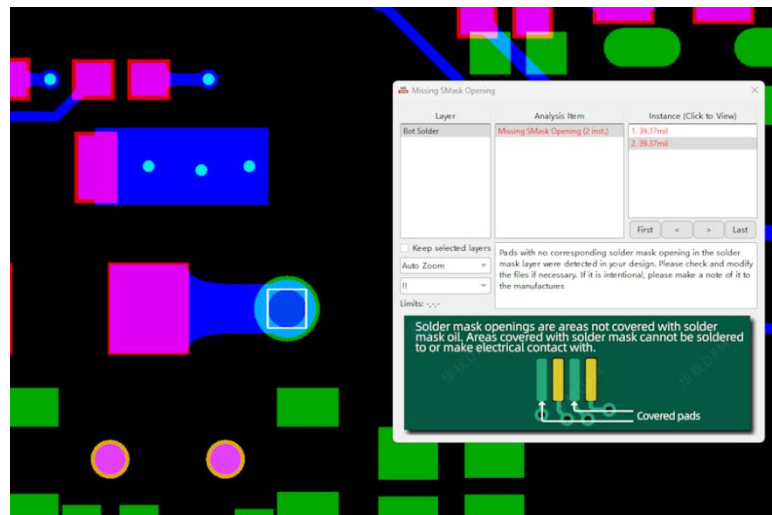

4. Design for Assembly (DFA) Analysis

4.1. What is DFA?

DFA stands for Design for Assembly, and in the electronics hardware manufacturing industry, *assembly* typically refers to the stage of populating a bare circuit board with components. Like DFM for bare PCB boards, DFA provides design guidelines to optimize the assembly of a product in terms of yield, efficiency, reliability and cost.

In addition to PCB Design for Manufacturability, HQDFM also has advanced DFA capabilities and tools, giving design engineers a complete suite for optimizing the entire electronics manufacturing and assembly process from the outset.

Like DFA Analysis, HQDFM can perform over 600 detailed DFA checks in 12 categories based on IPC guidelines and NextPCB's own assembly experience. HQDFM also has a powerful footprint checker with over 5 million package libraries and counting, maintained by over 20 full-time engineers, and is also equipped with other tools such as the handy BOM checker and centroid file editor, helping engineers cut down on mundane administrative tasks and human errors.

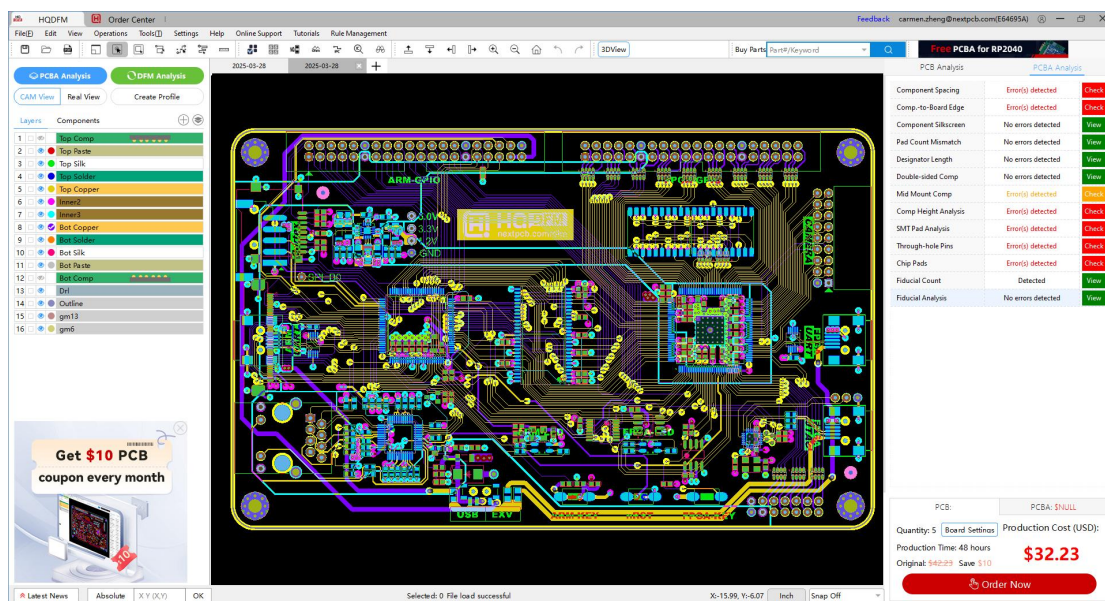


Figure 4-1: Main interface after PCBA DFA analysis

With the addition of DFA analysis capabilities, HQDFM is a complete suite for engineers to produce effective prototypes fit for market, accelerating and streamlining product development with minimal waste.

4.2. DFA File Requirements

For DFA analysis, in addition to bare PCB production files, the Bill of Materials (BOM) and component centroid, also known as pick and place, data is also needed.

- 4.2.1. **PCB Production Files:** Include PCB Gerber files in RS-274x or X2 format and PCB drill files in Excellon format. Direct KiCad (.kicad_pcb) upload is also supported.

Gerber Files/Drill files: As for DFM analysis, import Gerber and drill files by clicking New File and selecting all files or the archive file containing the files. You can also drag and drop the files from file explorer directly.

ODB++ files: Open ODB++ production files by dragging them into the workspace or clicking the “New File” button and selecting the file.

4.2.2. Bill of Materials (BOM):


The bill of materials or BOM file contains a list of all the components to be populated onto the PCB with their respective quantities and designators, or labels per individual board or panel.

Other information is often included such as package name, description, purchase link, value, alternative parts etc. and other PCB features may be included such as test points and fiducial marks which do not require procurement or soldering.

Like Gerber files, many EDA packages support internal editing of a BOM file which can then be exported, though the format, content and labels will vary across packages. A template can be downloaded from the wizard.

To perform DFA analysis and footprint checking, HQDFM requires the BOM file to include the following three pieces of information at the bare minimum:

- a) **Manufacturer’s Part Number (MPN):** This is the unique part number assigned by the manufacturer for a specific product. It should not be confused with the distributor’s SKU number such as Digikey Part Number or LCSC Part #.

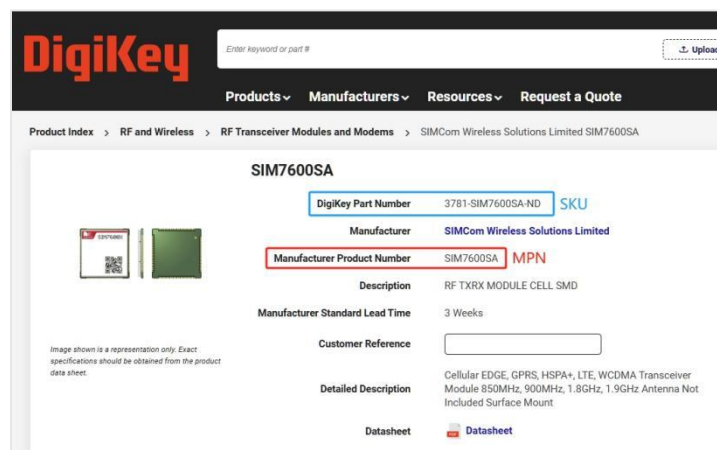

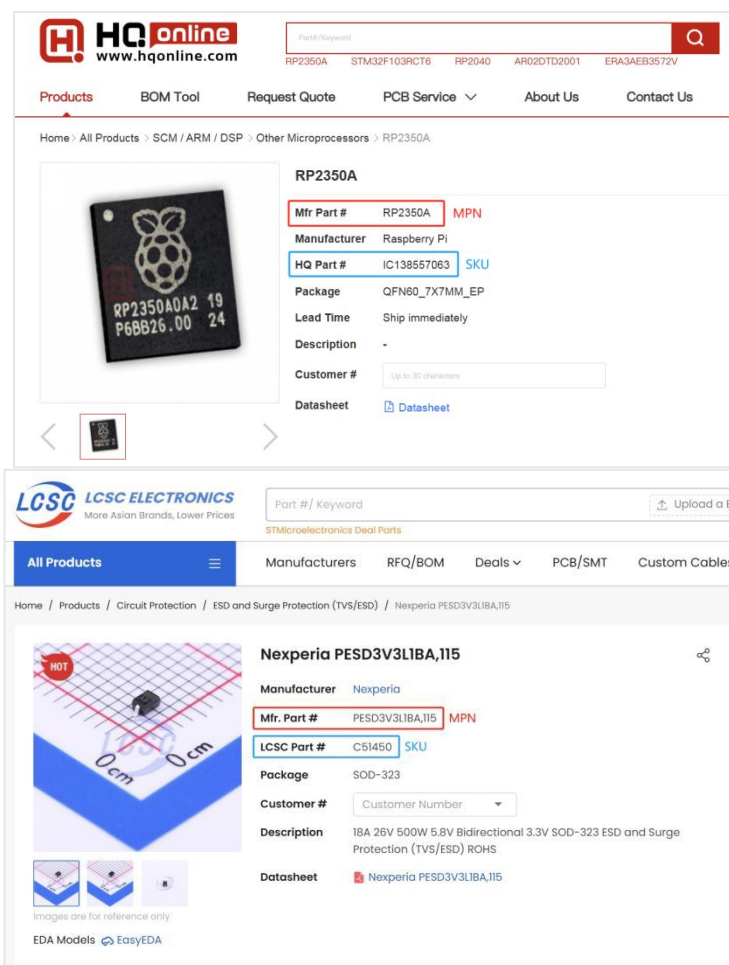


Figure 4-2: Screenshot showing the SKU and MPN values of a component on Digikey, HQ Online and LCSC

- b) **Designator:** The designator is the unique identifier assigned to each component on a PCB (Printed Circuit Board). It helps to identify and locate the specific components during assembly, testing, and troubleshooting.

Resistors: R1, R2, R3..

Capacitors: C1, C2, C3..

Integrated Circuits (ICs): U1, U2, U3..

Diodes: D1, D2, D3..

- c) **Quantity:** This indicates the total number of pieces of a component needed for the board. Since a PCB BOM file typically corresponds to a single non-panelized board, the quantity should match the total number of designators listed for that part.

4.2.3. Centroid files:

Centroid files, also referred to as **pick and place files** or **component placement files**, are used by pick and place machines to accurately position and orientate surface mount parts on a PCB. The file typically includes a list of the **X-Y coordinates**, **rotation angles** and **side (top/bottom)** information for all surface-mount parts and may also list through-hole parts, test points and fiducials.

Centroid files are exported from the EDA software and may have customization options such as splitting the data into separate files for top and bottom sides, or include through-hole parts, which is preferred by some manufacturers.

These files are typically exported in excel spreadsheet, text or csv file format. HQDFM accepts files

in .xls, .xlsx, .csv and .txt file formats and at the bare minimum, the **Designator**, **X-Y coordinates**, **rotation** and **side** information is required. A template can be downloaded from the wizard for reference.

For DFA analysis, the centroid file should contain all parts on the board (top and bottom) in a single file along with through-hole parts if possible. Without location information for through-hole parts, HQDFM cannot perform DFA analysis on them.

```

File Design Information:
Date: 23/05/23
Time: 16:27
Revision: Not in VersionControl
Variant: No variations
Units used: mm

Designator,Comment,Layer,Footprint,Footprint Description,Center-X(mm),Center-Y(mm),Rotation,Description,ComponentKind,Height(mm),Ref-X(mm),Ref-Y(mm),Pad-X(mm),Pad-Y(mm),Variation
U12,GD32F150Gx,TopLayer,QFN40P400X400X55_HS-29N,"QFN, 28-Leads, Body 4.00x4.00mm, Pitch 0.40mm, Th", -407.861, -203.8361, 90, Standard, 0.55, -407.861, -203.8361, -409.061, -205.8361, Fitted
U2,AL3510LG144C7,TopLayer,TSQFP40P1800X1800X140_HS-145M,"TSQFP, 144-Leads, Body 16.00x16.00mm, Pitch 0.40mm", -417.3537, -179.2121, 90, Standard, 1.4, -417.3537, -179.2121, -424.3537, -188.0121, Fitted
R50,22,TopLayer,RES1608,, -399.007, -199.6619, 0, Standard, 23, -399.007, -199.6619, -399.732, -199.6619, Fitted
U15,TS3A5018,BottomLayer,TSOP65P640X110-16N,"TSOP, 16-Leads, Body 5.00x", -441.6616, -201.8379, 180, TS3A5018, Standard, 1.1, -441.6616, -201.8379, -438.6616, -199.5629, Fitted
S3,Button2P(SMT),TopLayer,SW2P3X6X2.5(SMD), -433.067, -216.9001, 270, Standard, 2.2, -433.067, -216.9001, -429.867, -216.9001, Fitted
R72,10K,BottomLayer,RES1608,, -468.8904, -143.6073, 270, Standard, 23, -468.8904, -143.6073, -468.8904, -142.8823, Fitted
R71,1.5K,BottomLayer,RES1608,, -411.707, -209.6234, 270, Standard, 23, -411.707, -209.6234, -411.707, -208.8904, Fitted
C84,100nF,BottomLayer,CAP1608,, -406.8128, -202.2559, 90, Standard, 23, -406.8128, -202.2559, -406.8128, -202.9809, Fitted
R34,110K,TopLayer,RES1608,, -500.507, -161.5121, 90, Standard, 23, -500.507, -161.5121, -500.507, -162.2371, Fitted
RP15,RP4_22,BottomLayer,RCAP3-4D(0603)_8N,"TSOP, 8-Leads, Body 3.2x1.0mm", -401.664, -211.7033, 270, Resistor4SMT, Standard, 0.45, -401.664, -211.7033, -402.864, -210.9283, Fitted
RP14,RP4_22,BottomLayer,RCAP3-4D(0603)_8N,"TSOP, 8-Leads, Body 3.2x1.0mm", -397.364, -211.7033, 270, Resistor4SMT, Standard, 0.45, -397.364, -211.7033, -398.564, -210.9283, Fitted

```

Figure 4-3: Sample centroid/pick and place file exported from an EDA tool

HQDFM uses the three above sets of files to determine the location and rotation of parts, which parts require assembly and their respective footprints on the PCB board. These are necessary to perform footprint checking, BOM checking and DFA analysis.

4.3. How to perform DFA Analysis in HQDFM

4.3.1. Steps:

1. First import the PCB design into the workspace by importing the **Gerber/Drill files** or **ODB++ file**.
2. Then click the blue **[PCBA Analysis]** button on the left panel to open the **DFA Analysis wizard**.

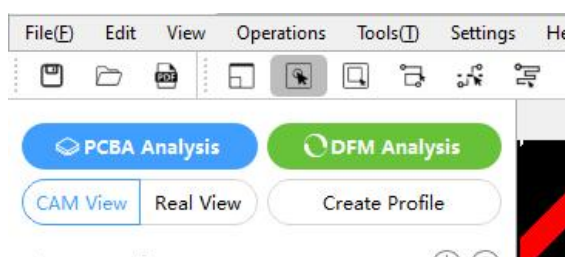


Figure 4-4: PCBA and PCB DFM Analysis buttons

4.3.2. The wizard is separated into 5 steps as indicated at the top of the window:

1. **Centroid:** Import and configure the centroid file
2. **Import BOM:** Import and configure the Bill of Materials file
3. **Match Parts:** Perform parts matching with HQ's package database and view detected errors.
4. **Part Type:** Modify part types property of matched parts for accurate DFA analysis

5. **Direction:** Set the direction of travel in assembly equipment

 


Figure 4-5: DFA Analysis steps

At any point, you may search for a specific part by entering its designator in the search bar on the top right. File header and package matching settings can be changed by clicking the **[Match Settings]** button.

 


Figure 4-6: Search Component search bar and Match Settings options

For a basic DFA analysis, you can utilize the wizard to upload and set up the centroid and BOM files, and skip the other steps. The subsequent section will provide a detailed explanation of each part of the wizard and its functionality.

4.4. Centroid File

4.4.1. Steps:

1. **Load Centroid File:** Import centroid files by clicking the [Load Centroid File] button and either browse for the file or drag and drop it directly into the window. Once imported successfully, the wizard will display a preview of the centroid data in a spreadsheet format.

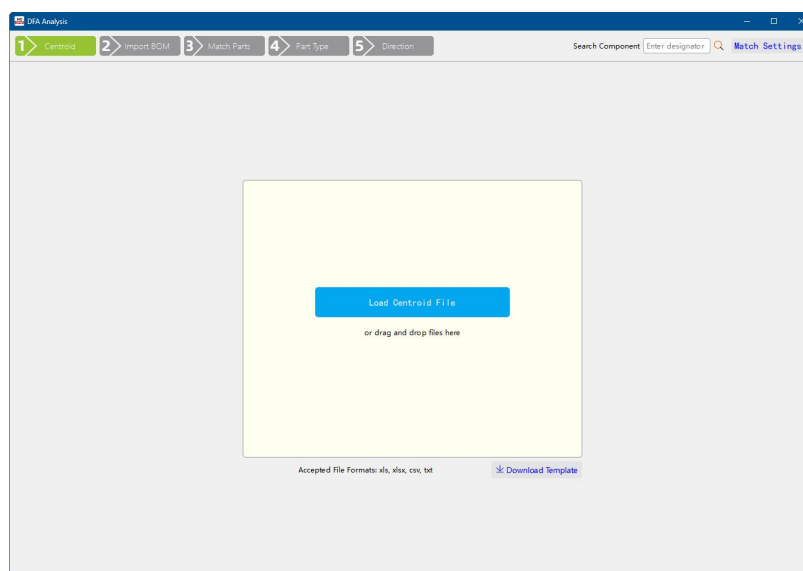


Figure 4-7: Load Centroid File stage

2. **Assign headers:** The headers in the centroid file must be correctly assigned for accurate analysis. HQDFM will try to identify the headers by matching them with keywords saved in the database. If they are incorrect, click the drop down box and select the correct fields.

Tip: If a field has already been used, it will not appear in other drop down boxes. Free it up by first changing the incorrect value to the default letter value.

3. **Remove extra rows:** Remove empty row entries that do not contain centroid information such as extra header information that has not already been removed by HQDFM by clicking **[Delete]**. Rows and columns can be added or deleted by right-clicking the row number or column header and using the context menu.

You can also add rows and columns and edit the contents of the BOM file by double-clicking the cell.

- a) The original file contents can be viewed by selecting the **Original** tab and you may start again or change files by clicking the **[Re-upload]** button and uploading files again.
- b) Click **[Next]** button or the **[Render Image]** on the right to generate the component layer which is shown on the right preview windows for both top and bottom sides. The component layer consists of place-markers and basic part outlines if available, which is overlapped on top of the PCB pads in the preview windows. Use this to verify correct placement and orientation.

The preview allows for zooming in and out, scrolling and panning just as in the main workspace, and clicking a row in the spreadsheet will zoom into the corresponding location in the workspace. If the placement is correct, click **[Next]** again.

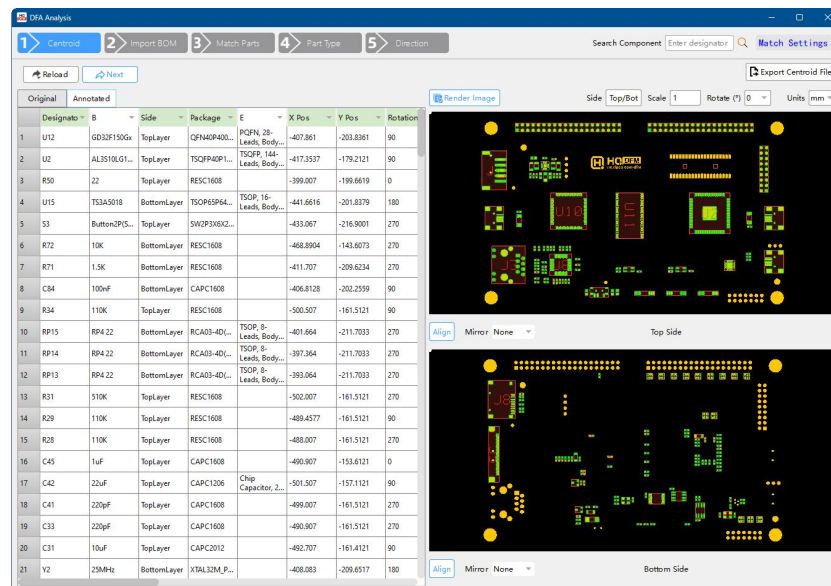


Figure 4-8: Centroid file editing interface

- c) If the top and bottom values are not identified correctly, the matching keywords can be viewed and modified by clicking the **Side** box. To add new keywords, type them in the relevant field and separate them with a comma.

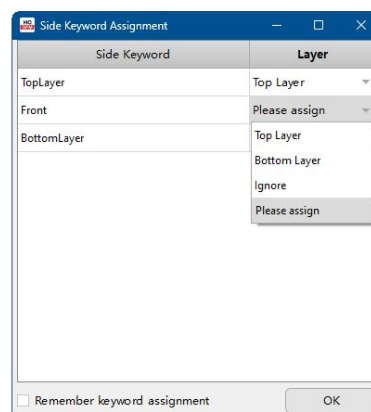


Figure 4-9: Top/Bottom side keyword assignment window

4.4.2. Editing Centroid Files

The following centroid file editing features apply to the entire centroid file i.e. all values in the list are changed. For individual component changes, the values in the spreadsheet can be modified directly by double-clicking the cell. Click the Render Image button to update the preview windows.

- **Scale:** Changes the XY coordinates by a scale factor. The default value is 1. This is useful if the centroid and PCB production data have different scales.
- **Rotation:** Changes rotation angle by a fixed amount. This is useful if the PCB data was rotated for panelization for example, in which case the centroid data should also be rotated.
- **Units:** Converts the XY coordinate values into other units. Units in mm, inch and mils are supported.
- **Align:** Opens the Align tool to graphically align the component layer with the PCB pads, then converts the centroid file XY coordinates accordingly.
- **Mirror:** Reflects the component layer in the X or Y axes. To reflect in both axes, select one after the other.

The edited centroid file can be exported .xlsx format using the **[Export Centroid File]** button. Choose which columns to export with the **[Add Column]** and cross buttons and customize the sequence by dragging them to the desired position.

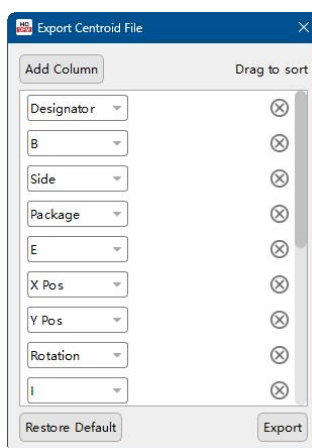


Figure 4-10: Export Centroid File interface

The exported Centroid file contains the contents of the Annotated File after post-processing and any adjustments made.

4.4.3. Align Tool

Use the align tool when the entire component layer is displaced by a fixed distance. Follow these steps to perform alignment:

1. Open the align tool by clicking **[Align]**
2. Click **[Select Part]** and click a part in the component layer, preferably a symmetrical part with few pads. The selected part will be highlighted and the designator will be shown next to the button.
3. Click **[Select Pads]** and click the pad or pads *whose centre is the selected component's origin*. E.g. the two pads of a chip resistor, or an IC's central thermal pad. Highlighted pads will be shown in blue. Multiple pads can be selected by holding the Ctrl key while clicking the pads. Check the **Sync bottom layer** box to move

the bottom layer by the same distance if desired, then click Align.

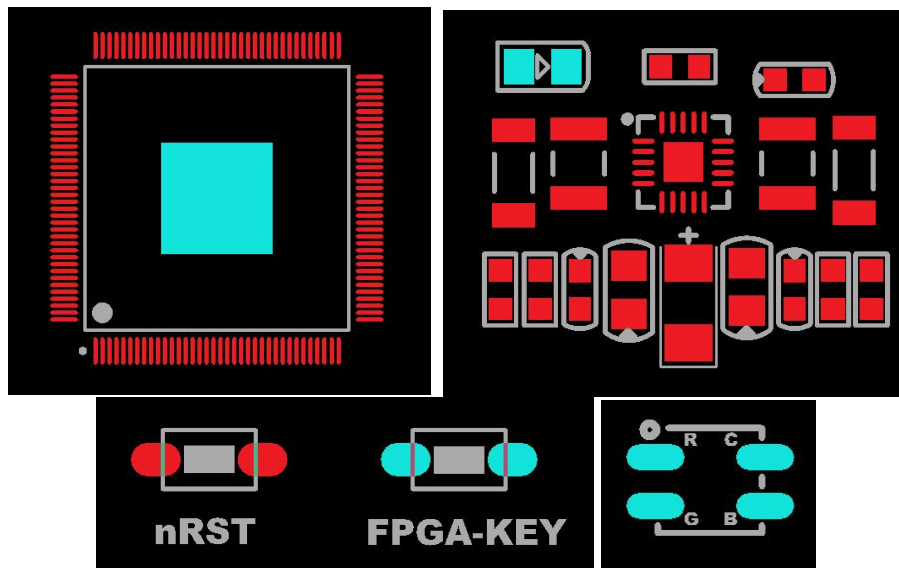


Figure 4-11: Examples of simple components with good pad symmetry and selected pads suitable for defining the component origin.

4.5. Bill of Materials (BOM) file

4.5.1. Load BOM file

1. Similar to loading Centroid files, import BOM files by clicking the Load BOM File button and browsing for the file or dragging it into the window directly. Upon successful import, a preview of the BOM data in spreadsheet form will be shown in the wizard.

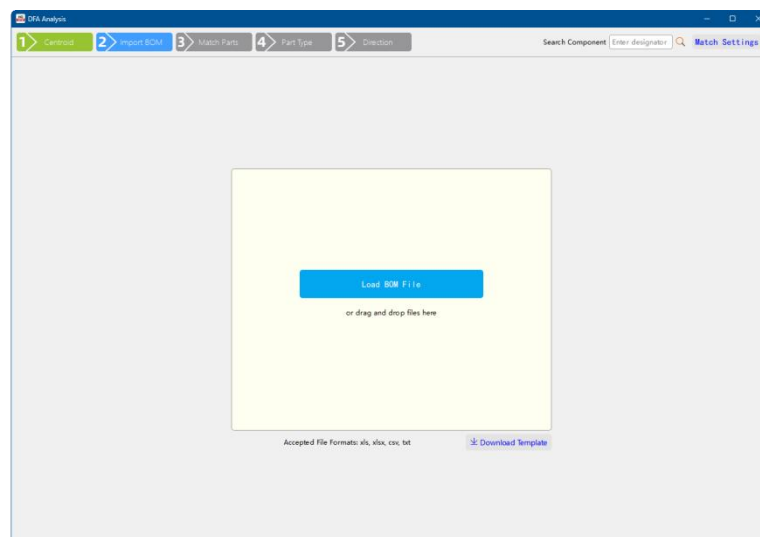


Figure 4-12: Load BOM File stage

- b) Again, assign the headers manually if incorrectly matched by HQDFM by selecting them from the drop down box. The more information available to HQDFM the better the analysis results.

No.	Value	Description 1	Designator	Package/Foot	Quantity	Manufacturer	MPN	Analysis	Action
1	100nF	Capacitor	C1, C2, C3, C4, C5, ...	CAP0603	15	VAGCO	CC0603K07078104	Not analyzed	Check Del
2	100nF	Capacitor	C6, C7, C8, C9, ...	CAP0603	15	VAGCO	CC0603K07078104	Not analyzed	Check Del
3	100nF	Capacitor	C10, C11, C12, C13, ...	CAP0603	15	VAGCO	CC0603K07078104	Not analyzed	Check Del
4	4.7uF	Capacitor	C14, C15, C16, ...	CAP0603	3	FH	0603H47K0300NT	Not analyzed	Check Del
5	1uF	Capacitor	C17, C18, C19, ...	CAP0603	6	FH	0603H10K0300AT	Not analyzed	Check Del
6	10uF	Capacitor	C20, C21, C22, ...	CAP0603	2	FH	0603H10K0300AT	Not analyzed	Check Del
7	220pF	Capacitor	C23, C24, C25, ...	CAP0603	2	Murata	GRM1885C1H200CA1D	Not analyzed	Check Del
8	22uF	Capacitor	C26, C27, C28, ...	CAP1206	4	FH	1206C220M160NT	Not analyzed	Check Del
9	22uF	Capacitor	C29, C30, C31, ...	CAP0603	1	Walsin	W603H10K0300CT	Not analyzed	Check Del
10	6.8uF	Capacitor	C32, C33, C34, ...	CAP0603	2	FH	0603C680K0300NT	Not analyzed	Check Del
11	10uF	Capacitor	C35, C36, C37, ...	CAP0603	1	FH	0603H10K0300NT	Not analyzed	Check Del
12	330LED	LED	D1, D2, D3, D4, ...	3528	2	MEHUA	MHRA3338R0BCT	Not analyzed	Check Del
13	5MBU5.0	Schottky Diode	D5, D6, D7, D8, ...	DO-214AA(SMB)	1	WPIHua	5MBU5.0A	Not analyzed	Check Del
14	LED0805RED	LED red 0805	D9, D10, D11, D12, ...	LED0805RED	1	TDGIALED	TS-52012R08H-QVY-A3	Not analyzed	Check Del
15	D15_LED2	LED	D13, D14, D15, ...	SMD_0-254MT	2	Chance	GS2020	Not analyzed	Check Del
16	22uF/6.3V	Tantalum	E1, E2, E3, E4, ...	A3216-18N	1	AVX	TAU226K0060RNU	Not analyzed	Check Del
17	500mW 6V	Resistor	F1, F2, F3, F4, ...	RS-2805	3	JK	JK-500M050-110	Not analyzed	Check Del
18	100	Power Line	F5, F6, F7, F8, ...	FR0603	7	Sunlord	PT10001000-380TF	Not analyzed	Check Del
19	DC3-40-2C	2.5Amm Diode	J1, J2, J3, J4, ...	DCI-40P-Z	2	MINTRON	MTB110-40S	Not analyzed	Check Del
20	Cam-2092.54	Double Female	J5, J6, J7, J8, ...	CONN-18P_3D	1	BOOMBLE	2.54-21P 電 鍍 黃 銅	Not analyzed	Check Del
21	HR911105A	Double Female	J9, J10, J11, J12, ...	HR911105A	1	Hamam	HR911105A	Not analyzed	Check Del
22	ROBLCD40	Header	J13, J14, J15, J16, ...	FPC-40P/0.5FGS	1	KUNPU	FPC-40P-40PH20	Not analyzed	Check Del
23	XHSP42-SAMM	Header	J17, J18, J19, J20, ...	XHSP42-S4-W	1	KUDY	H025003-SAMW	Not analyzed	Check Del
24	SD_Micro	TF Card Socket	J21, J22, J23, J24, ...	micro SD	1	XXB	XCTF-015-N	Not analyzed	Check Del
25	Inductor250	1uH Shielded	L1, L2, L3, L4, ...	INDC25050RN	2	Murata	LQW45PH180MSGL	Not analyzed	Check Del
26	10K	Resistor	R1, R2, R3, R4, ...	Res0603	21	VAGCO	AC0603R0101KRL	Not analyzed	Check Del
27	10K	Resistor	R5, R6, R7, R8, ...	Res0603	5	VAGCO	RC0603R0101KRL	Not analyzed	Check Del
28	1K	Resistor	R9, R10, R11, ...	Res0603	10	VAGCO	RT0603R0101KRL	Not analyzed	Check Del
29	Res	Resistor	R12, R13, R14, ...	Res0603	2	VAGCO	RT0603R0101KRL	Not analyzed	Check Del
30	51 1%	Resistor	R15, R16, R17, ...	Res0603	4	VAGCO	AC0603R0101KRL	Not analyzed	Check Del

Figure 4-13: Edit BOM file and assign headers interface

- Remove unnecessary rows using the **Del** (Delete) option in the Action column or by right clicking the row number.
- View the original pre-processed BOM data by clicking the **Original** tab. If you make a mistake and need to start again or change files, click the Reload button.
- Click the **[Analyze BOM]** to check the BOM for errors or **[Next]** to skip this step.

4.5.2. BOM Analysis

BOM analysis is an optional but highly recommended step to analyze the BOM file for inconsistencies and errors such as duplicate designators, inconsistent parameters and incorrect quantities.

- Click the **[BOM Analysis]** to initiate BOM processing and HQDFM will compare the designators in BOM with the centroid file.
- HQDFM will perform a quick analysis and the results will appear in the Analysis column to the right of the original data. Any detected errors will appear in a red box. Hover over the box to display the full details. Review these errors before moving onto the next step. A summary of the errors can also be exported by clicking the Download Report button.
- Not in centroid file:** the centroid file contains parts that are not in the BOM file. This could be due to accidental omission or purposely removed since it is not needed in this specific version. It could also be the result of only exporting surface mount components in the centroid file. HQDFM can perform analysis on through-hole parts as well so include these in the centroid data if possible.

 


Figure 4-14: Designator missing warning

- Qty/Designators mismatch:** HQDFM will count the number of designators and compare it with the value marked in the Quantity column. This error will appear if there is a discrepancy between the two. Either value can be modified directly by double-clicking the cell and typing in the new value. Then click the Check option in the Action column to repeat analysis on this row and remove the error message.

Qty/Designators mismatch
Actual Quantity: 1

Figure 4-15: Quantity/designator mismatch warning

5. **Repeated Designator:** HQDFM will compare the designators across the entire BOM to find duplicates. Each designator should only correspond to a single part number and most of the time should only appear once in the BOM file. HQDFM will highlight any duplicates and indicate the row number where the duplicates appear.

In some cases, duplicates in a single row (same part) are acceptable. For example, for boards that are repeated in a panel, the repeated boards have the same designator markings, therefore the BOM may have many duplicate designators. These can be safely ignored.

on 1	Designator	Package/Footp	Quantity	Manufacturer	MPN	Analysis
	C2, C3, C4, C5, C6, C7, C8, C9, C10, ...	CAP0603	55	YAGEO	CC0603KRX7R7B...	Repeated Designator C9[4]
		0402			CRGCQ0402F10R	No errors detected
		1206			12064R30FTP	No errors detected
	C9, C28, C29, C53	CAP0603	4	FH	0603X475K100NT	Repeated Designator C9[1]

Figure 4-16: Repeated designator warning

6. **Package mismatch:** HQDFM will capture keywords in the package field and compare them with the description field to find discrepancies. For example, if the part has a PCB footprint of 0402 but the chosen part has a size of 1210, this will be highlighted and designers should change the part or footprint.

Due to different unit systems being used, HQDFM may highlight a mismatch incorrectly. For example, the LED in row 12 has the imperial size of 1210 but the package is written according to the metric size (3528). In such cases, the errors can be safely ignored and changing the package name to 1210 will clear this error.

12	✓	10	3528LED	1210(3528) RGB LED	D1, D4	3528	2	MEIHLUA	MHPA3528RGBCT	Footprint error Value 3528...
13	✓	11	SMBJ5.0	Schottky Diode	D2	DO-214AA(SMB)	1	WPMtek	SMBJ5.0A	Value 3528 Description 1 1210
14	✓	12	LED0805RED	LED red 0805 ...	D3	LED0805RED	1	TOGIALED	TJ...	No errors detected

Figure 4-17: Footprint error warning

7. Once all errors have been reviewed and rectified, click Next to proceed to the next step.
8. If modifications were made, the BOM file can be exported using the **[Export BOM]** option. Select columns to include and drag them to change the order.

4.5.3. Substitute Components

HQDFM supports the inclusion of substitute components in the BOM that can also take part in DFA analysis. To do this, they must have their own row with footprint information, description and part number etc.

- In the BOM, add a new row under the original part. The index number should be the original index number followed by a period and a number from 1 to 9 with .1 being the first substitute part e.g. 1.1, 1.2, 1.3, 1.4, 1.5 etc. 1.2 would be the second substitute part for the primary part in row 1.

For substitute parts, only the MPN is required. Other information such as designators and quantity will be taken from the primary part.

- Upon importing into HQDFM, the software will recognize these as substitute parts and label them accordingly in the Substitute Part column.

	Substitute Material	No.	Value	Description 1	Designator	Package/Footp	Quantity	Manufacturer	MPN
1	▼	1	100nF		C2, C3, C4, C5, C6, C7, C8, C9, C10, ...	CAP0603	55	YAGEO	CC0603KRX7R7B...
2	▼ Substitute Material 1.1	1.1	100nF			0402			CRGCQ0402F10R
3	▼ Substitute Material 1.2	1.2	100nF			1206			12064R30FTP
4	▼	2	4.7uF		C9, C28, C29, C53	CAP0603	4	FH	0603X475K100NT

Figure 4-18: Sample substitute parts entry

Substitute parts can be set within HQDFM as well. These values will not be exported when using the export BOM function however.

3. Click the substitute part's cell in the Substitute Part column and click Set as substitute part.
4. In the new window, enter the row number of the primary part the selected part is substituting. Then click OK. The part will then have the label .1 attached. Subsequent substitutes for the same primary part will be labeled .2, .3, .4 and so on.
5. To convert a substitute part to a primary part, click the cell and select Set as primary part.

Once set, click next to proceed to the parts matching step.

There is no standard Bill of Materials format, and different EDA software export files with different headers and information. For HQDFM to detect and process the correct information, some BOM files may require simple pre-processing. HQDFM also supports built-in editing and the inclusion of alternative parts that can also take part in analysis.

4.6. Parts Matching

4.6.1. Parts Matching Introduction

HQDFM's parts matching capabilities include footprint checking against HQDFM's database of over 5 million package libraries maintained by over 20 engineers. These package libraries contain information on the size and shape of the component body and pins, polarity and keep-out areas. With these libraries, HQDFM can perform footprint checking and complex DFA analysis on the entire BOM with one click.

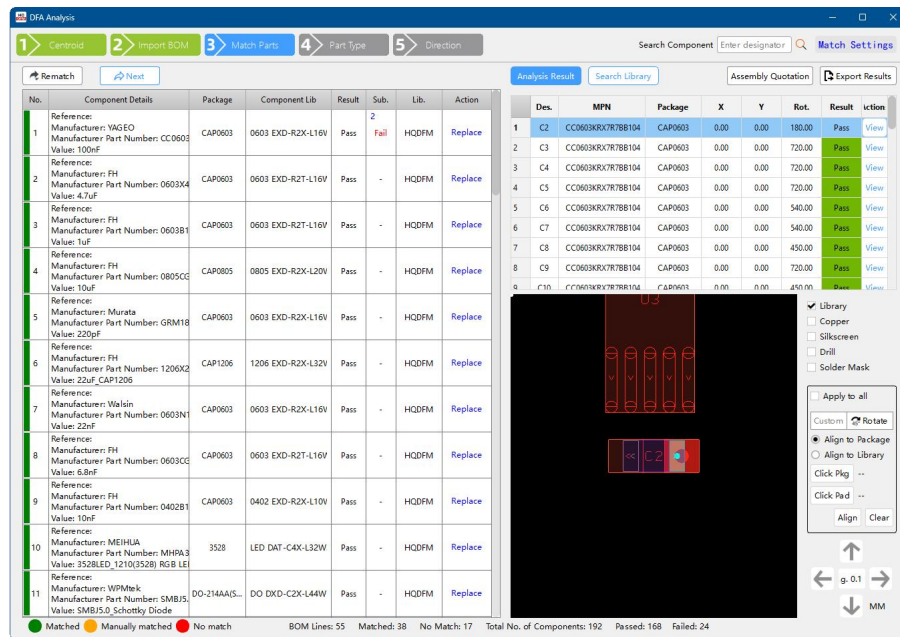


Figure 4-19: Match Parts stage

Component List: The left side shows a simplified BOM list with analysis result for primary and substitute parts, package information from the BOM and the corresponding HQDFM package library name. The total number of components and the number that passed and failed matching and analysis is shown on the bottom.

Designator List: Clicking a row in the component list will display a table of all the designators for that part on the top right side with their location and individual DFA analysis result.

Preview Window: Clicking a row in the designator list will cause the preview window to zoom into the selected part's location on the PCB board. This window has an interface for individual component alignment and options to overlay PCB layers and supports pan and zoom actions.

Context Menu: Right-click to bring up the context menu

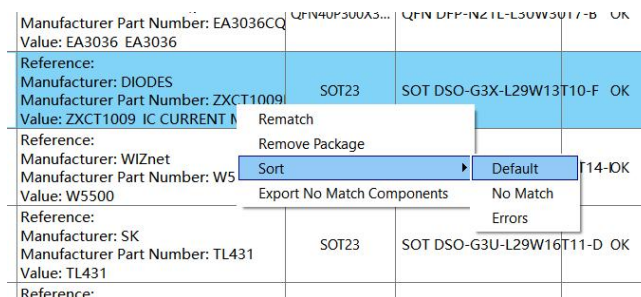


Figure 4-20: Match Parts context menu

- a) **Rematch:** Repeat analysis on a single component
- b) **Remove Package:** Remove the currently matched package
- c) **Sort:** Sort the list with No Match or Error entries on top
- d) **Export No Match parts:** Export a list of No Match parts

4.6.2. Perform Parts Matching

1. After BOM upload and verification, clicking the Next button will begin parts matching with HQDFM's database. Depending on the number of parts in the BOM, this may take a few seconds to complete.
2. Matched parts will be marked in green in the components list. If there is no match, they will be marked in red and require manual matching. Check the results of analysis for substitute parts by clicking the Sub. cell to bring up the Substitute Part Analysis Results window. The layout is similar to the interface for primary part verification.
3. For parts that failed analysis, click the row to bring up the designators on the top right section and view the individual violations. Click a designator to bring up the preview of the part on the PCB in the section below.

4.6.3. Centroid file editing for individual components

In the designator list, the X, Y and Rot. columns show the displacement in the x, y and radial directions respectively. The interface below the list can be used to move the component and change the rotation. Note that changes can only be made to the components shown in the designators list above. Select the appropriate component to make changes to that part.

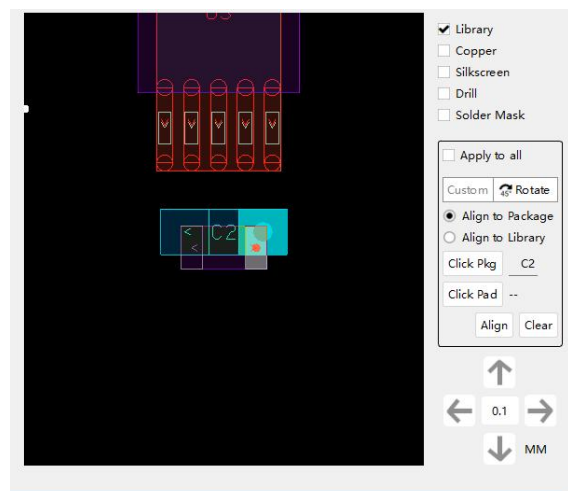


Figure 4-21: Move part interface

- a) **Toggle PCB layers:** Click the check boxes to show the respective PCB layer in the preview window.
- b) **Move All checkbox:** By default, the changes made in this interface only affect the selected part. By selecting this box, all instances of this part are affected by the changes.
- c) **Rotate:** Click to rotate the part in 45 degree intervals to correct rotational errors.
- d) **Pad Alignment:** Auto-align the part by selecting pads. Click a radial button to align using the entire component package or a single pin. Using a pin for alignment is useful for aligning through-hole parts since the pin must be at the centre of the plated hole. Click the part or part contact/pin until it is highlighted. Then click the Click Pad button and click the pad or pads to use for alignment. Then click align to move the part. Experiment with different pad combinations to centre the part with the PCB land pattern.
- e) **Arrow buttons:** Moves the component by set increments to correct offset in the xy direction. The increment size can be changed by typing in the value in the middle of the arrows.

4.6.4. Manual Matching

A part may fail matching since the part MPN is not currently in the database. However, if the component has

a common land pattern, you can search for the land pattern and manually assign it to the part.

- a) Click the hourglass icon in the Package Library column to bring up the Search Library window on the right.


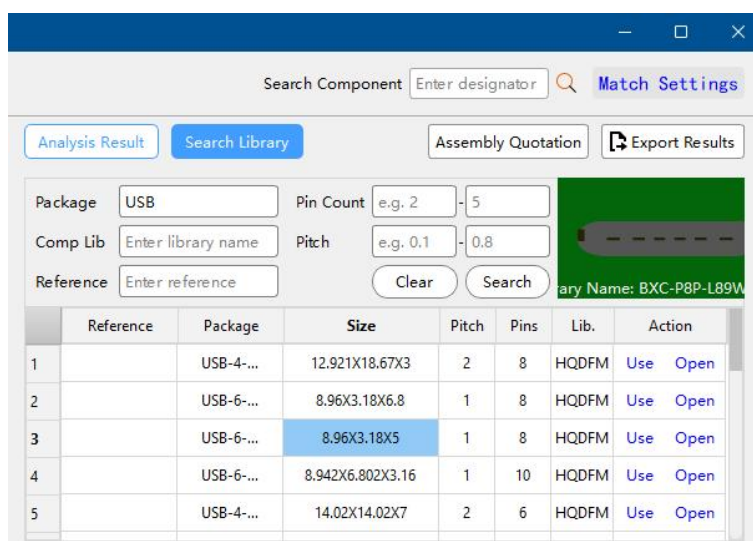
55	value: USB_mini_mini USB Reference: Manufacturer: Taitien Manufacturer Part Number: OXKTE Value: 25MHz	XTAL32M_P...		No match	-	-	Replace
----	--	--------------	--	----------	---	---	---------

Figure 4-22: Hourglass icon for a part with no matching footprint

- b) In this window, enter keywords such as package name, pin count and pitch to search for an existing package library that matches the part.



The Search library interface window contains the following elements:

- Search Component:** A text input field with a magnifying glass icon and a "Match Settings" button.
- Buttons:** "Analysis Result", "Search Library" (highlighted in blue), "Assembly Quotation", and "Export Results".
- Search Criteria:**
 - Package:** USB
 - Pin Count:** e.g. 2 - 5
 - Comp Lib:** Enter library name
 - Pitch:** e.g. 0.1 - 0.8
 - Reference:** Enter reference
 - Clear** and **Search** buttons.
- Results Table:**

	Reference	Package	Size	Pitch	Pins	Lib.	Action
1		USB-4-...	12.921X18.67X3	2	8	HQDFM	Use Open
2		USB-6-...	8.96X3.18X6.8	1	8	HQDFM	Use Open
3		USB-6-...	8.96X3.18X5	1	8	HQDFM	Use Open
4		USB-6-...	8.942X6.802X3.16	1	10	HQDFM	Use Open
5		USB-4-...	14.02X14.02X7	2	6	HQDFM	Use Open

Figure 4-23: Search library interface

- c) Click Use to apply and HQDFM will perform analysis on the new package.

If no suitable library exists, ignore the error and check the footprint matches the manufacturer's datasheet manually.

4.6.5. Assembly Quotation Calculator

The Assembly Quotation calculator can be opened by clicking the button on the top right corner of the Match Parts interface. Many PCB assembly houses calculate assembly fees based on the number and types of parts, the number of surface mount assembly sides and the pad count. The Assembly Quotation Calculator can summarize these values from the data provided to give you an overview of the design's assembly complexity, and can be exported to give to your assembly house or as part of an internal review process.

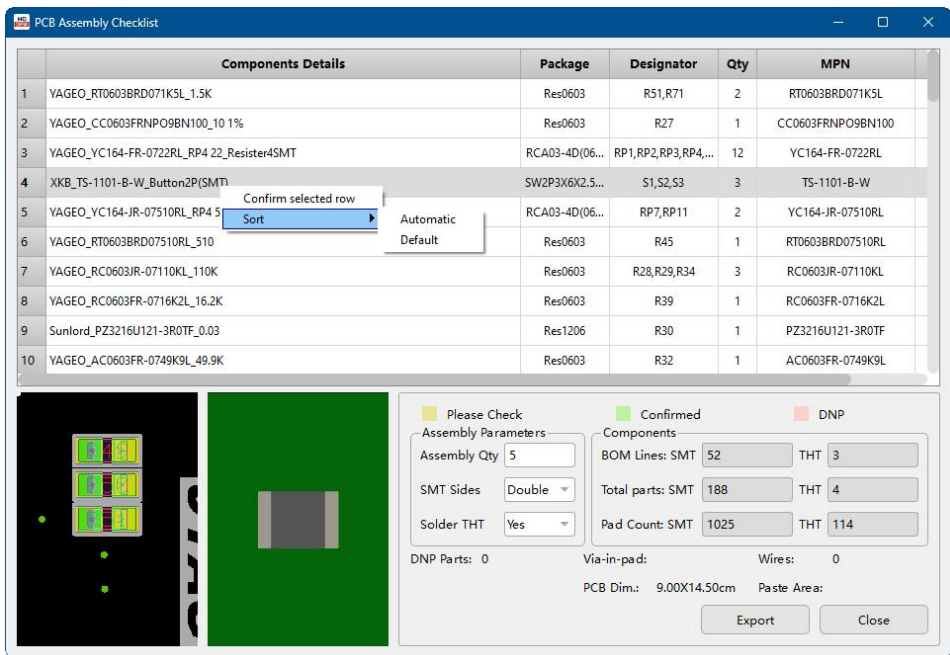


Figure 4-24: Assembly Quotation Calculator interface

1. Clicking a part will bring up a preview of the package library on the PCB on the left and the part on the right.
2. HQDFM will try to guess the assembly type based on the data available. If it is not sure, the cell will be filled in yellow and requires manual verification. Change the value by using the drop down box. If some parts do not need to be assembled (DNP), click the drop down box and change the value to DNP (Do not populate).

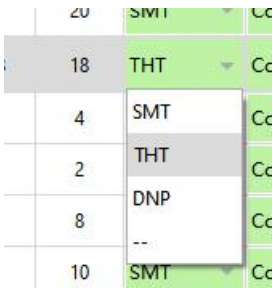


Figure 4-25: Assembly type selection

The assembly type information is used to calculate the number of surface mount and through-hole parts and pads for a single unit.

3. The **Status** column can be used to keep track and check-off verified parts. Click the drop down box to change the status. You can also right-click the row and select **Confirm selected row** to change the status to **Confirmed** directly.
4. Fill in the production parameters such as production quantity and the number of sides with surface mount parts. A summary of other assembly related information will be listed at the bottom.
5. Click the export button to export a spreadsheet file containing the BOM list and assembly parameters for reference.

	A	B	C	D	E	F	G	H	I	J	K	
Assembly Qty	5		SMT BOM Lines	47	THT BOM Lines	3						
SMT Sides	Double		No. of SMT Parts	181	No. of THT Parts	4						
Solder THT	No		SMT Pad Count	971	THT Pad Count	114						
DNP Parts	0		Via-in-pad		Wires	0						
			PCB Dimensions	9.00X14.50cm	Paste Area							
	Component Details		Package	Designator	Qty	MPN	Total	Matched	Pads	Total	Assembly	Status
	Tahtien_OXKTELJANF_25MHz		XTAL32M_P	Y1,Y2	2	OXKTELJANF	10	No	4	8	SMT	--
	YAGEO_YC164-FR-0722RL		RCOA03-4D	01RP1,RP2,RP3,RP4,RP5,RP6	12	YC164-FR-0722RL	60	Yes	8	96	SMT	Confirmed
	ANLOGIC_AL3510LG144_AL35		LQFP-144	1,U2	1	AL3510LG144	5	Yes	145	145	SMT	Confirmed
	YAGEO_YC164-JR-07510RL		RCA03-4D	01RP7,RP11	2	YC164-JR-07510RL	10	Yes	8	16	SMT	Confirmed
	XKB_SK-3296S-01-L3_SW3_7		MSS-12C01	SW1	1	SK-3296S-01-L3	5	Yes	9	9	SMT	Confirmed
	XKB_TS-1101-B-W_Button2P		SW2P3X6X2	S1,S2,S3	3	TS-1101-B-W	15	Yes	2	6	SMT	Confirmed
	YAGEO_RT0603BRD071K5L		Res0603	R51,R71	2	RT0603BRD071K5L	10	Yes	2	4	SMT	Confirmed
	YAGEO_RCO603FR-07510KL		Res0603	R31	1	RCO603FR-07510KL	5	Yes	2	2	SMT	Confirmed
	YAGEO_RT0603BRD07510RL		Res0603	R45	1	RT0603BRD07510RL	5	Yes	2	2	SMT	Confirmed
	YAGEO_ACO603FR-0749K9L		Res0603	R32	1	ACO603FR-0749K9L	5	Yes	2	2	SMT	Confirmed
	YAGEO_RCO603FR-0716K2L		Res0603	R39	1	RCO603FR-0716K2L	5	Yes	2	2	SMT	Confirmed
	YAGEO_RCO603FR-0712K4L		Res0603	R35	1	RCO603FR-0712K4L	5	Yes	2	2	SMT	Confirmed
	Microchip_MCP4728-E/UN_C		MSP050P49	U3,U13	2	MCP4728-E/UN	10	Yes	10	20	SMT	Confirmed
	Winbond_W9825G6KH-6_W9		TSOP80P118	U11	1	W9825G6KH-6	5	Yes	54	54	SMT	Confirmed
	YAGEO_CC0603KRX7R7BB104		CAP0603	C2,C3,C4,C5,C6,C7,C8,C9	55	CC0603KRX7R7BB104	275	Yes	2	110	SMT	Confirmed

Figure 4-26: Assembly Quotation Output

4.7. Component Categorization

Some IPC rules and DFA analysis methods depend on the component type. So it is important that all parts are assigned the correct component category. The Part Type stage allows users to assign the part type from a list.

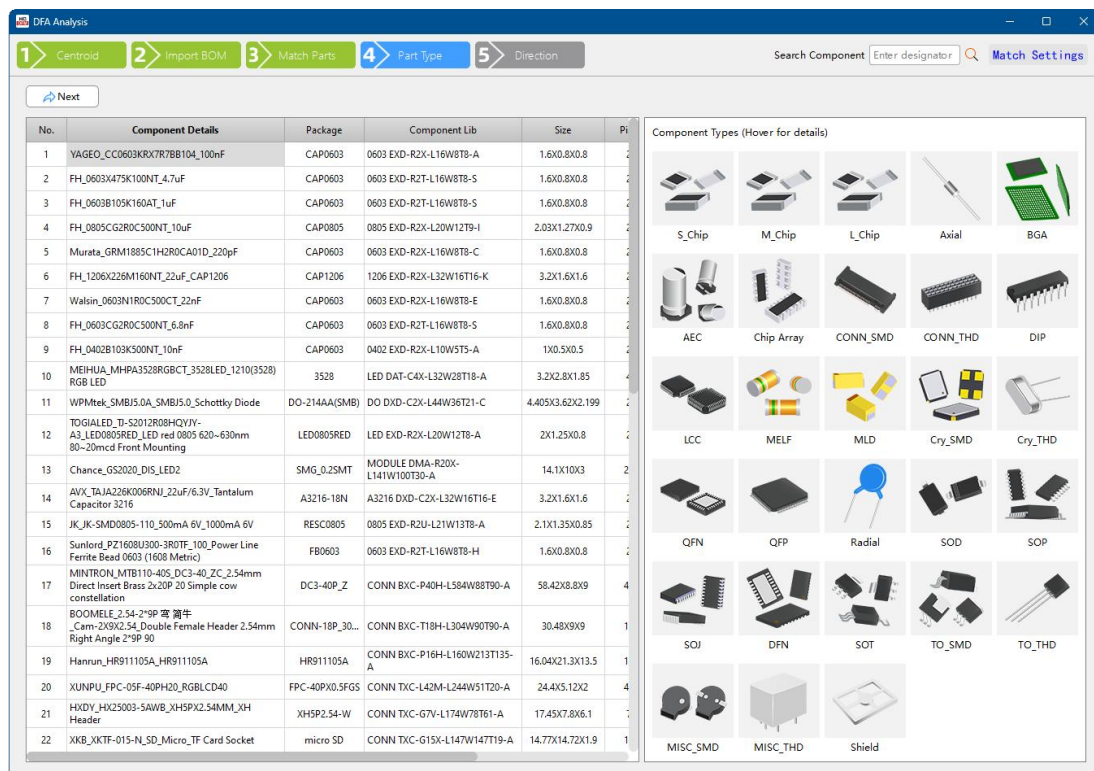


Figure 4-27: Part Type stage

4.7.1. Manual Assignment

Matched parts will have the Component Type automatically filled. Manually matched parts will require manual assignment.

1. The right side displays illustrations of the various component types and their code names for reference. Use this to identify the correct component type.
2. The selection will be saved so the next time the part is used, the last selected type will be assigned automatically.

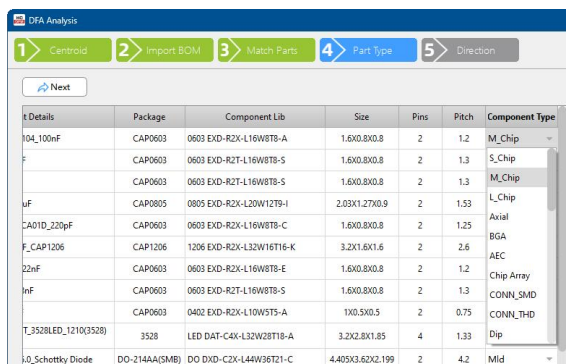


Figure 4-28: Component Type selection

4.8. Set Direction of Travel

Many DFA rules and design considerations are affected by the PCB panel's direction of travel, that is, how the panel is designed to enter automated assembly equipment. The direction of travel has a significant impact as a design is adapted for automated production.

Automated PCB assembly equipment use two conveyor belts of adjustable width to transport panels to and from different machines. The two edges of the panel that run across the conveyor belts, also known as transmission sides have clearance requirements and boards undergoing wave soldering have strict component placement guidelines.



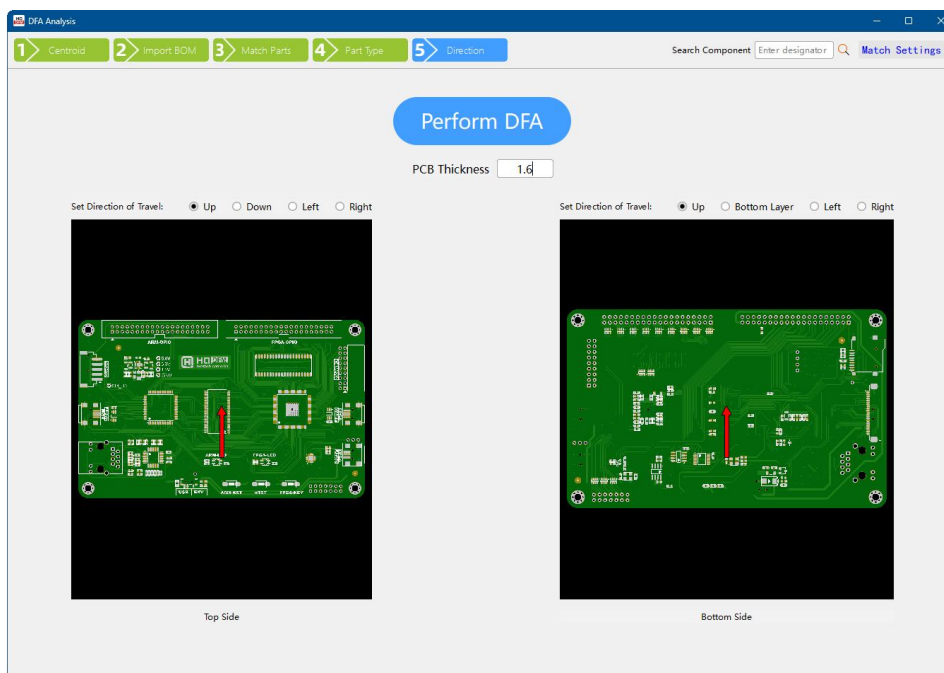


Figure 4-29: Direction stage


1. In HQDFM, the direction of travel can be set independently for both top and bottom sides. Click the relevant checkbox to change the direction of travel, using the red arrow for reference. Pointed tip marks the side that will enter first.
2. The board thickness can be also be entered to be used in PCBA height calculations. The default value is 1.6mm.

4.9. DFA Analysis Examples


4.9.1. Component Spacing

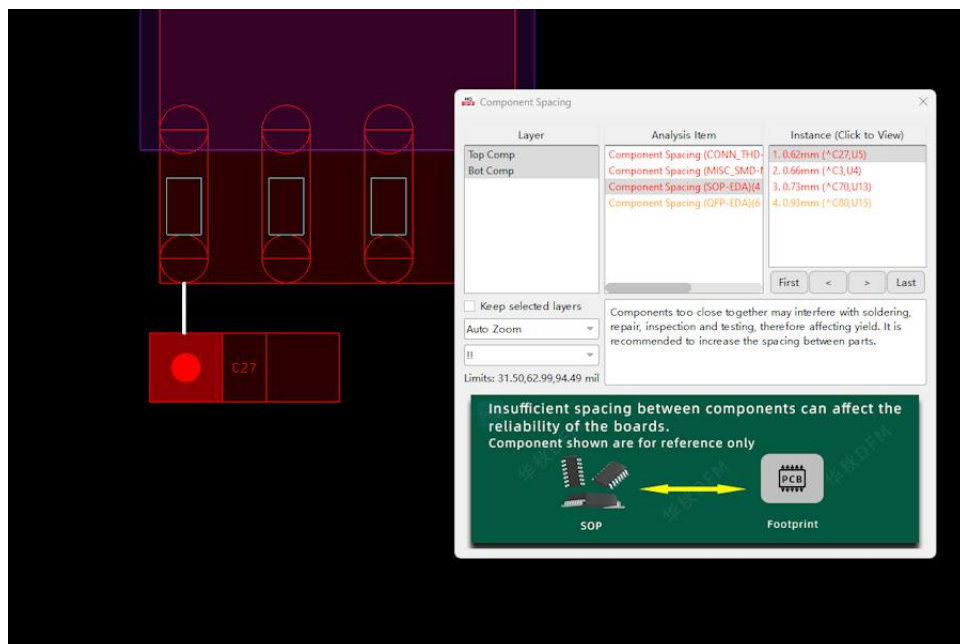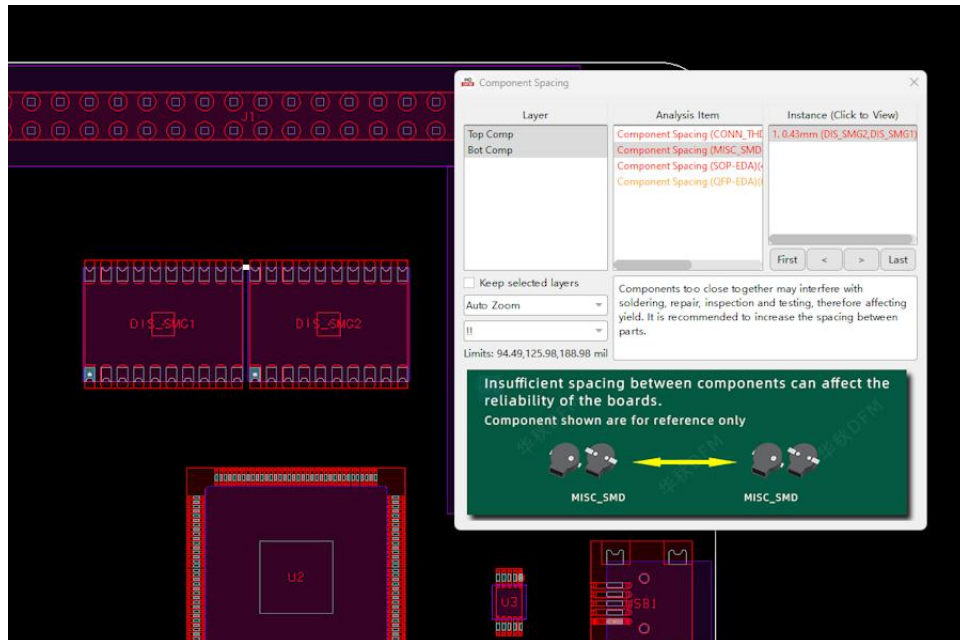



4.9.2. Comp-to-Board Edge


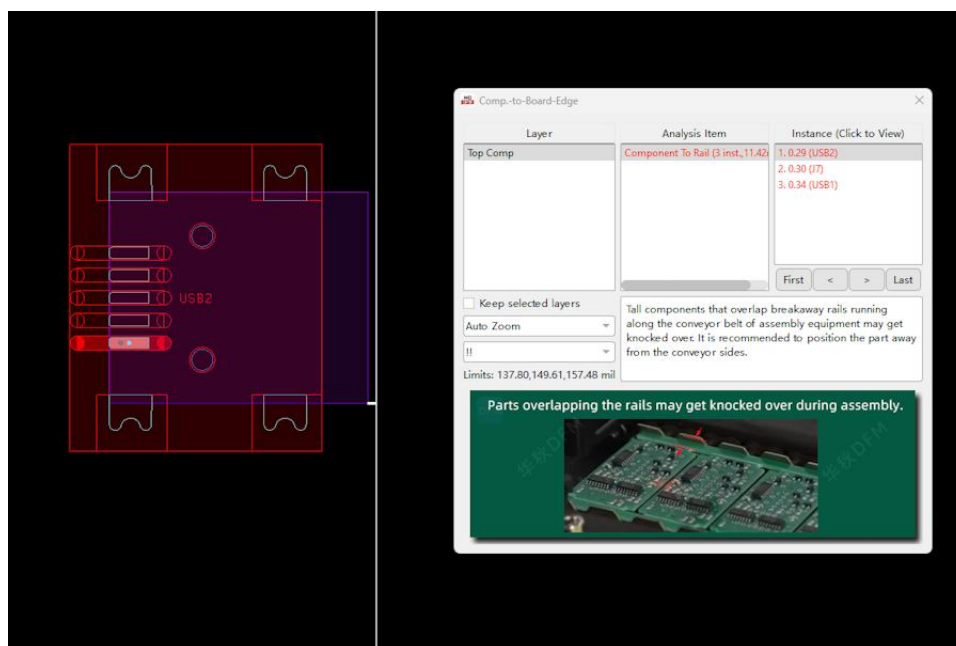


4.9.3. Comp Height Analysis


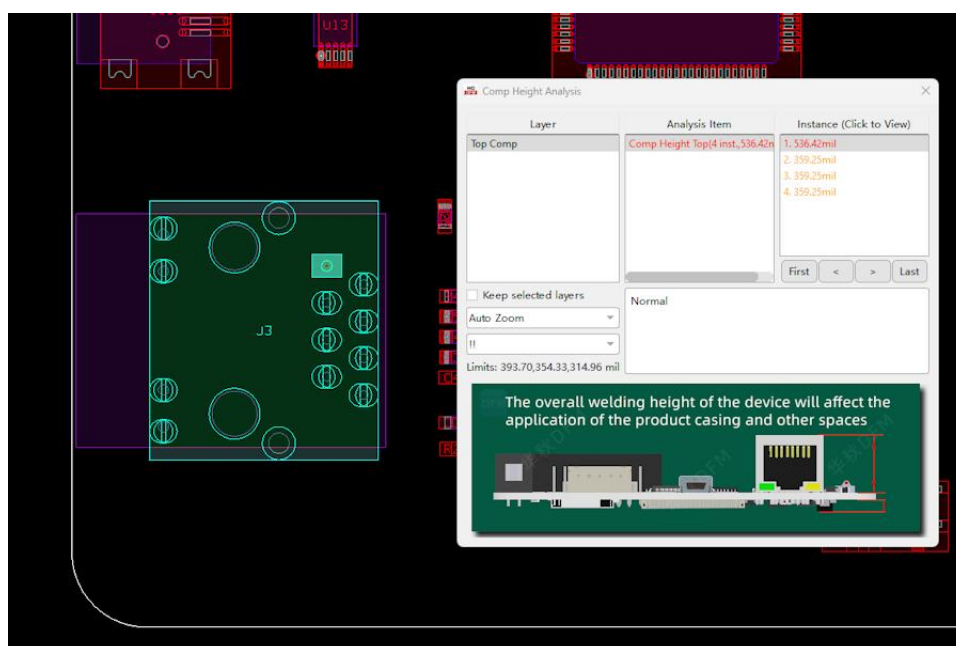



4.9.4. SMT Pad Analysis

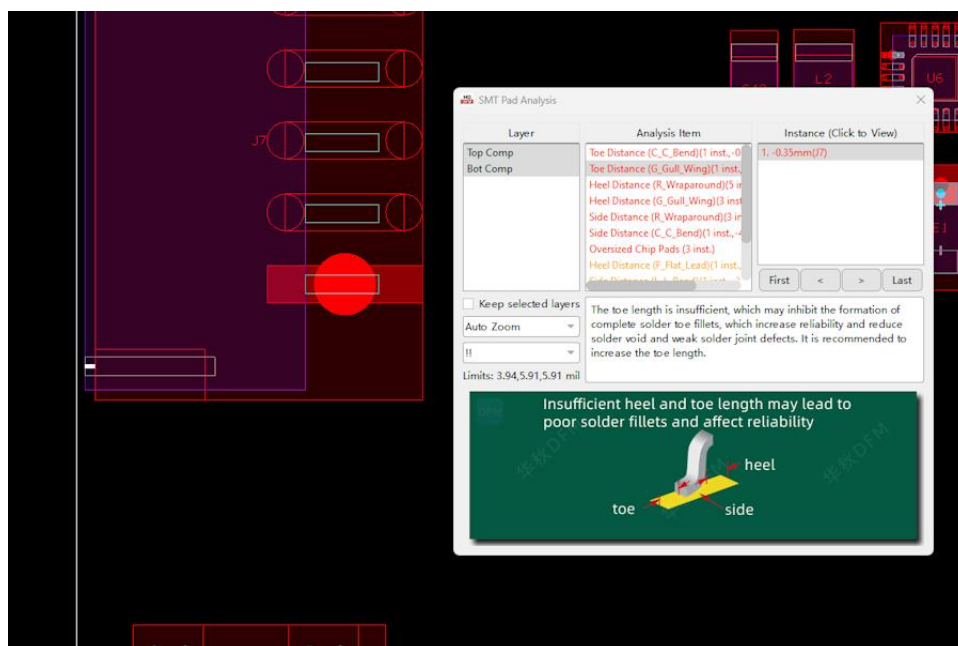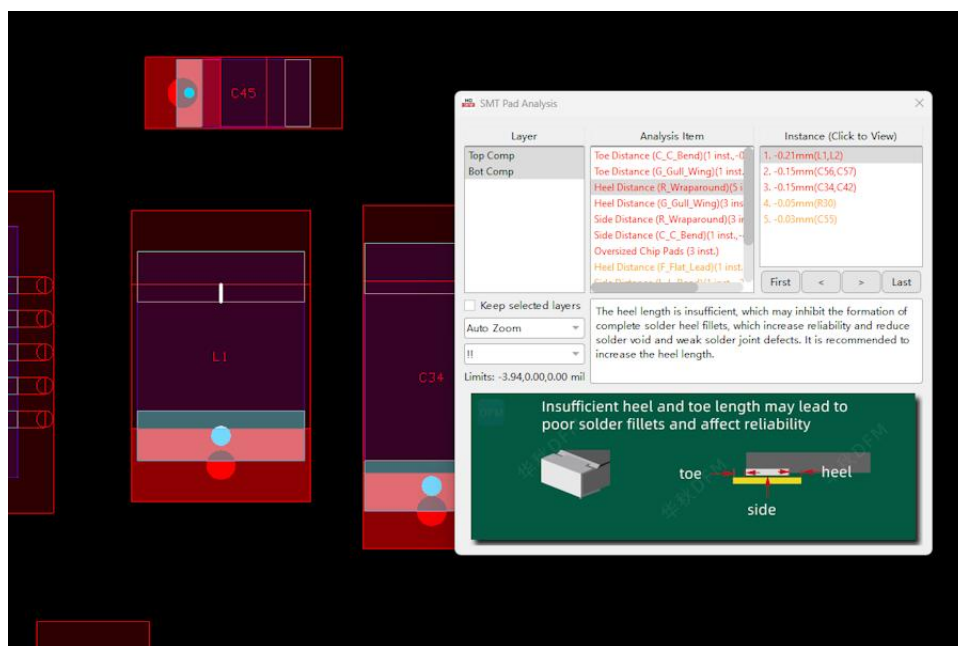

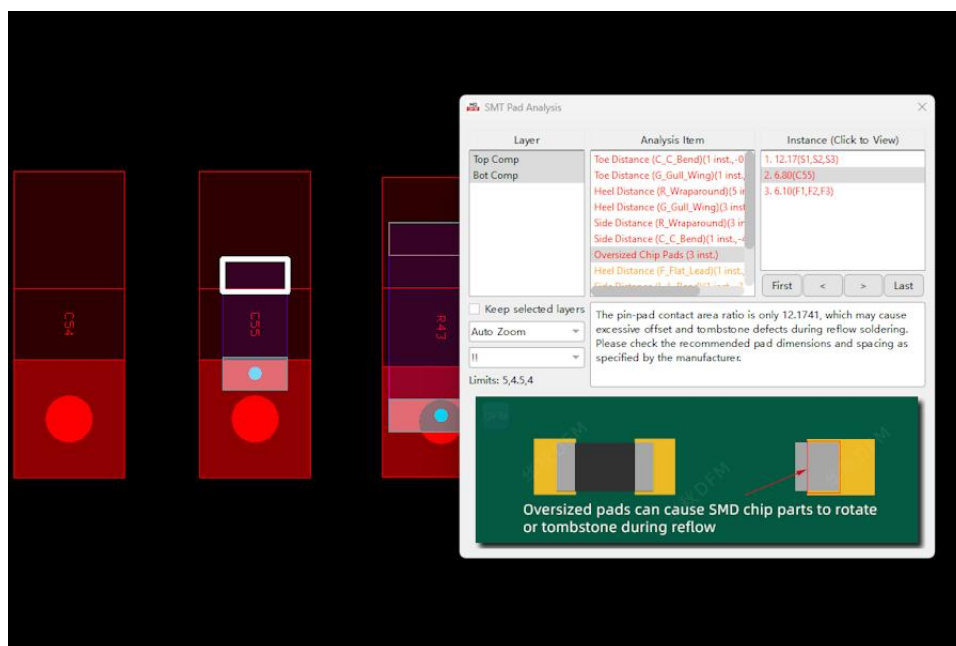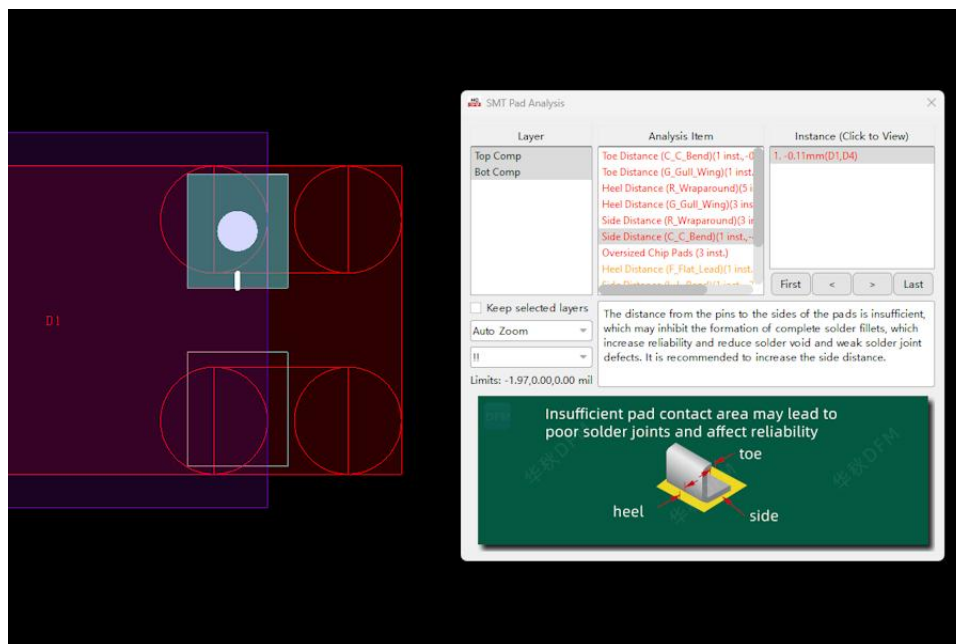

4.9.5. Chip Pads

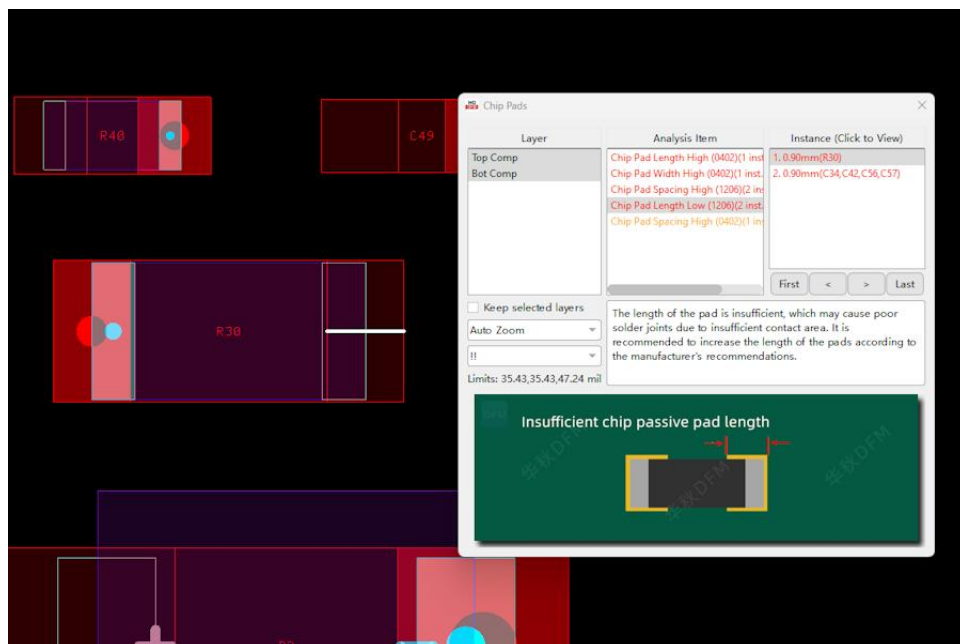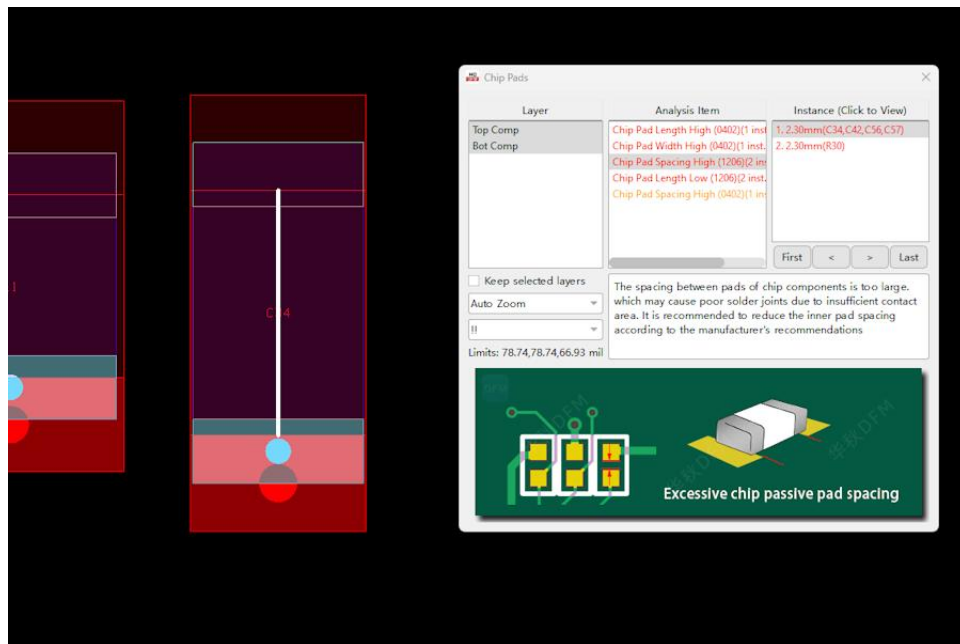

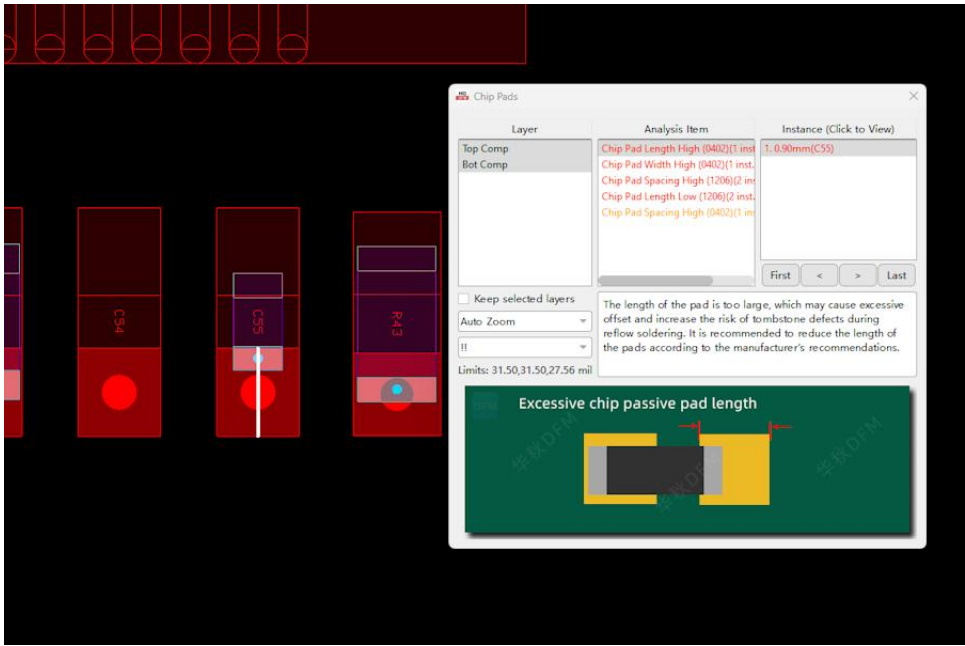

5. Tools

5.1. Impedance Calculator

5.1.1. HQDFM's impedance calculator is an advanced tool for calculating the trace impedance for multiple traces at the same time based on stack-up templates. The stack-up structure can be modified in the Stack-Up Manager on the left and the resulting structure can be saved in .json format.

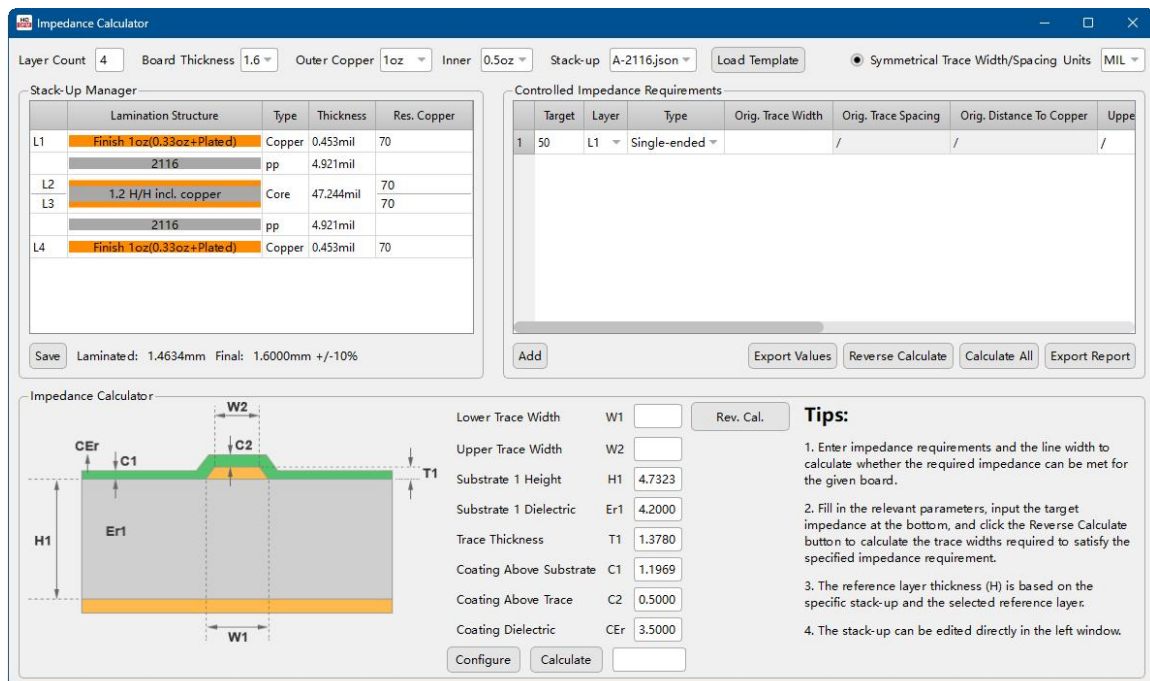


Figure 5-1: Impedance Calculator interface

5.2. Compare Gerber Files Tool

5.2.1. The Compare Gerber Files tool allows users to quickly open and compare two sets of Gerber files and find differences between them.

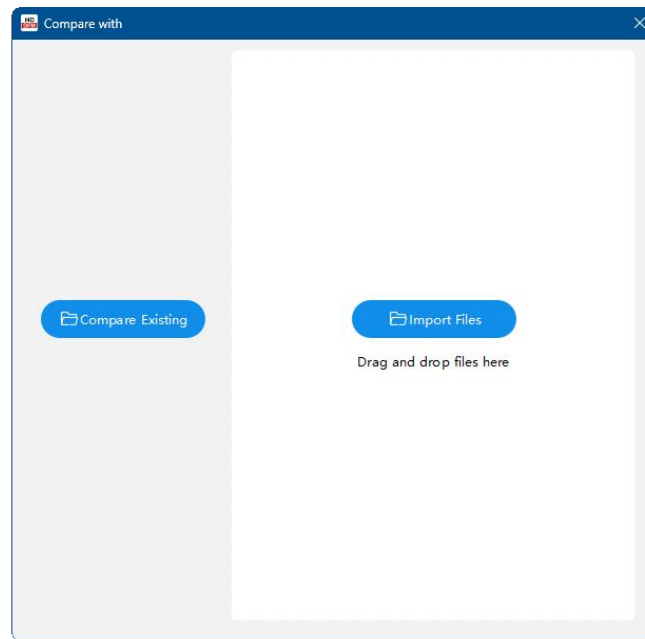


Figure 5-2: Compare Gerber Files tool interface

5.2.2. Steps: Compare Existing

Choose **[Compare Existing]** to compare files that have already been imported in HQDFM. This is useful if you need to compare layers in the same set of Gerber files or compare changes made in HQDFM to individual layers.

1. Import Gerber and drill files into HQDFM.
2. Open Compare Gerber Files tool and select **[Compare Existing]**
3. In the table, select the two layers to compare.
4. Click the plus sign to add more rows to compare other pairs of layers then click **[Compare]** to perform comparison.

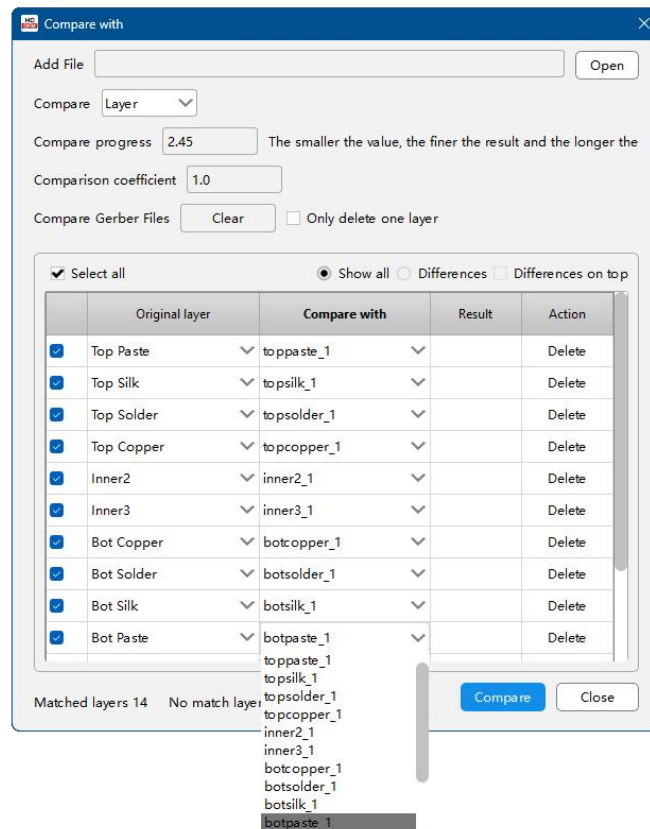


Figure 5-3: Comparing Gerber files in the same set of Gerber files.

5.2.3. Steps: Import Files

Select **[Import Files]** or drop files directly to compare the files already loaded in HQDFM with other Gerber files. This is useful for comparing different sets of Gerber files, e.g. different versions.

1. Import Gerber and drill files into HQDFM.
2. Open Compare Gerber Files tool and select **[Import Files]**
3. Select the individual Gerber files to add (archive files not supported). Successfully imported layers will be added to the table and temporarily added to the list of layers on the left of the workspace.
4. HQDFM will automatically try to match the layers according to layer type. If this is incorrect, change the assignment using the drop-down menu.
5. Select/deselect the layers as required and click **[Compare]** to perform comparison. Processing will take longer for larger files and more layers. Deselect some layers to speed up comparison.

5.2.4. Steps: Analyze differences

1. If differences were found, the result column will display **Different** and the **[View]** button will be red. Click **[View]** to display the inconsistencies in the workspace.
2. Click the Differences radial button to only display identified differences in the table.
3. When the Show All radial button is selected, check the Differences on top checkbox to display identified differences on top of the list.
4. Click [Clear] to clear the comparison results.
5. Click [Clear] with the checkbox ticked to delete the contents of the table

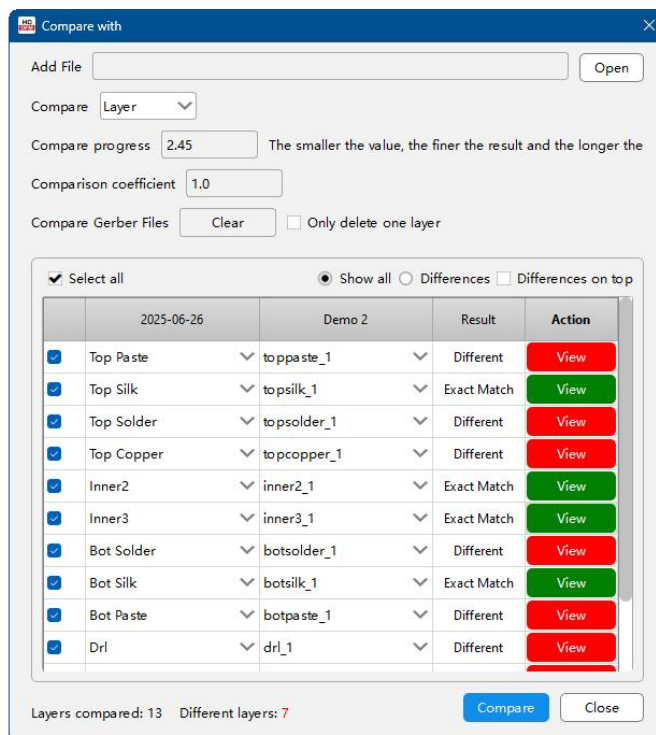


Figure 5-4: Compare Gerber Files result

5.2.5. Compare Gerber Files settings and interface

- a) **Compare:** Choose to compare the whole layer, the elements within the board profile or a custom selection of elements. For the Custom option, draw the box section to be compared in the workspace. When successfully selected, the coordinates will be displayed on the right.
- b) **Compare progress:** Change the Compare progress value. The higher the value, the faster the comparison but the level of detail will be not be as fine.
- c) **Comparison coefficient:** The default value is 1. Change the pixel size for comparisons.

5.3. Compare BOM Files

5.3.1. The Compare BOM Files tool can be used to find individual differences between BOM file versions with a convenient side-by-side view.

5.3.2. Steps:

1. Import the two BOM files to be compared and assign the headings if required.
2. Click **[Compare]**
3. Any differences will be highlighted in red on the right. Click the button in the Result column to jump to that row.
4. Clicking a cell will show the full contents on the bottom. The contents of any cell can be edited by selecting the cell and clicking **[Edit]** on the respective side. The preview field will turn white and the contents can be modified. Repeat the Compare action as required.
5. The modified BOM can be exported to save the changes using the **[Export]** button.

5.3.3. Compare BOM Files settings and interface:

- a) **[Import]/[Export]**: Import BOM files for comparison and export modified BOM files.
- b) **Default**: View the results in the same order as in the BOM file.
- c) **Differences**: View the results with differences displayed on top.
- d) **Clear**: Check this box to clear all imported data when exiting the tool.

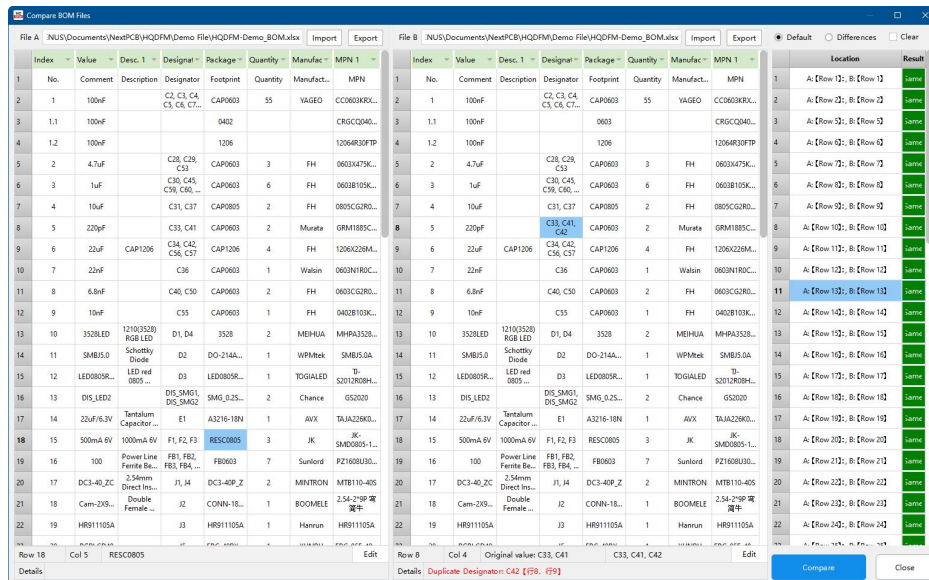


Figure 5-5: Compare BOM files interface

- e) **Row and Column**: The selected cell's row and column will be shown here.
- f) **Details box**: Error messages will be shown here such as duplicate designators, mismatching quantities etc.
- g) **[Close]**: Closes the Compare BOM files window. If the **Clear** checkbox is not selected, the current session will be saved the next time you open the tool (but not if the project is closed).

5.4. Compare IPC Nets

5.4.1. Mistakes in the design file or export procedure may cause errors to appear in the production files that are not detectable in the EDA software. By using the Compare IPC Nets tool, shorts and opens can be identified by using IPC netlist files.

5.4.2. Steps:

- a) You will need the **IPC netlist (.ipc) file**. Netlist export is supported by many EDA tools.
- b) Import the Gerber and drill files and open the **Compare IPC Nets** tool. If the netlist file was imported with the Gerber files, you can also bring up the tool by first performing **DFM Analysis** then click the **[Check]** button next to the **Opens/Shorts** item.

- c) Import the .ipc netlist file and click **[Compare]**. If the netlist file was imported with the Gerber files, the filename will automatically appear in the top field.
- d) Any anomalies will be displayed in the table. Click an entry then click a PCB layer to zoom into the nets in the workspace. Objects in green are areas that are not connected that should be according to the IPC netlist. For shorts, the shorted nets will be shown and labeled in different colors.

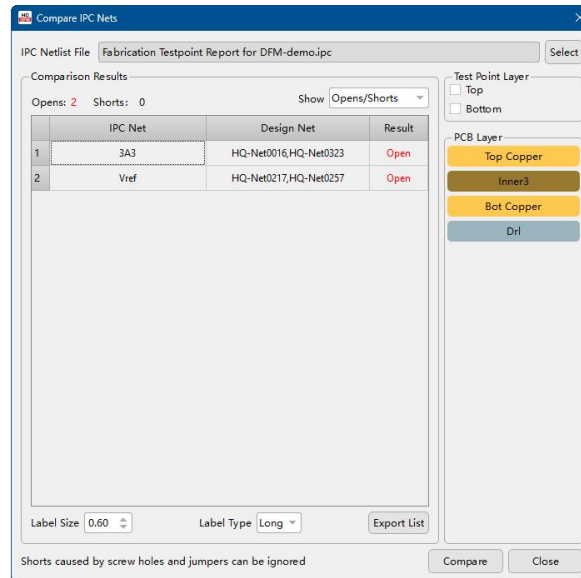


Figure 5-6: Compare IPC Nets interface

5.4.3. Other options:

- a) **Label Size**: Change the size of the text label in the workspace
- b) **Label Type**: Change how labels are shown in the workspace or not shown at all.

5.5. Calculate Copper Area

- 5.5.1. Calculate the percentage copper coverage in circuit layers. Simply click calculate and the tool will calculate the copper area as a percentage of the total board area. This can be useful for gaining insights into the copper distribution between layers.

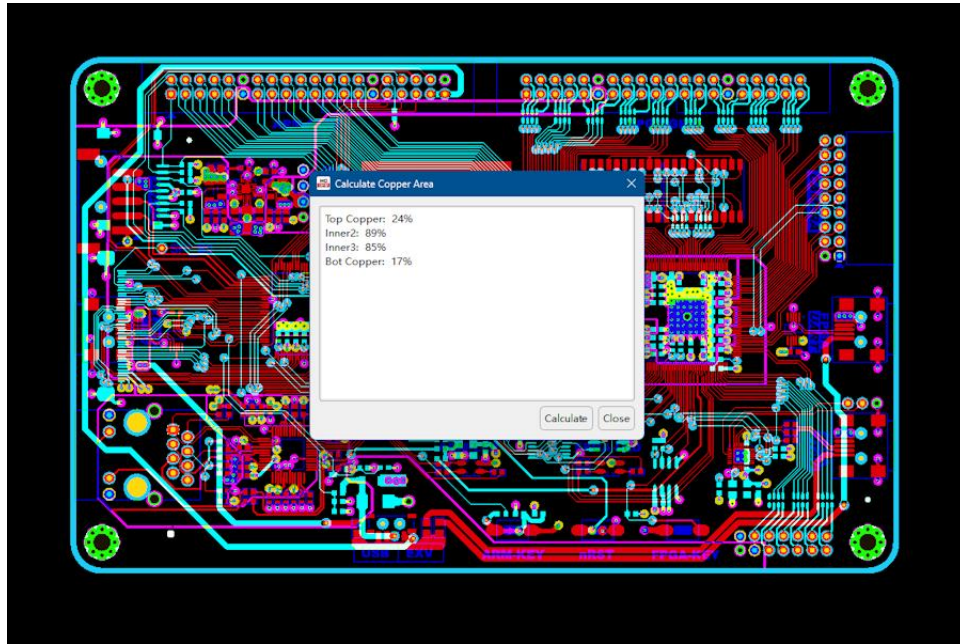


Figure 5-7: Compare Copper Area interface

5.6. Count Solder Pads

5.6.1. The solder pad area calculator counts the number of surface mount and through-hole solder pads to give the solder pad count or pin count as otherwise known.

Click the Count button to automatically count all the pads. The View buttons on the side can be used to view and verify the pads which have been included in the calculation. Note that these pads are counted purely based on their layer properties and not whether they are included in the BOM or not.



Figure 5-8: Count Solder Pads interface

5.7. Find Component

- 5.7.1. Quickly find the location of any part on the board by importing the centroid file and specifying its designator. You can also click the part in the list directly. If you have already imported the centroid file in the PCBA Analysis wizard then there is no need to import it again.

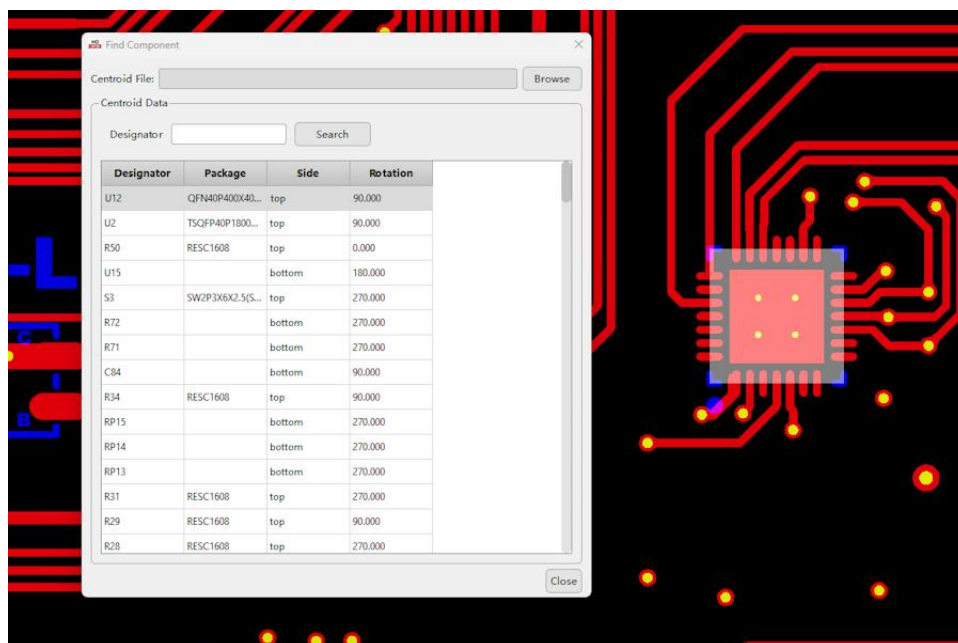


Figure 5-9: Find Component interface

5.8. Panelization Tool

- 5.8.1. The panelization tool can be used to create panelized Gerber data with v-cuts, tabs, stamp holes, fiducial marks and breakaway rails quickly.
- Ensure the profile has been created and in the panelization tool window, select the layer that contains the profile under the Basic Info section.
 - The Panel Outline field is the name of the output file that will be generated. The default value is 'set' and can be changed by editing this field.
 - Choose the Panelization Type. You can choose from Regular, Rotate and Flip types.
 - Enter the number of board copies in the x and y directions and the preview on the right will update.
 - Enter the width in mm of any gaps between adjacent boards. By default these gaps will be hollow - check the connect outline box to place a filler piece in the gaps.
 - Select from preset breakaway rail configurations such as Left & Right, Top & Bottom, Four sides or custom values. Each width can be set individually or together by first changing the Width field then selecting the preset configuration.
 - The sizes of Fiducial Marks and tooling holes can be modified by changing the diameter value.

h) Click apply and the panel data will be generated in the workspace and panel dimensions will be updated.

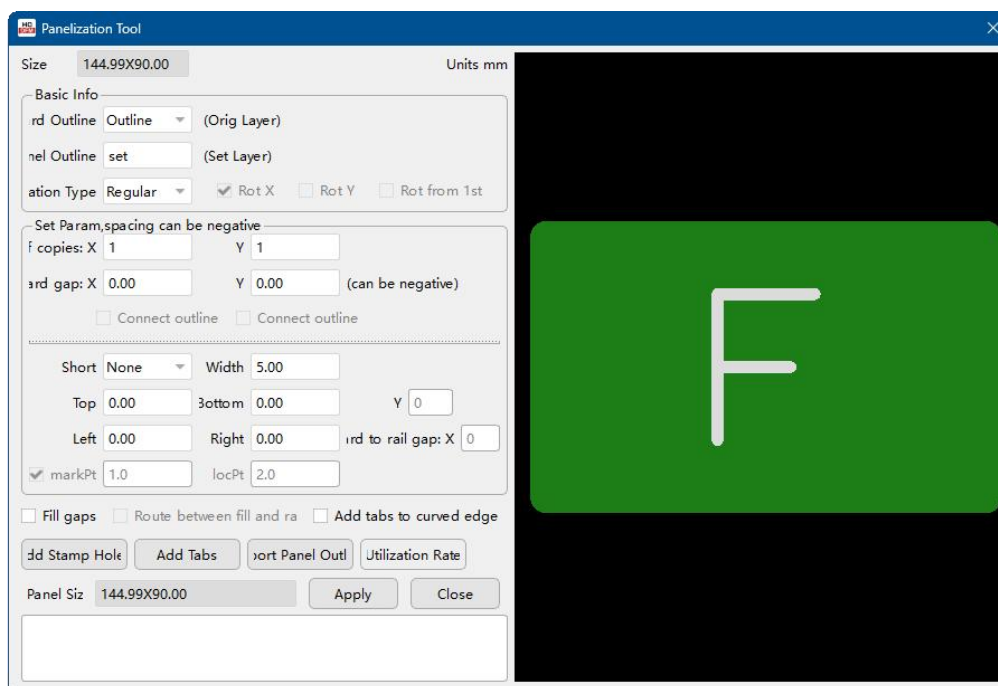


Figure 5-10: Panelization Tool interface

5.8.2. Panelization Tips

Rotate Panelization: Rotate panelization can be used to utilize panel space more efficiently for boards of a certain shape i.e. 'L' shaped boards. Select the Rotate panelization mode and for the X or Y spacing then enter a negative value to move the boards closer together. Rotate panelization can also be used to move sides with overhanging components to the outer edges of the panel to prevent them from interfering with assembly.

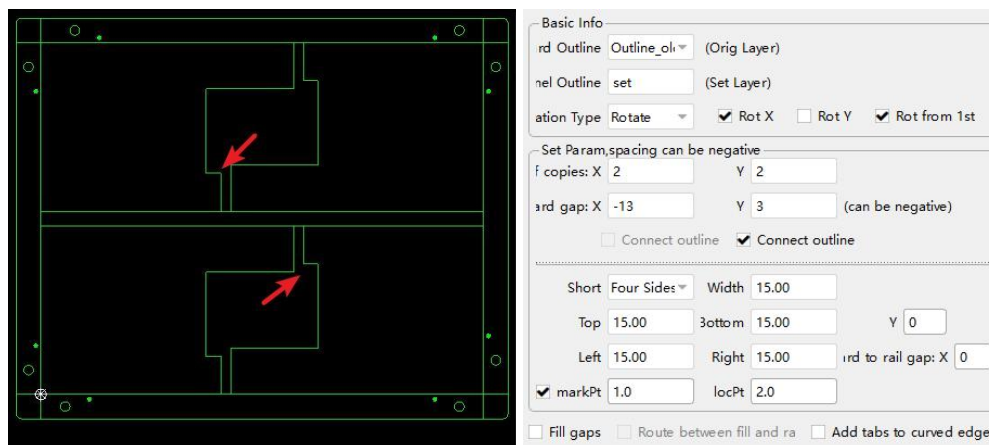


Figure 5-11: Setting up Rotate panelization for interlocking boards

Add Stamp Holes: Use the stamp hole tool to add tabs between boards lined with stamp holes. The number of holes, spacing and size can all be modified. Move the mouse to the spacing between boards. The outline of a tab with stamp holes will appear if tabs can be added in the area. Click to add the tab.

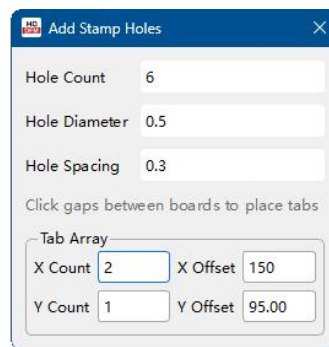


Figure 5-12: Add stamp holes tool interface

5.9. Routing Distance Calculator

- 5.9.1. Select the outline and drill layer and the calculator will automatically select the appropriate routing tool size based on the width of the slots. To calculate the routing distance, first click the Analyze button to create the data layer which identifies breakaway rails from boards area. Click Generate to create the rou layer which contains route paths.

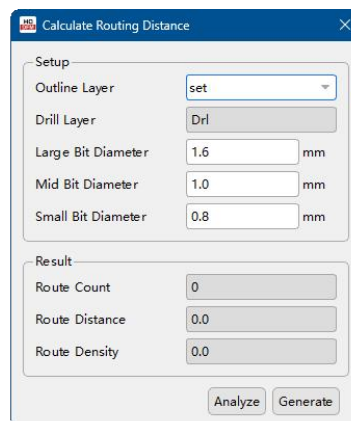


Figure 5-13: Calculate Routing Distance tool interface

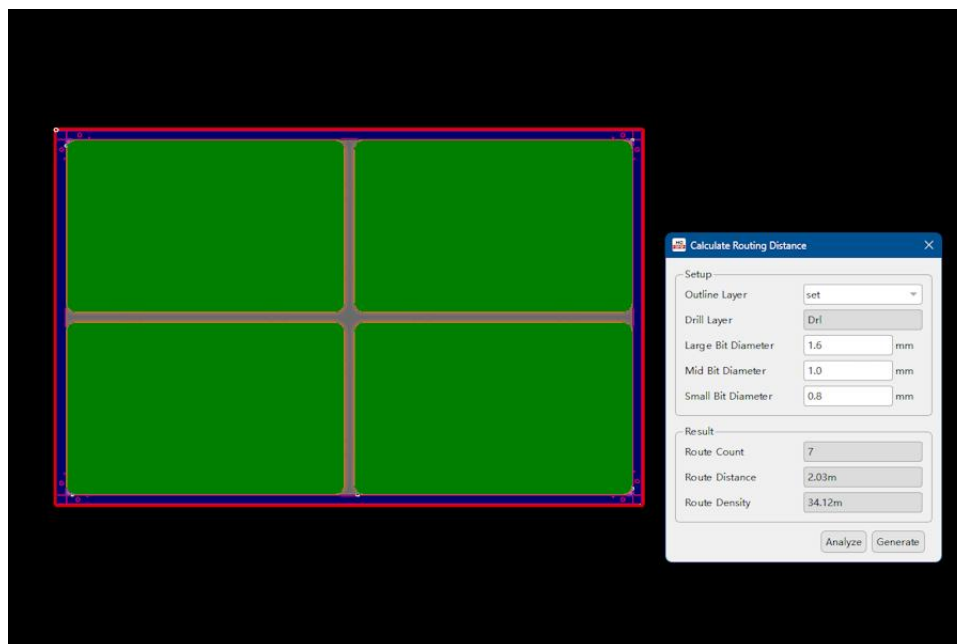


Figure 5-14: Routing and data layers

5.10. Utilization Rate Calculator

5.10.1. PCB raw substrate comes in fixed sizes from the manufacture. Before production, these panels need to be cut into smaller production panels for easier handling and the size of these panels is designed to maximize utilization rate and minimize waste.

PCB designers can use the utilization rate calculator to optimize the dimensions of their boards or panel for larger batch runs where waste can quickly accumulate.

Use the Utilization Rate calculator to calculate the utilization rate and the number of boards that can fit on raw panels of various sizes. The calculator will also suggest cut panel sizes and layouts. The greater the utilization rate, the less board material that goes to waste.

Utilization rate is defined as:

$$\frac{\text{Board area} \times \text{no. of boards per standard panel}}{\text{Raw panel area}}$$

Ensure the board's dimensions have been defined or enter them on the calculator. Enter the number and size of test coupons if required. Maximum and minimum panel sizes can be modified as well. Calculations for multiple raw manufacturing panel sizes can be performed simultaneously by selecting the check boxes. Then click calculate to view the results.

The table shows the utilization rates for each configuration. Click a row to bring up the diagrams of the panels on the bottom. The cut panel design is displayed on the left and the raw panel is displayed on the right. Note that the boards in the cut panel will be fully routed out. If your design is to be produced as a panel, the dimensions of the panel should be entered in the calculator.

Click the FPC tab for the flexible PCB boards (FPC) calculator. The process is the same, however flex PCB substrate material typically produced in reels of a fixed width, therefore the width is limited but the length has greater freedom.

The effect on utilization rate is more apparent as board sizes get larger, which is more likely as boards are panelized.

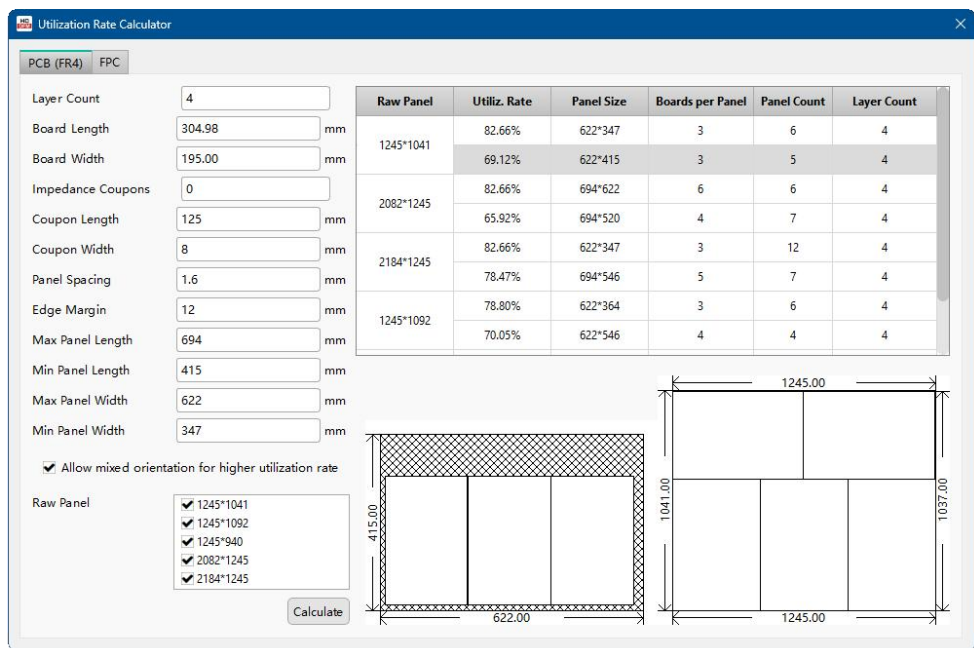


Figure 5-15: Utilization Rate Calculator

When the board is greater than half the width and length of the production panel, the panel can only accommodate one board, resulting in very high wastage which may incur additional costs. This can be reduced by designing a more rectangular board that is much longer than it is wide.